 


18.

INFORMATIONS SERVICE SERVICE INFORMATION SERVICE INFORMATIONEN SERVICE INFORMATION INFORMACIONES SERVICIO INFORMACIONI SERVICIO SERVICE INFORMASJONER SERVICE INFORMATIE SERVICE INFORMATION INFORMAÇAO SERVIÇO 4E

MAY 1985 ENGLISH EDITION

1984-85 GRAND WAGONEER AND TRUCK



ELECTRICAL

Attention: Workshop


WORKSHOP MANUAL UPDATE AND REVISIONS

Fuse Panel

The fuse panel illustration on page C-158 of the M.R. 253 and in the 1984-85 Grand Wagoneer and Truck owner manual is incorrect. The correct illustration is shown below. Refer to the corrected illustration when performing electrical diagnosis on a 1984-85 model.

Filing Instructions

- Record this I.S. Note on page C-158.
- File it in the M.R. 253 binder.

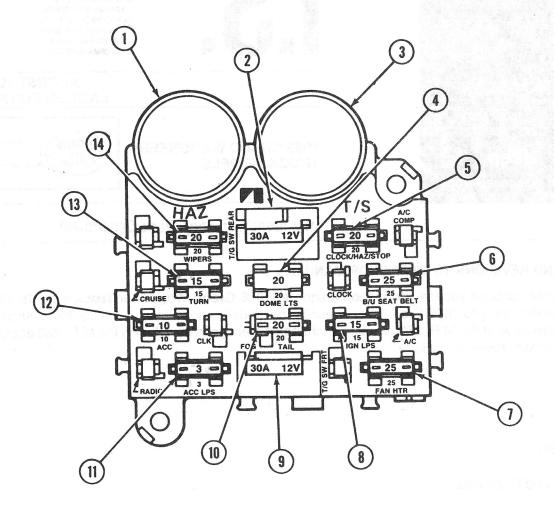

- 1. HAZARD (EMERGENCY) WARNING FLASHER
- 2. 30 AMP CIRCUIT BREAKER (BATTERY)
 - TAILGATE WINDOW REAR SWITCH
 - POWER DOOR LOCKS
 - POWER SEATS
- 3. TURN SIGNAL FLASHER
- 4. 20 AMP FUSE (BATTERY)
 - DOME LAMPS
 - **COURTESY LAMPS**
 - UNDERHOOD LAMP
 - HORN RELAY
- 5. 20 AMP FUSE (BATTERY)
 - HAZARD LAMPS
 - GLOVE BOX LIGHT
 - CHIME FEED
 - STOP LAMPS
- 6. 25 AMP FUSE (IGNITION)
 - BACKUP LAMPS
 - CARBURETOR SOLENOID
 - CARBURETOR BOWL VENT SOLENOID
 - SEAT BELT TIMER
 - CIGARETTE LIGHTER
 - HEADLAMP BUZZER
 - INTAKE MANIFOLD HEATER RELAY (COIL)
 - ELECTRIC CHOKE
- 7. 25 AMP FUSE (IGNITION)
 - BLOWER MOTOR FAN

- 8. 15 AMP FUSE (IGNITION)
 - FOUR WHEEL DRIVE LAMP
 - INSTRUMENT CLUSTER FEED
 - REAR WINDOW DEFOGGER
- 9. 30 AMP CIRCUIT BREAKER (IGNITION)
 - TAILGATE WINDOW FRONT SWITCH
 - A/C
 - POWER WINDOWS
- 10. 20 AMP FUSE (BATTERY)
 - PARK/TAIL LAMPS
 - FOG LAMPS
- 11. 3 AMP FUSE (HEADLAMP SW/BATTERY)
 - HEADLAMP SWITCH RHEOSTAT (DIMMER) FOR ACCESSORY DISPLAY LAMPS
 - CLOCK (DIMMER)
- 12. 10 AMP FUSE (IGNITION)
 - CLOCK
 - CRUISE COMMAND (PLUS 4 AMP FUSE)
 - RADIO
- 13. 15 AMP FUSE (IGNITION)
 - TURN SIGNAL LAMPS
- 14. 20 AMP FUSE (IGNITION)

 - WIPERS
 WASHER PUMP