

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
- A -			
ABSORBER, Bumper Rail Energy.....	12.310-1	BAFFLE, Front Axle Pinion Bearing Oil....	9.364-4
ADAPTOR KIT.....	4.051-1	BAFFLE, Stop And Backup Light.....	3.306-3
ACTUATOR, Hydramatic Transmission Parking Brake.....	6.551-1	BAFFLE ASSEMBLY, Reduction Unit.....	18.600-5
ACTUATOR, Ignition Switch.....	3.131-1	BALL, Fourspeed Transmission Shift Rail End Plunger Poppet.....	6.020-6
ACTUATOR, Steering Wheel.....	10.830-1	BALL, Fourspeed Transmission Synchro- nizer Low And Second Poppet Spring....	6.100-8
ADAPTER, Backup Lamp Switch.....	3.319-4	BALL, Hydramatic Transmission Control Valve Body Case Pad.....	6.660-3
ADAPTER, Bracket And Shield Front Wheel Disc.....	8.845-1	BALL, Instrument Panel Ash Receiver.....	22.092-1a
ADAPTER, Bracket To Support.....	8.224-3	BALL, Poppet.....	18.565-6
ADAPTER, Carburetor Air Intake.....	20.115-2	BALL, Reduction Unit Shift Rail Poppet....	18.620-6
ADAPTER, Clutch Housing To Transmission	5.052-1	BALL, Throwout Lever.....	5.130-3
ADAPTER, Duct To Air Cleaner.....	4.092-2	BALL, Transfer Case Shift Rod Poppet....	18.100-6
ADAPTER, Gasoline Tank Air Vent Hose...	4.141-24	BALL JOINT, Adjusting Link.....	5.160-3
ADAPTER, Instrument Panel Bracket To Steering.....	10.339-1a	BALL KIT, Power Steering Gear-Piston....	10.572-1
ADAPTER, Modulator.....	4.005-1b	BAND, Hydramatic Transmission Direct Clutch Brake.....	6.562-2
ADAPTER, Power Head - Power Unit On Bracket.....	8.410-1	BAND, Hydramatic Transmission Rear Bracket.....	6.592-2
ADAPTER, Power Head Unit.....	8.415-2	BAR, Front Bumper Inner Back.....	12.175-1
ADAPTER, Pull Back Spring Anchor.....	4.080-5	BAR, Front Bumper Outer Back.....	12.175-3
ADAPTER, Spare Wheel.....	14.205-1	BAR, Front Door Division.....	23.125-1
ADAPTER, Transfer Case And Transmission Mount.....	18.193-1	BAR, Spare Wheel Mounting.....	14.150-1
ADAPTER, Transmission Rear Bearing.....	6.052-2	BASE, Domelamp.....	3.346-1
ADJUSTER, Clutch Wear.....	5.187-3	BASE, Electric Tailgate Window Regulator..	23.306-2
ADJUSTER, Steering Gear Worm Ball Bearing	10.326-1	BASE, Front Fender Side Lamp.....	3.720-3
ADJUSTER ASSEMBLY, Power Steering Gear Upper Thrust Bearing.....	10.635-1	BASE, Jack.....	14.140-1
ADJUSTER KIT, Brake Automatic.....	8.013-1	BASE, Pick-Up Box Cargo Lamp.....	3.671-1
ANMETER.....	3.600-1	BASE, Rear Cargo Lamp.....	3.670-1
ANCHOR, Clutch Throwout Lever Spring....	5.132-2	BASE, Rear Side Marker.....	3.741-1
ANCHOR, Spare Tire Hold Down.....	14.160-2	BASE, Tailgate Latch Release Handle.....	31.126-5
ANTENNA, Radio Front Fender.....	15.030-1	BASE ASSEMBLY, Strobe Warning Lamp....	15.516-1
ANTISQUEAK, Gasoline Tank.....	4.130-3	BEARING, Brake Pedal.....	8.140-2
ANTISQUEAK, Gasoline Tank Strap.....	4.152-7	BEARING, Clutch Pedal.....	5.135-4
ANTISQUEAK, Instrument Panel To Cowl Panel.....	22.056-12	BEARING, Connecting Rod.....	1.138-1
ANTISQUEAK, Spare Wheel Support.....	14.202-1	BEARING, Differential Needle.....	18.545-2
ARM, Fourspeed Transmission Reverse Shifting.....	6.085-1	BEARING, Drive Sprocket Front.....	18.520-7
ARM, Front Bumper Back Bar Side.....	12.175-5	BEARING, Drive Sprocket Rear.....	18.520-13
ARM, Rear Bumper Back Bar.....	12.178-1	BEARING, Front Axle Differential Side....	9.341-1
ARM, Steering Linkage Pitman.....	10.104-1	BEARING, Front Axle Pinion (Inner Front) ..	9.352-1
ARM, Tailgate Support.....	23.006-12	BEARING, Front Axle Pinion (Outer Rear) ..	9.352-2
ARM, Valve Rocker.....	1.097-1	BEARING, Front Axle Pinion Kit (Inner- Pinion).....	9.355-3
ARM, Ventilating Windshield Adjusting....	25.012-1	BEARING, Front Axle Pinion Kit (Outer- Pinion).....	9.355-4
ARM, Windshield Wiper.....	22.044-1	BEARING, Front Wheel.....	8.292-1
ARM AND BRACKET, Outside Rear View Mirror Mounting.....	15.270-6	BEARING, Gear Shift Cross Shaft Bracket...	7.075-3
ARM ASSEMBLY, Liftgate Prop.....	28.600-1	BEARING, Gear Shift Upper Lever Housing..	7.020-10
ARM ASSEMBLY, Tailgate Support.....	31.134-1	BEARING, Hydramatic Transmission Case ..	6.503-4
ARMREST, Door.....	29.075-1	BEARING, Main.....	1.023-1
ARMREST, Rear Quarter Side.....	29.056-1	BEARING, Needle.....	18.615-7
ARMREST ASSEMBLY, Front Seat Center...	29.140-1	BEARING, Output Shaft Annular.....	18.540-9
ASH RECEIVER ASSEMBLY, Front Seat Back.....	29.110-1	BEARING, Power Steering Gear Pitman Shaft Needle.....	10.595-1
AXLE, Locking Differential Rear.....	9.001-2	BEARING, Power Steering Gear Upper Thrust Bearing Adjuster Needle.....	10.640-1
AXLE ASSEMBLY, Differential Rear.....	9.001-1	BEARING, Rear Axle Differential Side.....	9.041-1
AXLE ASSEMBLY, Front.....	9.301-1	BEARING, Rear Axle Pinion (Front).....	9.052-1
		BEARING, Rear Axle Pinion (Rear).....	9.052-2

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>B - Cont.</b>		<b>B - Cont.</b>	
BEARING, Rear Wheel .....	8.300-1	BELT ASSEMBLY, Shoulder .....	27.292-1
BEARING, Reduction Unit Mainshaft Rear...	18.615-21	BEZEL, Clock .....	3.361-2
BEARING, Steering Gear Jacket Tube Upper...	10.344-1	BEZEL, Door Speaker Grille .....	15.320-17
BEARING, Steering Gear Lower Shaft To Steering Gear Coupling.....	10.745	BEZEL, Electric Window Regulator Switch On Instrument Panel.....	23.330-7
BEARING, Steering Gear Shaft Lower (Ball)	10.765	BEZEL, Front Park And Directional.....	3.292-10
BEARING, Steering Gear Shaft Lower (Roller)	10.827-2	BEZEL, Hazard Warning Switch.....	3.690-3
BEARING, Steering Gear Shaft Upper.....	10.827-1	BEZEL, Heated Rear Window Switch .....	3.770-2
BEARING, Steering Gear Upper Shaft To Lower Shaft Coupling.....	10.722-1	BEZEL, Heater And Defroster Switch.....	13.078-1b
BEARING, Steering Gear Worm.....	10.322-1	BEZEL, Hood Center.....	12.001-7
BEARING, Transfer Case Intermediate Gear Shaft Needle.....	18.050-3	BEZEL, Horn Blowing.....	3.401-2
BEARING, Transfer Case Shift Lever Control Case Shift Rod.....	18.150-2	BEZEL, Ignition Switch.....	3.130-3
BEARING, Transmission Front Ball.....	6.040-1	BEZEL, Instrument Cluster.....	3.510-1
BEARING, Transmission Rear Ball.....	6.052-1	BEZEL, Lighting Switch.....	3.145-3
BEARING AND RACES KIT .....	6.518-5	BEZEL, Pick-Up Box Cargo Lamp .....	3.671-6
BEARING ASSEMBLY, Steering Spindle....	10.004-13	BEZEL, Radio Trim.....	15.320-8
BEARING KIT, Power Steering Gear Lower Thrust.....	10.565-1	BEZEL, Steering Gear Jacket Tube To Instrument Panel.....	10.338-3
BEARING KIT, Power Steering Gear Upper Thrust.....	10.630-1	BEZEL, Steering Wheel Cover.....	10.280-7
BEARING KIT, Rear Axle Differential .....	9.044-1	BEZEL, Windshield Wiper Control.....	22.038-4
BEARING KIT, Rear Axle Pinion Inner .....	9.055-3	BLADE, Windshield Wiper.....	22.043-1
BEARING KIT, Rear Axle Pinion Outer .....	9.055-4	BLADES, Fan.....	2.002-1
BEARING SET, Camshaft.....	1.041-1	BLOCK, Fuse .....	3.155-2
BELLCRANK, Accelerator Pedal Rod.....	4.050-1	BLOCK, Junction.....	3.213-1
BELLCRANK, Clutch Release Idler .....	5.168-1	BLOCK, Rear Axle Differential Pinion Shaft Thrust .....	9.039-1
BELLCRANK, Column Gear Shift .....	7.110-1	BLOCK, Tailgate Electric Operated Window Regulator Harness Junction .....	23.325-5
BELLCRANK, Power Brake Unit Operating..	8.430-1	BLOCK ASSEMBLY, Engine Cylinder.....	1.020-1
BELLCRANK, Tailgate Latch Actuating....	31.129-1	BODY, Headlamp .....	3.248-2
BELLCRANK, Upper Clutch Release .....	5.168-2	BODY, Hydramatic Transmission Oil Pump..	6.535-1
BELLCRANK AND LINK, Rear Door Remote Control To Locking Knob.....	23.057-1	BODY, Power Steering Pump .....	10.430-4
BELLOWS, Automatic Speed Control Vacuum Servo .....	4.380-1	BODY, Windshield Wiper Pivot Shaft.....	22.047-1
BELT, Air Conditioning .....	13.425-1	BOLT, Alternator Pivot Mounting .....	3.018-6
BELT, .....	13.425-2	BOLT, Brake Master Cylinder Piston Stop...	8.050-1
Air Conditioning .....	Thru	BOLT, Clutch Cover To Flywheel.....	5.050-1
Compressor.....	13.425-5	BOLT, Cylinder Head To Block.....	1.063-1
BELT, Alternator And Radiator Fan.....	3.008-1	BOLT, Housing Retainer - Disc Caliper Brake .....	8.810-4
BELT, Alternator Drive.....	3.008-2	BOLT, Hub To Brake Drum (Front Axle Set) .	8.247-1
BELT, Crankshaft To Air Pump To Compressor.....	4.620-1	BOLT, Hub To Brake Drum (Rear Axle Set)..	8.247-2
BELT, Crankshaft To Exhaust Emission Air Pump.....	4.612-1	BOLT, Pivot To Cylinder Head.....	1.101-2
BELT, Front Seat.....	27.290-1	BOLT, Power Brake Master Cylinder Stop ...	8.515-2
BELT, Front Seat Center (Buckle End) .....	27.290-4b	BOLT, Steering Column Locking.....	10.337-2
BELT, Front Seat Center (Connector End) ...	27.290-4	BOLT, Steering Knuckle To Spindle.....	10.004-6
BELT, Front Seat Outer (Buckle End) .....	27.290-4a	BOLT, Turning Radius Stop.....	10.010-1
BELT, Front Seat Outer (Connector End)....	27.290-3	BOOT, Brake Master Cylinder .....	8.052-1
BELT, Power Steering Pump To Exhaust Emission Air Pump.....	4.615-1	BOOT, Clutch Cable .....	5.161-5
BELT, Radiator Fan And Alternator.....	2.016-1	BOOT, Clutch Pedal Rod Seal .....	5.160-6
BELT, Rear Seat.....	27.290-9	BOOT, Clutch Pivot Inner.....	5.168-15
BELT, Rear Seat Center (Buckle End) .....	27.290-9c	BOOT, Clutch Pivot Outer .....	5.168-14
BELT, Rear Seat Center (Connector End) ...	27.290-9d	BOOT, Clutch Throwout Lever.....	5.125-1
BELT, Rear Seat Outer (Buckle End) .....	27.290-9a	BOOT, Floor Gear Shift Lever .....	7.013-2
BELT, Rear Seat Outer (Connector End) ....	27.290-9b	BOOT, Headlamp Dimmer Switch Cover .....	3.158-4
		BOOT, Reduction Unit Cable .....	18.650-1a
		BOOT, Seat Belt.....	27.290-8
		BOOT, Shoulder Belt .....	27.292-5
		BOW, Cap Roof Support.....	28.714-1
		BOX, Battery Tray .....	3.082-1
		BOX, Glove .....	22.058-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>B - Cont.</b>		<b>B - Cont.</b>	
BOX, Trailer Towing Relay And Circuit Breaker.....	3.780-10	BRACKET, Clutch Control Cable .....	5.165-1
BRACE, Air Conditioning Compressor To Intake Manifold Support .....	13.410-10	BRACKET, Clutch Pedal Retainer .....	5.136-1
BRACE, Body Side Lower Front Panel.....	31.065-2	BRACKET, Clutch Slave Cylinder.....	5.221-2
BRACE, Clutch Cable Bracket To Transfer Case .....	5.165-8	BRACKET, Clutch Throwout Lever Return Spring .....	5.190-2
BRACE, Draw Bar .....	11.068-4	BRACKET, Cowl Side Front Outer Splash Apron.....	20.155-4
BRACE, Draw Bar Upper.....	11.066-14	BRACKET, Dash Panel Rod Mounting.....	20.130-4
BRACE, Exhaust Emission Air Pump Reinforcement .....	4.525-1	BRACKET, Directional Signal Flasher Holder.....	3.330-2
BRACE, Exhaust Emission Air Pump Support .....	4.515-1	BRACKET, Directional Signal Switch Mounting .....	3.321-4
BRACE, Exhaust Pipe.....	4.195-1	BRACKET, Distributor Vacuum Control Solenoid .....	3.051-7
BRACE, Fender.....	31.065-1	BRACKET, Division Bar To Inner Door.....	23.125-1b
BRACE, Front Fender Stone Shield Extension .....	12.076-3	BRACKET, Energy Absorber Body Mounting.....	12.320-1
BRACE, Heater Control Housing To Panel.....	13.017-2a	BRACKET, Energy Absorber To Bumper Rail Mounting.....	12.315-1
BRACE, Rear Bumper Back Bar.....	12.178-3	BRACKET, Engine Front Support Mounting..	1.004-3
BRACE, Rear Crossmember .....	11.066-11	BRACKET, Exhaust Emission Air Pump Mounting.....	4.520-1
BRACKET, Accelerator Control Cable.....	4.057-6	BRACKET, Exhaust Gas Recirculating Back Pressure Sensor.....	4.700-5
BRACKET, Accelerator Pedal Rod Bellcrank .....	4.050-3	BRACKET, Exhaust Pipe Support.....	4.195-1a
BRACKET, Air Conditioning Blower Motor To Housing Mounting .....	13.072-5	BRACKET, Fender To Dash .....	12.076-1
BRACKET, Air Conditioning Compressor Mounting.....	13.410-1	BRACKET, Flasher Mounting.....	3.690-6
BRACKET, Air Conditioning Drive Belt Back Idler Pulley .....	13.435-3	BRACKET, Foot Operated Parking Brake Stabilizer .....	8.180-13
BRACKET, Air Conditioning Intermediate Pulley Mounting.....	13.430-3	BRACKET, Front Axle Bumper Frame .....	9.304-3
BRACKET, Air Conditioning Intermediate Pulley Upper Adjusting .....	13.430-7	BRACKET, Front Brake Hose .....	8.116-4
BRACKET, Air Deflector Vent Control To Panel.....	22.020-10	BRACKET, Front Door Division Bar To Door Panel.....	23.125-2
BRACKET, Alternator .....	3.018-1	BRACKET, Front Door Glass Stop .....	25.054-1
BRACKET, Alternator Belt Tension Adjusting .....	3.018-4	BRACKET, Front Door Restraint Pin.....	23.015-5
BRACKET, Ammeter.....	3.600-4	BRACKET, Front Door Speaker Mounting.....	15.320-13a
BRACKET, Ash Receiver To Instrument Panel.....	22.092-2	BRACKET, Front Energy Absorber To Support.....	12.322-1
BRACKET, Automatic Speed Control Vacuum Servo Bellows Mounting .....	4.385-1	BRACKET, Front Engine Mounting Support..	1.004-1
BRACKET, Auxiliary Gasoline Tank Hold Down .....	4.131-16	BRACKET, Front License Plate .....	14.098-1
BRACKET, Battery Hold Down.....	3.084-1	BRACKET, Front Shock To Frame .....	11.201-1
BRACKET, Bellcrank Retaining .....	5.168-3	BRACKET, Front Spring Bumper .....	11.070-5
BRACKET, Bezel Support.....	12.001-10	BRACKET, Front Suspension Sway Stabilizer Connecting Link To Spring Tie Plate .....	10.260-8
BRACKET, Body Hold Down .....	11.054-1	BRACKET, Front Suspension Sway Stabilizer To Frame.....	10.260-3
BRACKET, Brake Line Hose Support.....	8.116-5	BRACKET, Fuel Line To Frame.....	4.160-7
BRACKET, Carburetor Choke Heater Tube To Clean Air Tube .....	4.020-10	BRACKET, Fuel Vapor Storage Canister....	4.144-2
BRACKET, Carburetor Lever To Accelerator Cable.....	4.070-5	BRACKET, Gasoline Tank Mounting.....	4.152-4
BRACKET, Carburetor Pull Back Spring....	4.080-2	BRACKET, Gasoline Tank Strap Support....	4.152-3
BRACKET, Choke And Air Deflector Cable..	22.056-13	BRACKET, Gear Selector Dial Lamp .....	7.535-1
BRACKET, Char Lighter .....	3.352-7	BRACKET, Gear Shift Cross Shaft .....	7.075-1
BRACKET, Clutch Cable Anchor.....	5.165-3	BRACKET, Generator Assembly.....	3.014-4
		BRACKET, Glass Stop .....	23.040-4
		BRACKET, Heated Rear Window Indicator Lamp .....	3.770-5

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>B - Cont.</b>		<b>B - Cont.</b>	
BRACKET, Heater Hose To Fender .....	13.050-8	BRACKET, Spare Wheel Support To Body ...	14.200-1
BRACKET, Hood Catch.....	12.060-17	BRACKET, Spare Wheel Support To Bracket.	14.201-1
BRACKET, Hood Prop Catch .....	12.008-5	BRACKET, Spring Pivot .....	11.008-1
BRACKET, Hood Prop Retainer.....	12.008-3	BRACKET, Spring Shackle .....	11.005-1
BRACKET, Hood Prop Rod Support.....	12.008-8	BRACKET, Stabilizer Brake Pedal Retainer .	8.164-4
BRACKET, Hydramatic Transmission		BRACKET, Steering Gear .....	10.290-3
Oil Cooler Lines Support .....	6.631-6	BRACKET, Steering Damper To Leaf Spring.	10.260-15
BRACKET, Hydramatic Transmission		BRACKET, Steering Damper To Tie Rod....	10.260-16
Parking Brake .....	6.552-6	BRACKET, Steering Gear Jacket Tube To	
BRACKET, Ignition Coil.....	3.060-1	Instrument Panel.....	10.339-1
BRACKET, Ignition Wire Separation .....	3.230-2	BRACKET, Steering Gear Jacket Tube To	
BRACKET, Injection Manifold Hose Clip....	4.621-2	Instrument Panel Seat.....	10.339-6
BRACKET, License Lamp.....	3.336-1	BRACKET, Sun Visor Retaining.....	29.003-4
BRACKET, License Plate Holder .....	3.336-3	BRACKET, Support Clutch Release Idler	
BRACKET, Liftgate Support Arm.....	28.600-3	Pivot Outer .....	5.168-6
BRACKET, Liquid Check Valve .....	20.275-1	BRACKET, Tachometer.....	3.700-2
BRACKET, Longitudinal Seat Front		BRACKET, Tail And Backup Lamp.....	31.006-1
Stabilizer .....	29.201-5	BRACKET, Tailgate Pillar Lower Filler	
BRACKET, Longitudinal Seat Rear Stabilizer	29.201-7	Extension.....	20.315-9
BRACKET, Muffler To Frame .....	4.200-2	BRACKET, Tailgate Support Arm To	
BRACKET, Power Steering Pump Mounting ..	10.448-1	Pick-Up Box.....	31.134-4
BRACKET, Oil Filler Tube Support .....	6.510-4	BRACKET, Tailgate Support Arm To	
BRACKET, Oil Level Indicator.....	1.187-3	Tailgate .....	31.134-2
BRACKET, Oil Pressure Gauge.....	3.605-2b	BRACKET, Tailgate Support Cable.....	23.037-1
BRACKET, Parking Brake Cable Guide.....	8.224-1	BRACKET, Tail Pipe Support .....	4.234-1
BRACKET, Parking Brake Cable Pivot		BRACKET, Tail-Stop And Directional Lamp.	3.300-3
Anchor.....	8.224-5	BRACKET, Tail-Stop-Directional And	
BRACKET, Parking Brake Warning Lamp		Backup Lamp .....	3.300-2
Switch .....	3.650-3	BRACKET, Trailer Harness Receptacle....	3.780-4
BRACKET, Pintle Hook .....	11.066-7	BRACKET, Transfer Case And Transmission	
BRACKET, Power Steering Pump Pivot.....	10.431-1	Mounting .....	18.215-1
BRACKET, Power Steering Support.....	13.430-10	BRACKET, Transfer Case And Transmission	
BRACKET, Radio Mounting.....	15.320-10	Support Plate Insulator.....	18.196-1
BRACKET, Radio Speaker Balance Control ..	15.320-12a	BRACKET, Transfer Case Insulator Support.	18.190-1
BRACKET, Rear Brake Tube Tee At Axle		BRACKET, Transfer Case Support .....	18.189-1
Differential Cover.....	8.112-1	BRACKET, Transfer Case Torque Reaction	18.200-1
BRACKET, Rear Compartment .....	15.320-14a	BRACKET, Transfer Case Torque Reaction	
BRACKET, Rear Crossmember Angle		Insulator Stud.....	18.200-7
Stabilizer .....	31.005-5	BRACKET, Transmission Kickdown Switch..	6.665-2
BRACKET, Rear Door Division Bar To		BRACKET, Ventilating Windshield Arm	
Door Panel.....	23.165-2	Mounting (On Frame).....	25.013-1
BRACKET, Rear Door Glass Stop.....	25.054-4	BRACKET, Ventilating Windshield Arm	
BRACKET, Rear License Plate.....	14.098-3	Mounting (On Windshield).....	25.014-1
BRACKET, Rear License Plate Spring		BRACKET, Voltmeter .....	3.600-8
Retaining .....	14.098-10	BRACKET, Windshield Wiper Motor Mounting	22.027-3
BRACKET, Rear Seat Cushion Pan Hinge		BREAKER, Tailgate Electric Operated	
Pivot .....	29.181-4	Window Regulator Harness Circuit.....	23.325-1
BRACKET, Rear Shock Mounting.....	11.224-1	BREAKER, Trailer Towing Harness Circuit .	3.780-6
BRACKET, Rear Spring Hanger Pivot.....	11.107-1	BREAKER, Windshield Wiper Motor Circuit ..	22.036-3
BRACKET, Reduction Unit Control Cable		BREATHING, Front Axle .....	9.301-2
Clamp .....	18.630-5	BREATHING, Rear Axle.....	9.001-3
BRACKET, Release Rod.....	29.105-17	BREATHING, Transfer Case.....	18.010-2
BRACKET, Seat Back Frame Extension.....	29.201-3	BREATHING, Transmission Case.....	6.005-3
BRACKET, Skid Plate.....	4.131-6	BREATHING ASSEMBLY .....	18.560-4
BRACKET, Skid Plate To Front Gasoline		BRUSH, Horn Contact.....	3.400-8
Tank .....	4.131-4		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>B - Cont.</b>		<b>B - Cont.</b>	
BULB .....	3.215-1	BUSHING, Clutch Rod Retainer To Floor....	5.160-9
BULB, Ammeter .....	3.600-6	BUSHING, Column Gear Shift Upper Lever...	7.020-11
BULB, Ash Receiver Lamp.....	22.092-7	BUSHING, Crankshaft Pilot .....	1.043-1
BULB, Backup Lamp .....	3.317-4	BUSHING, Defroster Nozzle Outlet.....	13.118-4
BULB, Brake Pressure Warning Lamp .....	3.651-3	BUSHING, Front And Rear Shock Absorber Mounting .....	11.202-1
BULB, Clock .....	3.369-1	BUSHING, Front Door Locking Rod.....	23.055-2
BULB, Courtesy Lamp.....	3.349-5	BUSHING, Front Spring .....	11.144-1
BULB, Domelamp.....	3.346-10	BUSHING, Hydramatic Transmission Case...	6.503-3
BULB, Front Fender Side Lamp.....	3.720-4	BUSHING, Hydramatic Transmission Center Support .....	6.556-4
BULB, Gear Selector Dial Lamp .....	7.535-8	BUSHING, Hydramatic Transmission Oil Pump Body.....	6.535-3
BULB, Headlamp .....	3.280-1	BUSHING, Hydramatic Transmission Oil Pump Stator Shaft .....	6.535-4
BULB, Heated Rear Window .....	3.770-4a	BUSHING, Hydramatic Transmission Output Shaft .....	6.635-4
BULB, Heater And Defroster Control Lamp..	13.017-13	BUSHING, Hydramatic Transmission Sun Gear Shaft.....	6.518-3
BULB, Heater Control Harness .....	13.017-21	BUSHING, Leaf Spring Shackles .....	11.170-3
BULB, Instrument Cluster Illumination.....	3.531-4	BUSHING, Lock Release Rod Guide .....	29.105-20
BULB, License Plate Lamp.....	3.341-13	BUSHING, Rear Door Hinge .....	23.023-1a
BULB, Parking And Front Directional Signal Lamp.....	3.292-7	BUSHING, Rear Spring.....	11.144-2
BULB, Pick-Up Box Cargo Lamp.....	3.671-14	BUSHING, Reduction Unit Shift Lever .....	18.660-2
BULB, Rear Domelamp .....	3.670-5	BUSHING, Shock Absorber Mounting .....	11.202-1
BULB, Rear Side Marker Lamp.....	3.740-4	BUSHING, Speedometer Driven Gear.....	18.580-5
BULB, Tachometer.....	3.700-5	BUSHING, Steering Gear Cross Shaft .....	10.307-1
BULB, Tail And Stop Lamp .....	3.312-2	BUSHING, Steering Gear Cross Shaft .....	10.307-2
BULB, Tail, Stop And Directional .....	3.312-1	BUSHING, Steering Gear Jacket Tube Lower.	10.346-1
BUMPER, Axle Housing Front Windup Pinion	9.304-3a	BUSHING, Steering Wheel Cover Snap In....	10.280-6
BUMPER, Brake Pedal Stop.....	8.140-6	BUSHING, Steering Wheel To Cover .....	3.401-5
BUMPER, Cowl Ventilator Intake Cover To Dash Panel.....	22.016-4	BUSHING, Threespeed Transmission Mainshaft .....	6.068-5a
BUMPER, Dovetail Receptacle Insert.....	23.006-17b	BUSHING, Threespeed Transmission Reverse Idler Gear .....	6.170-4a
BUMPER, Fold Down Windshield.....	12.009-1	BUSHING, Transfer Case Rear Bearing Cap .	18.080-3
BUMPER, Front Axle.....	9.304-1	BUSHING, Transfer Case Shift Lever.....	18.125-3
BUMPER, Front Door Glass Stop.....	25.054-3	BUSHING, Transfer Case Shifting Lever....	18.180-4
BUMPER, Front Seat Frame .....	29.103-10	BUSHING, Transmission Reverse Idler Gear .	6.170-4a
BUMPER, Front Spring .....	11.070-3	BUSHING, Valve Stem To Wheel .....	8.270-3
BUMPER, Glass Stop Bracket .....	23.040-6	BUSHING AND VALVE, Hydramatic Trans- mission Pressure Regulator Booster....	6.512-1
BUMPER, Glove Box Door .....	22.072-1	BUTTON, Center Horn .....	3.400-1
BUMPER, Grille Panel .....	2.050-13	BUTTON, Door Trim Panel.....	29.070-7
BUMPER, Hood Adjustable.....	12.001-12	BUTTON, Plug.....	27.038-1
BUMPER, Rear Axle .....	9.086-1	BUTTON, Upholstery.....	29.367-1
BUMPER, Rear Axle Housing.....	9.004-1	BUZZER, Seat Belt Warning.....	3.786-1
BUMPER, Rear Cushion Frame To Floor Riser .....	29.181-9		
BUMPER, Rear Door Glass Stop .....	25.054-6	<b>- C -</b>	
BUMPER, Rear License Plate .....	14.108-2	CABLE, Accelerator .....	4.057-1
BUMPER, Rear Seat Adjustable Stop.....	29.181-8	CABLE, Automatic Speed Control Reulator To Transmission .....	3.570-2
BUMPER, Spare Tire .....	14.203-3	CABLE, Battery Ground .....	3.196-1
BUMPER, Stationary Hood.....	12.001-14	CABLE, Battery Ground Jumper To Crossmember .....	3.196-4
BUMPER, Steering Wheel Actuator .....	10.830-2	CABLE, Battery To Starter Relay.....	3.200-2
BUMPER, Steering Wheel Actuator Down....	10.830-5	CABLE, Brake Shoe Automatic Adjusting Link.....	8.010-1
BUMPER, Tailgate.....	23.006-1b		
BUMPER, Tailgate End Panel .....	31.135-2		
BUMPER, Tailgate Latch Release Handle...	31.126-7		
BUMPER, Tailgate Support Arm.....	23.006-15		
BUMPER, Windshield.....	25.015-1		
BUMPER TTE.....	12.168-11		
BUSHING, Bellcrank To Bracket.....	4.050-7		
BUSHING, Clutch Release Idler Pivot Inner .	5.168-16		
BUSHING, Clutch Release Idler Pivot Outer .	5.168-17		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>C - Cont.</b>		<b>C - Cont.</b>	
CABLE, Clutch Release .....	5.161-1	CAP, Water Pump Body Or Heater Hose Nipple.....	2.080-10
CABLE, Equalizer Cable To Rear Wheels...	8.220-1	CAP, Wheel Hub.....	8.274-1
CABLE, Equalizer To Rear Cable.....	8.215-1	CAP, Windshield Washer Reservoir .....	22.052-8
CABLE, Foot Operated Parking Brake Lever To Equalizer .....	8.192-1	CAPACITOR, Radio Interference Suppression	15.320-18
CABLE, Front Fender Side Lamp.....	3.720-5	CARBURETOR .....	4.001-1
CABLE, Heater And Defroster Control (Defroster) .....	13.017-15	CARPET, Front Floor .....	29.294-3
CABLE, Heater And Defroster Control (Heater Damper) .....	13.017-17	CARPET, Front Floor Extension .....	29.294-4
CABLE, Rear Side Marker Lamp.....	3.742-1	CARPET, Rear Auxiliary Floor .....	29.420-2
CABLE, Reduction Unit .....	18.650-1	CARPET, Rear Floor .....	29.302-2
CABLE, Relay To Starting Motor.....	3.200-2a	CARPET, Rear Floor Riser .....	29.202-3
CABLE, Solenoid To Starting Motor.....	3.020-8	CARPET, Rear Floor Sill .....	29.302-3
CABLE, Speedometer Thru .....	3.570-1	CARPET, Tailgate.....	29.465-1
CABLE, Tailgate Support .....	3.570-1b	CARPET, Wheelhouse Trim .....	29.435-1
CABLE, Temperature Control.....	23.036-1	CARRIER, Hydramatic Transmission Reaction Assembly.....	6.590-1
CABLE, Voltmeter .....	13.017-8	CARRIER ASSEMBLY, Hydramatic Transmission Output.....	6.592-1
CALIPER ASSEMBLY, Front Wheel Disc Brake .....	3.600-10	CARRIER KIT, Spare Wheel .....	8.350
CAM, Directional Signal Cancelling.....	8.810-1	CASE, Front Axle Differential .....	9.324-1
CAMSHAFT .....	3.321-14	CASE, Glove Box Lock .....	22.073-2b
CANISTER, Fuel Vapor Storage.....	1.040-1	CASE, Hydramatic Transmission .....	6.503-1
CAP, Air Conditioning Compressor Suction And Discharge Valve Stem.....	4.144-1	CASE, Instrument Cluster.....	3.505-1
CAP, Air Deflector Drain Hose End .....	13.405-3	CASE, Rear Axle Differential (LLD) .....	9.024-1
CAP, Auxiliary Gasoline Tank Filler Tube ..	22.020-3d	CASE, Rear Axle Differential (WLD).....	9.024-2
CAP, Canister Carburetor Bowl Vent .....	4.131-23	CASE, Transfer.....	18.010-1
CAP, Canister Carburetor Bowl Vent .....	4.144-1d	CASE, Transfer Case Shift Lever Control...	18.150-1
CAP, Carburetor Vacuum Nipple .....	4.001-3	CASE, Transmission .....	6.005-1
CAP, Distributor .....	3.032-1	CASE ASSEMBLY, Front Axle Differential ..	9.321-1
CAP, Door Speaker Wire Retainer .....	15.320-11c	CASE ASSEMBLY, Rear Axle Differential (LLD) .....	9.021-1
CAP, Engine Oil Pump Release Valve Spring	1.187-1	CASE ASSEMBLY, Rear Axle Differential (WLD) .....	9.021-2
CAP, Front Body Pillar Drip Moulding.....	20.395-3	CATALYST, Catalytic Converter.....	4.212-5
CAP, Front Fender Radio Antenna Dress ....	15.030-3	CATCH, Hood Assembly .....	12.060-15
CAP, Front Propeller Shaft Sleeve Yoke Dust	9.110-1	CATCH, Windshield Hold Down.....	25.006-1
CAP, Front Wheel Grease Retainer Outer....	8.296-2	"C" CLIP, Equalizer Cable To Rear Cable .	8.215-4
CAP, Gasoline Tank Vent Outlet Tubes.....	4.130-4	CENTER SUPPORT AND RACE KIT, Hydramatic Transmission.....	6.556-1
CAP, Intake Manifold Nipple .....	1.067-21	CHAIN, Automatic Speed Control Bellows To Shaft .....	4.390-1
CAP, Nonlocking Gasoline Tank Filler .....	4.138-1	CHAIN, Drive .....	18.530-1
CAP, Oil Filler.....	1.022-1	CHAIN, Timing.....	1.130-1
CAP, Power Steering Pump Oil Reservoir Filler.....	10.465-2	CHAIN ASSEMBLY, Tailgate.....	23.006-6c
CAP, Radiator Core.....	2.032-1	CHAIN ASSEMBLY, Tailgate.....	31.160-1
CAP, Rear Propeller Shaft Sleeve Yoke Dust	9.110-2	CHANNEL, Front Door Lowering Glass Bottom.....	25.030-1
CAP, Rear Wheel Grease Retainer Outer .....	8.296-3	CHANNEL, Front Door Lowering Glass Slide .....	25.036-1
CAP, Sun Visor End Retaining Rod.....	29.004-2	CHANNEL, Rear Door Division Bar Stationary Glass .....	23.165-1
CAP, Tailgate Upper Outer End.....	23.013-6	CHANNEL, Rear Door Lowering Glass Bottom.....	25.032-1
CAP, Tee Nipple .....	1.117-4	CHANNEL, Rear Door Lowering Glass Slide .....	25.038-1
CAP, Threespeed Transmission Shift Rail...	6.018-4	CHANNEL, Rear Window Glass.....	25.044-1
CAP, Transfer Case Front Output Shaft Rear Bearing.....	18.028-1	CHANNEL, Tailgate Glass Bottom .....	25.033-1
CAP, Transfer Case Output Shaft Bearing...	18.015-1		
CAP, Transfer Case Rear Bearing.....	18.080-1		
CAP, Transmission Control Housing.....	7.013-2b		
CAP, Transmission Front Bearing.....	6.017-1		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>C - Cont.</b>		<b>C - Cont.</b>	
CHANNEL, Tailgate Glass Run.....	25.033-4	CLAMP, Seat Leg.....	29.201-15
CHANNEL, Tailgate Glass Slide Lower.....	25.039-1	CLAMP, Steering Gear Jacket Tube To Toeboard Plate .....	10.350-5
CHANNEL, Windshield Glass.....	25.002-1	CLAMP, Steering Gear Shaft Lower Bearing..	10.768-1
CHECK VALVE KIT, Power Steering Gear Pressure.....	10.524-1	CLAMP, Steering Gear To Lower Shaft Coupling.....	10.742-1
CLAMP, Auxiliary Gasoline Tank Hose .....	4.131-12	CLAMP, Steering Linkage Tie Rod Adjusting Tube .....	10.224-1
CLAMP, Bolt Battery Hold Down.....	3.095-1	CLAMP, Tail Pipe To Hanger.....	4.234-6
CLAMP, Bypass Hose.....	2.080-9	CLAMP, Water Pump Or Heater Hose Nipple.....	2.080-11
CLAMP, Cap To Vent Valve Tee.....	1.117-5	CLAMP, Windshield Hold Down.....	25.005-1
CLAMP, Carburetor Vacuum Nipple Cap.....	4.001-4	CLAMP, Windshield Washer Hose .....	22.053-2
CLAMP, Clutch Pedal Push Rod Boot .....	5.160-6b	CLAMP, Windshield Wiper Motor Wire.....	22.027-11
CLAMP, Conduit.....	18.585-12	CLAMP ASSEMBLY, Exhaust Pipe To Crossover Pipe .....	4.178-4
CLAMP, Crankcase Vent Valve Hose.....	1.117-2	CLAMP ASSEMBLY, Exhaust Pipe To Muffler	4.205-1
CLAMP, Distributor .....	3.039-1	CLAMP ASSEMBLY, Muffler To Tail Pipe Or Insulator.....	4.230-1
CLAMP, Exhaust Emission Air Pump To Backfire Valve Hose.....	4.586-1	CLAMPS, Fuel Line.....	4.160-6
CLAMP, Exhaust Emission Backfire Valve (At Tee Or Manifold).....	4.566-1	CLAMPS, Vapor Canister Hose .....	4.144-17
CLAMP, Exhaust Emission Backfire Valve (At Valve) .....	4.566-2	CLEANER, Carburetor Air .....	4.088-1
CLAMP, Exhaust Emission Backfire Valve To Injection Manifold Hose.....	4.600-2	CLEVIS, Parking Brake Cable Pivot.....	8.215-2
CLAMP, Exhaust Pipe To Bracket.....	4.195-3	CLIP, Alarm Switch Retaining .....	3.140-2
CLAMP, Filler Hose To Filler Neck Flange.	4.141-17a	CLIP, Anchor Accelerator Spring.....	4.050-5
CLAMP, Filler Neck To Flange.....	4.141-2	CLIP, Brake Tube Fastening.....	8.116-3
CLAMP, Fuel Pump In-Line Filter Hose ....	4.110-5	CLIP, Brake Tube Left And Right At Master Cylinder .....	8.106-2
CLAMP, Fuel Vapor Line Connecting.....	4.142-10	CLIP, Brake Tube To Clutch Boot .....	8.106-4
CLAMP, Fuel Vapor Storage Canister To Brackets.....	4.144-6	CLIP, Canister Hose To Air Cleaner Hose ..	4.144-11
CLAMP, Gasoline Filler Neck Tube Connector To Tank.....	4.141-14	CLIP, Clutch Cable To Dash Panel And Engine Mounting Bracket .....	5.161-3
CLAMP, Gasoline Tank Air Vent Hose.....	4.141-21	CLIP, Exhaust Emission Backfire Valve To Injection Manifold Hose.....	4.621-1
CLAMP, Gasoline Tank Filler Neck.....	4.141-4	CLIP, Front Fender Side Marker Cable.....	3.720-6
CLAMP, Gasoline Tank Filler Neck To Tank	4.141-5	CLIP, Fuel Line To Rocker Arm Cover .....	4.176-2
CLAMP, Gasoline Tank Filler Neck Tube To Connector.....	4.141-12	CLIP, Gear Shift Rod Trunnion Retaining ...	7.125-9
CLAMP, Gasoline Tank Vent Outlet Tube Cap .....	4.130-5	CLIP, Heater Hose To Upper Radiator Hose .	13.050-11
CLAMP, Harness To Directional Switch.....	3.321-5	CLIP, Hydramatic Transmission Oil Tube...	6.631-8
CLAMP, Heater Core Drain Hose.....	13.028-5	CLIP, Hydramatic Transmission Vacuum Tube Support .....	6.515-4
CLAMP, Heater Hose.....	13.086-1	CLIP, Oil Filler Tube To Bracket.....	6.510-5
CLAMP, Hydramatic Transmission Oil Cooler Tube At Radiator .....	6.631-9	CLIP, Overflow Hose To Core.....	2.020-4
CLAMP, Hydramatic Transmission Vacuum Hose .....	6.515-3	CLIP, Power Steering Pump Hoses.....	10.470-5
CLAMP, Ignition Coil.....	3.056-4	CLIP, Power Steering Pump Hoses To Frame	10.470-6
CLAMP, Intake Manifold Nipple Cap.....	1.067-22	CLIP, Reduction Unit Cable To Brake Tube .	18.650-7
CLAMP, Power Brake Unit Vacuum Hose ....	8.460-7	CLIP, Return Line To Fuel Line .....	4.110-7
CLAMP, Power Steering Gear Worm Ball Bearing Return Guide.....	10.577-1	CLIP, Shoulder Belt Comfort .....	27.292-6
CLAMP, Power Steering Return Hose To Reservoir .....	10.470-4	CLIP, Shoulder Belt Retaining.....	27.292-3
CLAMP, Radiator Hoses.....	2.039-1	CLIP, Spring Retaining.....	8.220-5
CLAMP, Rear Propeller Shaft Body End Dust Cover .....	9.113-4	CLIP, Steering Gear Jacket Tube Lower Bushing To Jacket Tube .....	10.348
CLAMP, Rear Propeller Shaft Dust Cover ...	9.113-5	CLIP, Tailgate Electric Operated Window Regulator Molded Harness To Body .....	23.320-6
CLAMP, Reduction Unit Control Cable Bracket.....	18.630-7	CLIP, Vacuum Line .....	18.585-5a

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>C - Cont.</b>		<b>C - Cont.</b>	
CLIP, Vacuum Tube.....	3.051-17	CONTROL, Fresh Air Duct.....	22.020-6
CLIP, Vacuum Tube Connecting.....	4.703-2	CONTROL, Front Door Latch Remote.....	23.056-1
CLIP BRAKE TUBE.....	8.101-1	CONTROL, Radio Speaker Balance.....	15.320-12
CLOCK.....	3.360-1	CONTROL, Rear Door Latch Remote.....	23.056-3
CLUSTER ASSEMBLY, Instruments.....	3.500-1	CONTROL, Tailgate Remote.....	23.039-3
CLUTCH, Air Conditioning Compressor Drive.....	13.415-1	CONTROL ASSEMBLY, Heater And Defroster.....	13.017-1
CLUTCH ASSEMBLY, Fourspeed Transmission Synchronizer Low And Second....	6.080-4	CONVERTER, Catalytic.....	4.212-1
CLUTCH ASSEMBLY, Fourspeed Transmission Synchronizer Third And Fourth....	6.080-3	CONVERTER, Hydramatic Transmission....	6.519-1
CLUTCH ASSEMBLY, Threespeed Transmission Synchronizer Low And Reverse....	6.080-2	CORE, Air Conditioning Condenser.....	13.450-1
CLUTCH ASSEMBLY, Threespeed Transmission Synchronizer Second And High....	6.080-1	CORE, Air Conditioning Evaporator.....	13.475-1
COIL, Air Conditioning Compressor Drive Pulley.....	13.415-3	CORE, Heater.....	13.028-1
COIL, Ignition.....	3.056-1	CORE, Radiator.....	2.020-1
COLLAR, Brake And Clutch Pedal Shaft....	5.148-3	CORE, Speedometer Cable.....	3.575
COLLAR, Reduction Unit Shift.....	18.615-13	CORD, Engine Heater.....	15.145-1
COLUMN ASSEMBLY, Steering.....	10.337-1	COUNTERSHAFT, Transmission.....	6.159-1
COMPRESSOR, Air Conditioning.....	13.400-1	COUPLING, Air Conditioning Hose Disconnect (Female Half).....	13.440-3c
CONDENSER, Distributor.....	3.033-1	COUPLING, Air Conditioning Hose Disconnect (Male Half).....	13.440-3a
CONDUCTOR, Instrument Cluster.....	3.520-1	COUPLING, Steering Gear Lower Shaft Or Intermediate Shaft To Steering Gear.....	10.740
CONDUIT, Vacuum Hose Protective.....	18.585-11	COUPLING, Steering Gear Upper Shaft To Lower Shaft.....	10.720-1
CONE AND ROLLER, Transfer Case Front Output Shaft.....	18.025-4	COUPLING, Tailgate Window Regulator Motor To Transmission.....	23.306-7
CONE AND ROLLER, Transfer Case Rear Bearing Cap (Front).....	18.088-1	COVER, Air Conditioning Hose Hole.....	20.120-18
CONE AND ROLLER, Transfer Case Rear Bearing Cap (Rear).....	18.085-1	COVER, Auxiliary Gasoline Tank End Panel.....	4.131-18
CONNECTOR, Carburetor Nipple To Vacuum Hose.....	4.701-3	COVER, Auxiliary Gasoline Tank Filler Opening Plate.....	4.131-22
CONNECTOR, Front Seat Adjuster Wire.....	29.133-1	COVER, Brake Adjusting Hole.....	8.030-1
CONNECTOR, Gasoline Filler Neck Tube To Tank.....	4.141-13	COVER, Brake Cylinder Hole Plate.....	20.120-4
CONNECTOR, Hydramatic Transmission Stator Sleeve.....	6.660-4	COVER, Brake Master Cylinder Filler.....	8.038-1
CONNECTOR, Hydraulic Tube To Master Cylinder.....	5.213-2	COVER, Brake Pedal Pad Rubber.....	8.148-1
CONNECTOR, Instrument Wiring Harness To Fuse Block And Dash.....	3.165-2a	COVER, Carburetor Air Cleaner.....	4.088-7
CONNECTOR, Oil Filter Bypass.....	1.223-1	COVER, Clutch Housing.....	5.054-3
CONNECTOR, Tee To Vacuum Hose.....	18.585-7a	COVER, Clutch Pedal Pad.....	5.144-1
CONNECTOR, Vacuum Hose.....	4.367-3	COVER, Clutch Push Rod.....	20.120-10
CONNECTOR, Vacuum Tube.....	13.020-18a	COVER, Cylinder Head.....	1.068-1
CONNECTOR, Windshield Washer Hose.....	22.053-3	COVER, Engine Oil Pump.....	1.164-1
CONNECTOR, Windshield Washer Hose (Tee).....	22.053-4	COVER, Exhaust Gas Recirculation Ports....	4.700-9
CONNECTOR, Windshield Wiper Motor To Control.....	22.027-10	COVER, Floor Gear Shift Lever.....	7.013-1
CONNECTOR, Wiring.....	3.165-2	COVER, Foot Operated Parking Brake.....	8.180-4
CONTACT KIT, Ignition.....	3.002-1	COVER, Fourspeed Transmission Case Side Opening.....	6.009-5
CONTACT SET, Ignition.....	3.031-1	COVER, Fresh Air Duct.....	22.020-3
CONTROL, Diaphragm.....	18.565-1	COVER, Front Axle Housing.....	9.307-1
CONTROL, Distributor Vacuum.....	3.046-1	COVER, Front Bucket Seat Sidewing.....	29.120-1
CONTROL, Electronic Ignition.....	3.044-1	COVER, Front Floor Pan.....	20.005-12
		COVER, Front Floor Pan Drain Hole.....	20.005-7
		COVER, Front Floor Pan Transmission Access.....	20.005-3
		COVER, Front Seat Adjuster Handle.....	29.133-2
		COVER, Front Seat Center Armrest Support Bracket.....	29.145-1
		COVER, Fuel Vapor Storage Canister Filter.....	4.144-1c



## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>C - Cont.</b>		<b>C - Cont.</b>	
COVER, Gasoline Tank Check Valve.....	4.132-1	COVER, Wheel Hub .....	8.274-2
COVER, Gasoline Tank Filler Tube		COVER, Windshield Wiper Linkage Access	
Protective.....	4.143-1	Hole.....	25.003-3
COVER, Heater Motor Opening .....	20.120-2	COVER, Windshield Wiper Motor (Bottom	
COVER, Hydramatic Transmission		Mounted) .....	22.027-6
Converter Housing Lower.....	6.528-1	COVER, Windshield Wiper Motor (Less	
COVER, Hydramatic Transmission Front....	6.527-1	Crash Pad) .....	22.027-7b
COVER, Hydramatic Transmission Governor..	6.545-2	COVER ASSEMBLY, Clutch .....	5.001-1
COVER, Hydramatic Transmission Oil Pump..	6.535-2	COVER ASSEMBLY, Timing Case.....	1.120-1
COVER, Hydramatic Transmission Rear		CRANK, Cap Side Window.....	28.706-5
Servo.....	6.540-5	CRANK, Electric Windshield Wiper	
COVER, Inertia Reel .....	29.020	Motor Drive.....	22.033-1
COVER, Instrument Panel Clock Opening ...	22.100-6	CRANKSHAFT ASSEMBLY.....	1.042-1
COVER, Instrument Panel Heater .....	22.100-4	CROSSMEMBER, Center .....	11.024-1
COVER, Instrument Panel Radio Opening ...	22.100-8	CROSSMEMBER, Engine Rear Support .....	1.010-1
COVER, Power Brake Master Cylinder Filler	8.510-2	CROSSMEMBER, Front .....	10.002-1
COVER, Power Steering Gear Pitman Shaft..	10.610-1	CROSSMEMBER, Hood Diagonal.....	12.001-3
COVER, Power Takeoff Transfer Case Cover	18.515-1	CROSSMEMBER, Intermediate Rear.....	11.024-2
COVER, Radio Lower .....	15.320-2a	CROSSMEMBER, Rear .....	11.024-3
COVER, Radio Upper.....	15.320-2	CRUTCH TIP, Longitudinal Seat Lea.....	29.201-13
COVER, Rear Axle Housing .....	9.007-1	CUP, Contact Horn Button.....	3.400-12
COVER, Rear Door And Rear Quarter Ash		CUP, Front Axle Differential Side Gear	
Receiver Outside.....	23.182-2	Bearing .....	9.343-1
COVER, Rear Propeller Shaft Grease Flat...	9.113-6	CUP, Front Axle Pinion Bearing (Inner-	
COVER, Rear Quarter Lower Front Inner....	20.269-2	Front) .....	9.355-1
COVER, Reduction Unit Power Takeoff .....	18.610-7	CUP, Front Axle Pinion Bearing (Outer-	
COVER, Seat Back Lock Striker.....	29.105-27	Rear) .....	9.355-2
COVER, Seat Belt Bolt Heat Shield .....	27.290-8a	CUP, Front Wheel Bearing .....	8.294-1
COVER, Seat Lock Latch .....	29.105-28	CUP, Front Wheel Retainer - Spring .....	8.296-10
COVER, Seat Lock Latch Finger Tab.....	29.105-26	CUP, Glove Box Door Lock Clamp .....	22.073-3
COVER, Shift Fork Vent.....	18.560-1	CUP, Rear Axle Pinion Bearing (Front) .....	9.055-1
COVER, Shoulder Belt Guide .....	27.292-7	CUP, Rear Axle Pinion Bearing (Rear) .....	9.055-2
COVER, Spare Tire .....	29.461	CUP, Rear Wheel Bearing .....	8.302-1
COVER, Steering Arm To Steering Tie Rod		CUP, Steering Column Housing Thrust.....	10.336-3
End Dust.....	10.232-2	CUP, Steering Gear Worm Bearing.....	10.324-1
COVER, Steering Column Access Plate .....	20.120-14	CUP, Tachometer Cover .....	3.700-6
COVER, Steering Gear Housing Cross Shaft ..	10.300-1	CUP, Transfer Case Front Output Shaft Cone	
COVER, Steering Gear Shaft Lock.....	10.702-1	And Roller .....	18.025-5
COVER, Steering Housing Worm.....	10.296-1	CUP, Transfer Case Rear Bearing Cap Cone	
COVER, Steering Linkage Pitman Arm To		And Roller (Front).....	18.088-2
Steering Arm Tie Rod End Dust .....	10.232-1	CUP, Transfer Case Rear Bearing Cap Cone	
COVER, Steering Wheel.....	10.280-3	And Roller (Rear) .....	18.085-2
COVER, Steering Wheel Actuator And		CUSHION, Bottom Frame Hinge Antirattle ...	29.181-12
Directional Signal Switch.....	10.805-1	CUSHION, Front Suspension Sway	
COVER, Tailgate Chain .....	23.006-6d	Stabilizer To Frame .....	10.260-2
COVER, Tailgate Chain .....	31.163-1	CUSHION, Tailgate Glass Upper.....	25.033-6
COVER, Tailgate Window Regulator Access..	23.006-3	"C" WASHER, Fourspeed Transmission	
COVER, Trailer Towing Relay And Circuit		Shifting Shoe Reverse .....	6.085-6
Breaker Box.....	3.780-11	"C" WASHER, Fourspeed Transmission	
COVER, Transfer Case.....	18.510-3	Shift Rail End Reverse Plunger .....	6.020-5
COVER, Transfer Case Bottom .....	18.010-5	CYLINDER, Front Door Lock.....	23.081-2a
COVER, Transfer Case Shift Lever Control		CYLINDER, Glove Box Lock .....	22.073-2a
Case Bottom .....	18.152-5	CYLINDER, Ignition Switch .....	3.135-3
COVER, Transfer Case Shift Lever Control		CYLINDER, Ignition Switch Lock (Incl.	
Case Dust .....	18.152-4	Keys) .....	3.135-1
COVER, Transfer Case Shift Lever Opening ..	20.120-7	CYLINDER, Ignition Switch Lock (Less	
COVER, Transfer Case Shift Rod .....	18.100-5	Keys).....	3.135-2
COVER, Transmission Case.....	6.009-2		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>C - Cont.</b>		<b>D - Cont.</b>	
CYLINDER ASSEMBLY, Brake Master.....	8.035-1	DRUM ASSEMBLY, Front Brake.....	8.240-1
CYLINDER ASSEMBLY, Brake Wheel Front..	8.068-1	DRUM ASSEMBLY, Rear Brake.....	8.240-2
CYLINDER ASSEMBLY, Brake Wheel Rear..	8.068-2	DUCT, Air.....	22.020-3a
CYLINDER ASSEMBLY, Clutch Master.....	5.207-1	DUCT, Cold Air Induction.....	4.092-1
CYLINDER ASSEMBLY, Clutch Slave.....	5.221-1	DUCT, Fresh Air Intake.....	22.020-1
CYLINDER ASSEMBLY, Power Brake Master	8.510-1	DUCT EXTENSION, Left Side.....	13.510-1
CYLINDER ASSEMBLY, Tailgate Lock.....	23.081-4	DUST KIT, Rear Propeller Shaft Cover And Clamp.....	9.113-2
<b>- D -</b>		<b>- E -</b>	
DAMPENER, Spare Wheel Vibration.....	14.203-1	ECCENTRIC, Fuel Pump.....	1.134-4
DAMPER, Crankshaft Vibration.....	1.045-1	ECCENTRIC, Fuel Pump.....	4.118-1
DAMPER, Exhaust Manifold.....	1.067-15	ECCENTRIC, Idler Pulley Adjusting.....	13.430-9
DAMPER, Steering.....	10.260-12	ELBOW, Cylinder Head Cover To PCV Filter Hose.....	1.116-4
DAMPER KIT, Exhaust Manifold.....	1.067-14	ELBOW, Heater Hose.....	13.050-5
DECAL, Transfer Case Shifting.....	18.001-5	ELBOW, Hydramatic Transmission (Oil Cooler Lines To Transmission).....	6.631-4
DECAL, Unleaded Fuel.....	14.145-8	ELBOW, Hydramatic Transmission (Oil Cooler Tube At Radiator).....	6.631-10
DECAL RALLY STRIPES.....	26	ELBOW, Oil Pressure Gauge.....	3.605-7
DEFLECTOR, Exhaust Valve Stem.....	1.078-6	ELBOW, Vacuum Tube Inverted Flared.....	13.020-13
DEFLECTOR, Intake Valve Stem.....	1.077-6	ELEMENT, Carburetor Air Cleaner.....	4.088-5
DEFLECTOR, Valve Rocker Arm Shaft Oil..	1.102-1	ELEMENT, Cigar Lighter.....	3.352-6
DEFLECTOR, Windshield Defroster Air....	25.004-1	ELEMENT, Oil Filter.....	1.206-1
DETENT, Hydramatic Transmission Roller And Spring.....	6.551-5	ELEMENT, Windshield Wiper Blade.....	22.043-2
DIAL, Gear Selector Pointer.....	7.537-1	END, Clutch Master Cylinder Push Rod....	5.207-5
DIAPHRAGM KIT, Power Brake Valve Body..	8.485-1	END, Fourspeed Transmission Shift Rail First And Second.....	6.020-1
DIFFERENTIAL ASSEMBLY.....	18.545-1	END, Fourspeed Transmission Shift Rail Reverse.....	6.020-2
DIFFUSER, Instrument Cluster Lamp.....	3.525-2	END ASSEMBLY, Pitman Arm To Steering Arm Tie Rod.....	10.126-2
DIRECT CLUTCH KIT, Hydramatic Transmission.....	6.562-12	END ASSEMBLY, Steering Arm To Steering Arm Tie Rod.....	10.126-1
DISC, Horn Button.....	3.400-1a	END RAIL, Luggage Rack.....	15.250-8
DISC, Tone Control.....	15.320-4a	ENGINE ASSEMBLY.....	1.002-1
DISC ASSEMBLY, Front Wheel Disc Brake ..	8.805-1	EQUALIZER, Parking Brake Cable.....	8.214-1
DISC KIT, Rear Axle Differential Clutch Friction.....	9.035-2	ESCUTCHEON, Horn Switch.....	3.106-5
DISTRIBUTOR.....	3.030-1	ESCUTCHEON, Latch Opening Front Seat Cushion.....	29.103-16
DOOR, Front.....	23.001	ESCUTCHEON, Outside Rear View Remote Control Mirror.....	15.270-8
DOOR, Glove Box.....	22.060-1	ESCUTCHEON, Sun Visor Mounting Bracket..	29.003-6
DOOR, Headlamp.....	3.252-1	EXTENSION, Front Fender.....	12.075-6
DOOR, Rear Station Wagon.....	23.002-1	EXTENSION, Front Fender Stone Shield....	12.075-5
DOVETAIL, Hood Lock Lower.....	12.060-2	EXTENSION, Hydramatic Transmission Case	6.503-2
DOVETAIL ASSEMBLY, Hood Lock Lower..	12.060-1	EXTENSION, Modulator.....	4.005-1a
DOVETAIL ASSEMBLY, Tailgate.....	23.006-16	EXTENSION, Pick-Up Box Floor To Rear Body Side Lower Panel.....	31.052-1
DOWEL, Clutch Housing.....	5.054-5	EXTENSION, Rear Fender.....	20.173-1
DOWEL, Cylinder Block To Clutch On Converter Housing.....	1.020-2	EXTENSION, Rear Floor Pan.....	20.035-2
DOWEL, Cylinder Head To Manifold Dowel..	1.059-2	EXTENSION, Upper Tailgate Inner Rear Pillar Opening.....	20.315-7
DRAIN COCK, Radiator Core.....	3.036-1		
DRAW BAR AND PINTLE HOOK REINFORCEMENT.....	11.068-2a		
DRAW BAR ASSEMBLY.....	11.068-2		
DRAW BAR KIT.....	11.068-1		
DRIVE GEAR KIT, Windshield Wiper Motor ..	22.031-1		
DRIVE UNIT, Tailgate Window Regulator...	23.308-1		
DRUM, Front Brake.....	8.245-1		
DRUM, Rear Brake.....	8.245-2		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>E - Cont.</b>		<b>F - Cont.</b>	
EXTENSION, Windshield Wiper Motor Wire		FITTING, Transfer Case Shift Lever	
Extension .....	22.036-1	Lubricating.....	18.125-8
EXTENSION AND CAP, Tailgate		FLANGE, Exhaust Pipe Manifold .....	4.186-2
Window Regulator .....	23.306-5	FLANGE, Front Axle Shaft Drive .....	9.369-1
EXTENSION KIT, Mirror Arm .....	15.270-11	FLANGE, Gasoline Tank Filler Neck.....	4.141-15
EXTENSION KIT, Tail Pipe Side Exhaust...	4.227-2	FLANGE, Horn Button Contact.....	3.400-3
EXTERIOR DECAL RALLY STRIPES.....	26	FLANGE, Steering Gear To Shaft .....	10.710-1
EXTERIOR ORNAMENTATION .....	26	FLANGE, Transfer Case Universal Joint End	18.115-4
EYEBOLT, Safety Chain Pintle Hook.....	11.066-5	FLASHER, Directional Signal .....	3.330-1
EYELET, Windshield Hold Down Strap .....	25.008-2	FLASHER, Hazard Warning.....	3.690-9
<b>- F -</b>		FLASH TUBE, Strobe Warning Lamp.....	15.516-3
FACEPLATE, Control Panel .....	13.480-1	FLYWHEEL ASSEMBLY, Crankshaft .....	1.056-1
FAN, Exhaust Emission Air Pump Filter ....	4.510-1	FOOTMAN LOOP, Longitudinal Seat .....	29.201-9
FASTENER, Automatic Speed Control		FORK, Fourspeed Transmission Shifter	
Vacuum Hose .....	4.367-4	First And Second.....	6.198-4
FENDER, Front.....	12.075-1	FORK, Fourspeed Transmission Shifter	
FENDER, Rear.....	31.040-1	Third And Direct.....	6.198-2
FILLER, Body Center Pillar Lower .....	20.220-2	FORK, Reduction Unit Shift Lever.....	18.620-5
FILLER, Cowl Top Panel To Front Body		FORK, Threespeed Transmission Shifter	
Pillar.....	20.150-3	Low And Reverse .....	6.198-1
FILLER, Front Bumper Rail.....	12.350-1	FORK, Threespeed Transmission Shifter	
FILLER, Rear Bumper To Rear Cross Sill...	12.360-1	Third And Direct .....	6.198-3
FILLER, Tailgate Pillar Lower.....	20.315-8	FORK, Transfer Case Shift.....	18.095-1
FILLER, Vinyl Cover .....	20.422-2	FORWARD CLUTCH HOUSING AND WASHER	
FILTER, Ash Receiver Bulb .....	22.092-6	KIT, Hydramatic Transmission.....	6.595-1
FILTER, Cylinder Head Cover To Air		FORWARD CLUTCH KIT, Hydramatic	
Cleaner Hose.....	1.116-2	Transmission.....	6.595-2
FILTER, Fuel Vapor Storage Canister .....	4.144-1b	FRAME .....	11.001-1
FILTER, Gasoline.....	4.110-3	FRAME, Front Door Ventilator.....	23.114-1
FILTER, Gasoline Tank.....	4.134-1	FRAME, Front Door Window.....	23.008-2
FILTER SERVICE KIT .....	22.051-3	FRAME, Front Seat Back Center Armrest....	29.142-1
FITTING, Bolt Hydraulic Clutch Hose To		FRAME, Front Seat Center Cushion.....	29.157-1
Slave Cylinder.....	5.216-2	FRAME, Front Seat Cushion.....	29.103-2
FITTING, Elbow To Oil Pressure Sending		FRAME, Rear Door Stationary Glass.....	23.126-1
Unit .....	3.605-6	FRAME, Rear Door Window.....	23.008-4
FITTING, Fuel Line To Carburetor.....	4.124-1	FRAME, Rear Quarter Pivoting Type Window ..	25.027-1
FITTING, Heater And Defroster Damper.....	13.113-4	FRAME, Rear Quarter Window Lower .....	20.350-2
FITTING, Heater Hose Elbow .....	13.050-5a	FRAME, Rear Quarter Window Upper.....	20.350-1
FITTING, Intake Manifold Vacuum.....	1.067-19	FRAME, Rear Window .....	20.397-1
FITTING, Lubrication .....	5.168-19	FRAME, Tailgate Glass .....	23.008-1
FITTING, Power Steering Pump Pressure		FRAME, Ventilating Windshield Upper Half..	25.003-2
Hose .....	10.470-8	FRAME, Windshield.....	25.003-1
FITTING, Propeller Shaft Lubricating .....	9.112-1	FRAME ASSEMBLY, Front Seat.....	29.105-1
FITTING, Steering Gear Lower Shaft U-Joint		FRAME ASSEMBLY, Front Seat Back.....	29.105-3
Lubrication (In Slip Yoke) .....	10.700-4	FRAME ASSEMBLY, Front Seat Cushion ....	29.103-1
FITTING, Steering Gear Lower Shaft U-Joint		FRAME ASSEMBLY, Longitudinal Seat .....	29.201-1
Lubrication (In Clamp Yoke) .....	10.700-5	FRAME ASSEMBLY, Rear Seat.....	29.181-1
FITTING, Steering Linkage Tie Rod End		FRAME ASSEMBLY, Rear Seat Back.....	29.220-1
Lubrication.....	10.220-1	FRAME ASSEMBLY, Rear Seat Cushion.....	29.181-3
FITTING, Transfer Case Shifting Lever		FULCRUM, Floor Gear Shift Lever .....	7.001-2
Lubricating.....	18.180-5	FUSE.....	3.155-1
FITTING, Transfer Case Shift Lever		FUSE, Automatic Speed Control Harness ....	4.330-4
Control Case Bottom Cover Grease .....	18.152-8	FUSIBLE LINK, Starter Relay .....	3.167-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>- G -</b>		<b>G - Cont.</b>	
GASKET, Access Cover To Tailgate .....	23.006-4	GASKET, Hydramatic Transmission Rear Servo Cover .....	6.540-6
GASKET, Backup Lamp Lens.....	3.317-3	GASKET, Hydramatic Transmission Solenoid .....	6.660-5
GASKET, Backup Lamp To Panel.....	3.315-2	GASKET, Hydramatic Transmission Valve Body To Plate.....	6.660-6
GASKET, Base To Roof .....	15.250-4	GASKET, Hydramatic Transmission Valve Plate To Case.....	6.660-7
GASKET, Bearing Retainer Cover .....	18.660-4	GASKET, Intake Manifold To Cylinder Head.	1.067-5
GASKET, Brake Master Cylinder Filler Cover.....	8.038-2	GASKET, Intake Manifold To Exhaust Manifold .....	1.067-4
GASKET, Brake Tube Hose.....	8.116-2	GASKET, Lamp Mounting Directional And Parking.....	3.292-8
GASKET, Carburetor .....	4.004-1	GASKET, License Plate Lamp Housing To Bracket ..	3.339-4
GASKET, Carburetor Air Cleaner Or Adapter To Carburetor.....	4.088-2	GASKET, License Plate Lamp Lens ...	3.339-3
GASKET, Carburetor Choke Heater Tube....	4.020-5	GASKET, Liftgate Handle.....	28.575-5
GASKET, Cargo Lamp Lens.....	3.671-5	GASKET, Outside Rear View Mirror.....	15.270-5
GASKET, Converter To Exhaust Pipe Flange	4.212-3	GASKET, Parking And Front Directional Lamp Lens.....	3.292-3
GASKET, Cylinder Head.....	1.061-1	GASKET, Power Brake Cylinder Filler Cover	8.510-4
GASKET, Cylinder Head Cover .....	1.072-1	GASKET, Power Steering Gear Pitman Shaft Cover.....	10.612-1
GASKET, Distributor .....	3.039-5	GASKET, Rear Axle Housing Cover .....	9.007-4
GASKET, Engine Oil Pan Drain Plug.....	1.151-4	GASKET, Rear Brake Grease Protector .....	8.312-3
GASKET, Engine Oil Pump Cover.....	1.165-1	GASKET, Rear Door Outside Handle.....	23.074-8
GASKET, Engine Oil Pump Release Valve Spring Cap .....	1.178-2	GASKET, Rear License Plate Bracket.....	14.098-7
GASKET, Engine Oil Pump To Cylinder Block.....	1.155-1	GASKET, Rear Propeller Shaft Housing Cover.....	9.113-7
GASKET, Exhaust Emission Air Injection Manifold .....	4.539-1	GASKET, Reduction Unit Power Takeoff Cover To Housing.....	18.610-9
GASKET, Exhaust Gas Recirculating Valve And Sensor .....	4.700-2	GASKET, Spark Plug .....	3.001-2
GASKET, Exhaust Manifold Damper .....	1.067-16	GASKET, Speaker Mounting Bracket To Trim Panel.....	15.320-15
GASKET, Exhaust Manifold Emission Hole Plug.....	1.067-10	GASKET, Steering Gear Housing Cross Shaft Cover.....	10.302-1
GASKET, Fourspeed Transmission Case Side Opening Cover.....	6.009-7	GASKET, Tail And Stop Lamp.....	3.305-3
GASKET, Fourspeed Transmission Rear Bearing Retainer.....	6.052-3	GASKET, Tail And Stop Lamp Lens.....	3.305-2
GASKET, Fresh Air Duct .....	22.020-4	GASKET, Tail And Stop Lamp To Body.....	3.305-1
GASKET, Front Axle Drive Shaft Flange .....	9.368-7	GASKET, Tailgate Handle .....	23.078-3
GASKET, Front Axle Housing Cover .....	9.307-3	GASKET, Tailgate Regulator Base To Panel.....	23.306-4
GASKET, Front Bearing Cap .....	6.017-3	GASKET, Thermostat Housing.....	2.102-7
GASKET, Front Door Lock Cylinder Assembly .....	23.081-5	GASKET, Threespeed Transmission Front Bearing Cap Screw .....	6.017-4
GASKET, Front Door Outside Handle.....	23.074-7	GASKET, Timing Case Cover.....	1.121-1
GASKET, Fuel Pump.....	4.116-1	GASKET, Transfer Case Bottom Cover.....	18.010-7
GASKET, Gasoline Gauge To Gasoline Tank.....	3.615-5	GASKET, Transfer Case Front Bearing Cap ..	18.015-3
GASKET, Gasoline Tank Filler Neck Flange	4.141-16	GASKET, Transfer Case Rear Bearing Cap..	18.080-4
GASKET, Gasoline Tank Outlet And Return Tube Assembly .....	4.160-16	GASKET, Transfer Case Shift Lever.....	18.128-6
GASKET, Grease Catcher Front At Backing Plate.....	8.296-13	GASKET, Transfer Case Shift Lever Control Case Bottom Cover .....	18.152-7
GASKET, Heater Motor To Plate.....	13.072-2c	GASKET, Transfer Case Shift Lever Opening Cover .....	20.120-9
GASKET, Hydramatic Transmission Extension To Case.....	6.503-6	GASKET, Transfer Case To Transfer Case Cover.....	18.510-8
GASKET, Hydramatic Transmission Governor Cover .....	6.545-4		
GASKET, Hydramatic Transmission Oil Pan.	6.507-2		
GASKET, Hydramatic Transmission Oil Pump To Case .....	6.535-6		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>G - Cont.</b>		<b>G - Cont.</b>	
GASKET, Transfer Case To Transmission (LQT) .....	18.001-3	GEAR, Transfer Case Rear Output Shaft Sliding .....	18.065-1
GASKET, Transfer Case To Transmission (WQT) .....	18.500-3	GEAR, Transmission Countershaft .....	6.164-1
GASKET, Transmission Adapter Plate To Transfer Case .....	6.053-3	GEAR, Transmission Reverse Idler .....	6.170-1
GASKET, Transmission Case Cover .....	6.009-4	GEAR, Transmission Second Speed .....	6.120-1
GASKET, Vent Cover .....	18.560-3	GEAR, Transmission Speedometer Drive .....	18.240-1
GASKET, Water Pump .....	2.098-1	GEAR AND PIN, Hydramatic Governor Transmission Drive .....	6.545-5
GASKET, Windshield Wiper Motor Cover .....	22.027-7a	GEAR ASSEMBLY, Steering .....	10.290-1
GASKET, Windshield Wiper Motor Mounting .....	22.027-4a	GEAR SET, Front Axle .....	9.350-1
GASKET AND SEAL SET, Transfer Case (Model 20) .....	18.002-1	GEAR SET, Front Axle Differential Side .....	9.327-1
GASKET AND SEAL SET, Transfer Case (Quadra Trac) .....	18.500-4	GEAR SET, Rear Axle Differential Side (LLD) .....	9.027-1
GASKET KIT, Air Conditioning Compressor .....	13.400-5	GEAR SET, Rear Axle Differential Side (WLD) .....	9.027-2
GASKET SET, Air Conditioning Compressor Suction And Discharge Valve .....	13.405-2	GEAR SET, Rear Axle Ring .....	9.050-1
GASKET SET, Engine (Overhaul) .....	1.060-2	GENERATOR .....	3.005-1
GASKET SET, Engine (Valve Grind) .....	1.060-1	GLASS, Front Door Lowering .....	25.018-1
GASKET SET, Engine Lower .....	1.060-3	GLASS, Front Door Ventilator .....	25.016-1
GASKET SET, Engine Oil Pan .....	1.152-1	GLASS, Outside Rear View Mirror .....	15.270-7
GASKET SET, Hydramatic Transmission .....	6.501-1	GLASS, Rear Door Lowering .....	25.020-1
GASKET SET, Intake Manifold .....	1.067-6	GLASS, Rear Door Stationary .....	25.023-1
GASKET SET, Transmission Overhaul .....	6.002-1	GLASS, Rear Quarter Pivoting Type Window .....	25.027-3
GATE, Steering Column Locking .....	10.337-3	GLASS, Rear Quarter Stationary .....	25.026-1
GAUGE, Bearing .....	1.031-1	GLASS, Rear Window .....	25.028-1
GAUGE, Gasoline (In Instrument Cluster) .....	3.615-1	GLASS, Tailgate .....	25.028-2
GAUGE, Gasoline (Sending Unit In Gasoline Tank) .....	3.615-3	GLASS, Top Enclosure Liftgate .....	28.585-1
GAUGE, Indicator .....	6.510-2	GLASS, Top Enclosure Body Side Panel .....	28.560-1
GAUGE, Oil Level .....	1.187-1	GLASS, Windshield .....	25.001-1
GAUGE, Oil Pressure .....	3.605-1	GOVERNOR ASSEMBLY, Hydramatic Transmission .....	6.545-1
GAUGE, Water Temperature .....	3.610-1	GRID REPAIR KIT, Heated Rear Window .....	3.770-9
GEAR, Distributor (On Distributor) .....	3.042-1	GRILLE, Air Conditioning Blower Housing .....	13.072-7a
GEAR, Distributor (On Camshaft) .....	3.042-2	GRILLE, Center Insert .....	2.050-15
GEAR, Engine Oil Pump Idler .....	1.157-1	GRILLE, Front Door Or Rear Compartment Speaker .....	15.320-16
GEAR, Flywheel Ring .....	1.056-3	GRILLE, Radiator .....	2.050-1
GEAR, Fourspeed Transmission Third Speed .....	6.130-1	GRILLE, Radio Speaker .....	15.320-6
GEAR, Hydramatic Transmission Rear Internal Mainshaft .....	6.634-1	GROMMET, Air Conditioning Hose In Dash .....	13.440-12
GEAR, Hydramatic Transmission Sun .....	6.518-1	GROMMET, Antenna Wire .....	15.030-2
GEAR, Rear Axle Differential Pinion .....	9.031	GROMMET, Auxiliary Gasoline Tank Filter Neck .....	4.131-15
GEAR, Rear Axle Differential Side .....	9.027-3	GROMMET, Body Side Lower Panel Wire Harness .....	31.050-7
GEAR, Reduction Unit Holding Plate .....	18.615-19	GROMMET, Cylinder Block Ventilation Valve To Cylinder Head Cover .....	1.119-2
GEAR, Reduction Unit Planetary Sun .....	18.615-5	GROMMET, Cylinder Block Ventilation Valve To Intake Manifold .....	1.119-3
GEAR, Reduction Unit Ring .....	18.615-10	GROMMET, Domelamp Harness .....	3.346-14
GEAR, Speedometer Drive .....	18.580-1	GROMMET, Filler Neck Flange .....	4.141-16a
GEAR, Speedometer Drive .....	3.590-1	GROMMET, Front Door Lock Push Knob .....	23.054-3
GEAR, Threespeed Transmission Low .....	6.144-2	GROMMET, Front Fender Side Marker Cable .....	3.720-5a
GEAR, Three-speed Transmission Reverse .....	6.144-3	GROMMET, Harness Thru Back Panel .....	3.671-11
GEAR, Transfer Case Front Output Shaft .....	18.035-1	GROMMET, Harness Thru Dash .....	3.106-8
GEAR, Transfer Case Front Output Shaft Sliding .....	18.030-1	GROMMET, Headlamp Harness Thru Panel .....	3.164-3
GEAR, Transfer Case Intermediate .....	18.050-1	GROMMET, License Plate Lamp Wire .....	3.341-10
GEAR, Transfer Case Mainshaft .....	18.070-1	GROMMET, Motor To Mounting Bracket .....	22.027-5
		GROMMET, Parking Brake Cable At Dash .....	8.192-3

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>G - Cont.</b>		<b>H - Cont.</b>	
GROMMET, Power Brake Unit Vacuum Check Valve.....	8.460-2	HANDLE ASSEMBLY, Rear Quarter Pivoting Glass.....	25.027-6
GROMMET, Power Steering Pump Pressure And Return Hose.....	10.470-11	HANDLE ASSEMBLY, Tailgate Latch Release.....	31.126-1
GROMMET, Rear Door Lock Push Knob.....	23.054-4	HANDLE ASSEMBLY, Top Enclosure Liftgate	28.575-1
GROMMET, Rear Side Marker Lamp Cable To Body.....	3.742-3	HANDLE KIT, Front Door Ventilator Lock...	23.121-1
GROMMET, Reduction Unit Cable.....	18.650-4	HANDLE KIT, Instrument Panel Assist.....	22.100-12
GROMMET, Speedometer Cable.....	3.570-4	HANGER, Rear Spring Shackle.....	11.106-1
GROMMET, Steering Gear Jacket Tube To Toeboard.....	10.350-7	HARNESS.....	3.163-2
GROMMET, Temperature Control Cable.....	13.017-11	HARNESS, Air Conditioning Wire.....	13.477-3
GROMMET, Trailer Harness Thru Rear Panel	3.780-2	HARNESS, Automatic Speed Control Wiring..	4.330-1
GROMMET, Vacuum Tubes And Reduction Unit Cable.....	18.585-9	HARNESS, Clock.....	3.369-3
GROMMET, Vacuum Tube Thru Dash Panel..	13.020-19	HARNESS, Courtesy Lamp.....	3.349-7
GROMMET, Windshield Washer.....	22.055-1	HARNESS, Domelamp.....	3.346-7
GROMMET, Windshield Wiper Motor Wire....	22.027-8	HARNESS, Engine Compartment Wire.....	3.165-1b
GROMMET, Wiring.....	3.166-1	HARNESS, FM Multiplex Radio To Front Door Speakers.....	15.320-11
GUARD, Bumper Rail.....	12.302-1	HARNESS, FM Multiplex Radio To Rear Compartment Speakers.....	15.320-11a
GUARD ASSEMBLY, Front Bumper.....	12.184-1	HARNESS, Front End Lighting.....	3.164-1
GUARD, Valve Assembly.....	18.585-1a	HARNESS, Heater Control Lamp.....	13.017-20
GUARD, Power Brake Unit Link To Brake Pedal.....	8.420-3	HARNESS, Instrument Panel.....	3.165-1
GUARD, Power Brake Unit Valve Push Rod..	8.480-2	HARNESS, Jumper Assembly Vacuum Control Solenoid To Temperature Override Switch.	3.051-4
GUARD ASSEMBLY, Rear Bumper.....	12.184-5	HARNESS, License Lamp.....	3.341-1
GUIDE, Brake Shoe Automatic Adjusting Cable.....	8.011-1	HARNESS, License Plate Lamp To Cross Harness.....	3.341-6
GUIDE, Front Door Window Regulator Arm...	25.030-3	HARNESS, Low Sound Horn Relay To Horn And Relay.....	3.106-7
GUIDE, Power Steering Gear Worm Ball Bearing Return.....	10.575-1	HARNESS, Neutral Safety Switch And Automatic Transmission.....	3.022-4
GUIDE, Rear Seat Back Latch.....	29.226-4	HARNESS, Pick-Up Cargo Lamp And Domelamp.....	3.671-9
GUIDE, Steering Wheel Tilt Spring.....	10.857	HARNESS, Rear Domelamp.....	3.670-4
GUIDE AND CLAMP KIT, Steering Gear Worm Ball Bearing Return.....	10.316-1	HARNESS, Rear End Lighting And Signals...	3.163-1
GUSSET, Body Side Panel And Dash To No. 1 Body Bracket.....	20.120-20	HARNESS, Switch To Relay.....	3.106-6
GUSSET, Side Rail To Rear Engine Crossmember.....	11.012-1	HARNESS, Tailgate Electric Operated Window Regulator (Body).....	23.320-2
<b>- H -</b>			
HANDLE, Door Assist.....	29.072-1	HARNESS, Tailgate Electric Operated Window Regulator (Frame).....	23.320-3
HANDLE, Door Window Regulator.....	23.100-1	HARNESS, Tailgate Electric Operated Window Regulator (Molded).....	23.320-1
HANDLE, Front Door Outside.....	23.074-1	HARNESS, Tailgate Electric Operated Window Regulator Disconnect Switch To Junction Block.....	23.320-4
HANDLE, Instrument Panel Assist.....	22.100-13	HARNESS, Trailer Towing.....	3.780-1
HANDLE, Jack.....	14.138-2	HARNESS, Transmission Kickdown.....	6.665-4
HANDLE, Parking Brake Release Rod.....	8.182-1	HARNESS, Windshield Wiper Motor.....	22.036-2
HANDLE, Rear Door Outside.....	23.074-3	HEAD ASSEMBLY, Cylinder.....	1.059-1
HANDLE, Rear Liftgate Window Inside.....	28.711-1	HEADER, Rear Opening.....	20.390-1
HANDLE, Rear Liftgate Window Outside....	28.710-1	HEADLAMP ASSEMBLY.....	3.245-1
HANDLE, Remote Control.....	23.058-1	HEADLINING.....	29.015-1
HANDLE, Tailgate Latch Release.....	23.039-5	HINGE, Front Door Lower.....	23.016-1
HANDLE, Tailgate Latch Release.....	31.126-3	HINGE, Front Door Upper.....	23.015-1
HANDLE, Tailgate Window Regulator.....	23.078-1	HINGE, Glove Box Door.....	22.060-3
HANDLE, Ventilating Windshield Opening...	25.010-1	HINGE, Hood.....	12.035-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>H - Cont.</b>		<b>H - Cont.</b>	
HINGE, Rear Door Lower .....	23.018-1	HOSE, Coolant Temperature Override Switch To Tubes .....	3.051-16
HINGE, Rear Door Upper.....	23.017-1	HOSE, Crankcase Vent Valve To Tee And To Manifold .....	1.117-1
HINGE, Rear License Plate.....	14.098-12	HOSE, Cylinder Head Cover To Air Cleaner .	1.116-1
HINGE, Rear Seat Back Catch Arm And Outer Latch Half .....	29.221-2	HOSE, Cylinder Head Heater Tube To Heater Core .....	13.050-1
HINGE, Rear Seat Back Latch Half.....	29.221-1	HOSE, Defroster.....	13.118-3
HINGE, Rear Seat Back Pivot Pin And Outer Half.....	29.221-3	HOSE, Distributor Vacuum Control Solenoid To Carburetor Vacuum.....	3.051-12
HINGE, Tailgate.....	23.006-6	HOSE, Distributor Vacuum Control Solenoid To Thermal Vacuum Switch And Cold Coolant Switch.....	3.051-13
HINGE, Tailgate.....	31.150-1	HOSE, Distributor Vacuum Control Solenoid To Tube.....	3.051-11
HINGE, Top Enclosure Liftgate.....	28.572-1	HOSE, Distributor Vacuum Control To Tube..	3.048-3
HINGE, Windshield.....	25.005-1	HOSE, Diverter Valve To Tee.....	3.050-6
HINGE ASSEMBLY, Rear Quarter Pivoting Window .....	25.027-11	HOSE, Exhaust Emission Air Pump To Backfire Valve.....	4.585-1
HOLD DOWN KIT, Brake Shoe.....	8.004-3	HOSE, Exhaust Emission Backfire Valve To Fitting.....	4.578-1
HOOD .....	12.001-1	HOSE, Exhaust Emission Backfire Valve To Injection Manifold .....	4.600-1
HOOD, Gear Selector Dial Lamp .....	7.539-1	HOSE, Exhaust Emission Backfire Valve To Tee Or Air Injection Manifold .....	4.565-1
HOOK, Coat .....	27.130-1	HOSE, Exhaust Emission Backfire Valve Trigger To Carburetor Vacuum Diaphragm.	4.622-1
HOOK, Pintle .....	11.066-2	HOSE, Front Axle Breather.....	9.301-3
HOOK, Spare Tire Retaining .....	14.160-1	HOSE, Front Wheel Disc Brakes .....	8.855-1
HOOK KIT, Pintle .....	11.066-1	HOSE, Fuel Pump In-Line Filter To Tube...	4.110-4
HORN, Dual.....	3.105-1	HOSE, Gasoline Tank Filler Air Vent.....	4.141-20
HORN, Low Sound.....	3.106-2	HOSE, Gasoline Tank To Fuel Tank Reducing.....	4.160-5a
HORN, Single .....	3.105-2	HOSE, Heater Core Drain .....	13.028-3
HORN KIT, Low Sound Horn.....	3.106-1	HOSE, Heater Core To Manifold.....	13.050-4
HOSE, Air Cleaner To Sensor And/OR Intake Manifold .....	4.088-14	HOSE, Heater Water.....	13.050-4a
HOSE, Air Conditioning (Compressor To Condenser) .....	13.440-1	HOSE, Hydramatic Transmission Vacuum....	6.515-2
HOSE, Air Conditioning (Evaporator To Compressor) .....	13.440-4	HOSE, Hydraulic Clutch .....	5.216-1
HOSE, Air Conditioning (Quick Coupling To Evaporator).....	13.440-3b	HOSE, Inlet.....	2.038-1
HOSE, Air Conditioning (Receiver To Quick Coupling) .....	13.440-3	HOSE, Main Tank Inlet To Auxiliary Gasoline Tank Outlet .....	4.131-14
HOSE, Air Conditioning Receiver To Evaporator .....	13.440-3e	HOSE, Modulator To Vacuum Control Valve..	4.005-3
HOSE, Air Deflector Drain .....	22.020-3b	HOSE, Oil Filler Cap to Air Cleaner.....	1.116-3
HOSE, Automatic Speed Control Vacuum .....	4.367-1	HOSE, Outlet.....	2.038-2
HOSE, Auxiliary Gasoline Tank Filler Neck To Main Tank .....	4.131-13	HOSE, Power Brake Vacuum Unit .....	8.460-6
HOSE, Auxiliary Gasoline Tank To Filler Neck .....	4.131-11	HOSE, Power Steering Pump Reservoir To Steering Gear Return.....	10.470-2
HOSE, Brake Tube.....	8.116-1	HOSE, Power Steering Pump To Steering Gear Pressure .....	10.470-1
HOSE, Canister To Air Cleaner.....	4.144-13	HOSE, Radiator Core Overflow.....	2.020-3
HOSE, Canister To Carburetor .....	4.144-1b	HOSE, Tee To Manifold Vacuum.....	3.050-7
HOSE, Canister To Vent Line .....	4.144-14	HOSE, Tee To Vacuum Fitting.....	4.006-5
HOSE, Carburetor Clean Air.....	4.020-8	HOSE, Thermostat Housing To Heater Core..	13.050-3
HOSE, Check Valve Connector And Gasoline Tank Vent Tube.....	4.142-20	HOSE, Thermo Vacuum Switch To Cold Coolant Switch.....	3.050-8
HOSE, Check Valve Hose To Connector Hose And To Vapor Storage Canister.....	4.142-18	HOSE, Vacuum .....	4.701-1
HOSE, Check Valve To Connector Hose And To Gasoline Tank Vent Tubes .....	4.142-19	HOSE, Vacuum (Bulk) .....	13.020-9a
HOSE, Check Valve Vent Line Hose To Check Valve .....	4.142-17		
HOSE, Check Valve Vent Line To Canister..	4.144-12		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>H - Cont.</b>		<b>- I -</b>	
HOSE, Vacuum Storage Tank To Manifold....	13.020-4	INHIBITOR, Steering Column Lock.....	10.337-6
HOSE, Vacuum Tee To Diaphragm On Engine	18.585-8	INSERT, Brake Tube Fitting To Wheel Cylinder .....	8.068-4
HOSE, Vacuum Valve Or Distributor To Tube.....	3.050-3	INSERT, Drive Pulley .....	1.046-6
HOSE, Vacuum Valve To Tee.....	3.050-4	INSERT, Horn Blowing Cover.....	3.401-6
HOSE, Valve Assembly To Tee.....	18.585-6	INSERT, Liftgate Support Housing Cap .....	28.600-2
HOSE, Valve To Diaphragm Control .....	18.585-5	INSERT, Steering Wheel Cover.....	10.280-5
HOSE, Valve To Tee.....	4.006-3	INSULATION, Air Conditioning Hose .....	13.440-10
HOSE, Water Pump To Heater Core.....	13.050-2	INSULATION, Blower Motor .....	13.072-17
HOSE, Water Pump To Thermostat Housing Bypass.....	2.080-8	INSULATION, Dash .....	29.309-1
HOSE, Windshield Washer .....	22.053-1	INSULATION, Evaporator Housing .....	13.488-1a
HOSE ASSEMBLY, Hydramatic Transmission Oil Cooler Lines To Radiator.....	6.631-3	INSULATION, Front Floor Pan (Front).....	29.309-4
HOUSING, Air Conditioning Blower Motor...	13.072-4	INSULATION, Front Floor Pan (Rear) .....	29.309-5
HOUSING, Air Conditioning Evaporator Core.....	13.448-1	INSULATION, Front Floor Tunnel.....	29.309-6
HOUSING, Cigar Lighter .....	3.352-4	INSULATION, Hood .....	12.001-2
HOUSING, Clutch .....	5.054-1	INSULATOR, Automatic Speed Control Wiring Harness .....	4.330-5
HOUSING, Column Gear Shift Upper Lever...	7.020-6	INSULATOR, Carburetor.....	4.004-2
HOUSING, Front Axle .....	9.303-1	INSULATOR, Center Horn Button Receiver ..	3.400-17
HOUSING, Heater And Defroster Blower....	13.072-3	INSULATOR, Directional Signal.....	3.325-1
HOUSING, Heater Control.....	13.017-2a	INSULATOR, Dome Lamp Harness In Door Pillar.....	3.346-8
HOUSING, Hydramatic Transmission Direct Clutch.....	6.562-1	INSULATOR, Exhaust Pipe Rear Support....	4.200-1
HOUSING, License Plate Lamp .....	3.335-4	INSULATOR, Front Engine Mounting.....	1.009-1
HOUSING, License Plate Lamp .....	3.336-4	INSULATOR, Gasoline Tank Mounting Bracket.....	4.130-7
HOUSING, Plenum Chamber.....	13.012-2a	INSULATOR, Gear Shift Lever Trunnion To Bellcrank .....	7.125-10
HOUSING, Rear Axle .....	9.003-1	INSULATOR, Instrument Cluster Socket.....	3.525-3
HOUSING, Rear Propeller Shaft Universal Joint .....	9.113-1	INSULATOR, Muffler And Tail Pipe Support.	4.219-1
HOUSING, Reduction Unit.....	18.610-1	INSULATION, Rear Auxiliary Floor .....	29.309-7
HOUSING, Steering Column.....	10.336-1	INSULATOR, Steering Gear Jacket Tube To Instrument Panel Bracket.....	10.339-3
HOUSING, Steering Gear.....	10.292-1	INSULATOR, Tail Pipe Support.....	4.234-3
HOUSING, Thermostat.....	2.102-1	INSULATOR, Transfer Case.....	18.185-1
HOUSING, Turn Signal Switch .....	3.321-3	INSULATOR, Transfer Case (Plate And Bracket) .....	18.197-1
HOUSING, Warning Lamp.....	3.505-2	INSULATOR, Transfer Case And Transmission Torque Reaction.....	18.210-1
HOUSING ASSEMBLY, Heater.....	13.012-1	INSULATOR, Transfer Case Mounting.....	18.190-6
HOUSING ASSEMBLY, Heater And Defroster Damper .....	13.113-1	INSULATOR, Wire (Female) .....	3.165-4
HOUSING ASSEMBLY, Heater Damper .....	13.114-1	INSULATOR, Wire (Male) .....	3.165-3
HOUSING ASSEMBLY, Parking And Front Directional Lamp.....	3.292-2	INTERLOCK, Transfer Case Shift Rod.....	18.100-2
HOUSING ASSEMBLY, Power Steering Gear .	10.520-1		
HOUSING ASSEMBLY, Tail And Stop Lamp..	3.303-1	<b>- J -</b>	
HUB, Drive .....	18.520-2	JACK ASSEMBLY.....	14.138-1
HUB, Hydramatic Transmission Direct Clutch.....	6.562-3	JACKET, Steering Gear Jacket Tube .....	10.338-6
HUB, Hydramatic Transmission Forward Clutch.....	6.595-4	JET, Windshield Washer Nozzle.....	22.053-6
HUB, Lockup Coupling .....	18.550-3	JOINT KIT, Rear Propeller Shaft Universal..	9.113-3
HUB, Reduction Unit Collar.....	18.615-15	JUMPER, Backup Light Switch .....	3.318-1a
HUB, Reduction Unit Collar Plate .....	18.615-14		
HUB, Reduction Unit Collar Shift .....	18.615-16		
HUB ASSEMBLY, Front Brake.....	8.243-1		
HUB ASSEMBLY, Rear Brake.....	8.243-2		



## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>- K -</b>		<b>L - Cont.</b>	
KEY, Camshaft Sprocket.....	1.134-3	LATCH, Rear Liftgate Window.....	28.712-1
KEY, Crankshaft Sprocket.....	1.132-2	LATCH, Rear Seat Back .....	29.226-1
KEY, Front Door Lock Cylinder.....	23.085-1	LATCH, Tailgate.....	23.039-1
KEY, Glove Box Door Lock .....	22.073-5a	LATCH, Tailgate Lock.....	31.132-1
KEY, Ignition Switch Lock .....	3.135-4	LEAD TUBE, Condenser To Receiver .....	13.440-2
KEY, Liftgate Handle Lock Cylinder .....	28.575-3	LEAF, Front Spring No. 1 .....	11.072-1
KEY, Power Steering Pump Drive Shaft .....	10.440-4	LEAF, Front Spring No. 2 .....	11.072-2
KEY, Tailgate Lock Cylinder.....	23.085-3	LEAF, Rear Leaf Spring No. 1 .....	11.104-1
KEY, Vibration Damper Hub.....	1.047-1	LEAF, Rear Leaf Spring No. 2 .....	11.104-2
KIT, Brake Spring.....	8.008-10	LENS, Backup Lamp .....	3.317-1
KNOB, Air Conditioning Blower Switch.....	13.080-3	LENS, Clock .....	3.369-2
KNOB, Air Conditioning Temperature Control Thermostat.....	13.477-2	LENS, Courtesy Lamp.....	3.340-4a
KNOB, Cigar Lighter.....	3.352-3	LENS, Domelamp.....	3.346-3
KNOB, Clock Reset .....	3.360-2	LENS, License Plate Lamp.....	3.339-1
KNOB, Directional Signal Lever .....	3.324-3	LENS, Parking And Front Directional Lamp (Inner).....	3.292-4
KNOB, Front Door Lock Push .....	23.054-1	LENS, Parking And Front Directional Signal Lamp .....	3.292-5a
KNOB, Front Passenger Seat Actuating Rod .....	29.103-8	LENS, Parking And Front Directional Lamp (Outer) .....	3.292-5
KNOB, Front Seat Back Latch Actuating .....	29.105-36	LENS, Pick-Up Box Cargo Lamp .....	3.671-3
KNOB, Gear Shift Lever .....	7.030-1	LENS, Rear Domelamp.....	3.670-3
KNOB, Hazard Warning .....	3.690-2	LENS, Strobe Warning Lamp .....	15.516-2
KNOB, Heated Rear Window Switch .....	3.770-3	LENS, Tail And Stop Lamp.....	3.306-1
KNOB, Heater And Defroster Switch .....	13.078-1c	LENS KIT, Backup Lamp .....	3.317-1a
KNOB, Heater And Defroster Temperature Control.....	13.017-3a	LEVER, Brake Shoe Automatic Adjusting ...	8.012-1
KNOB, Lighting Switch .....	3.150-1	LEVER, Brake Shoe Parking Brake.....	8.024-1
KNOB, Radio Speaker Control .....	15.320-12d	LEVER, Clutch Throwout .....	5.123-1
KNOB, Rear Door Lock Push.....	23.054-2	LEVER, Column Gear Shift Upper .....	7.020-1
KNOB, Reduction Unit Shift Lever .....	18.660-3	LEVER, Directional Signal.....	3.324-2
KNOB, Remote Control Valve Assembly .....	18.585-3	LEVER, Floor Gear Shift .....	7.001-1
KNOB, Station Selector .....	15.320-3	LEVER, Gear Shift.....	7.130-5
KNOB, Tailgate Window Switch.....	23.330-1a	LEVER, Hydramatic Transmission Detent... ..	6.551-7
KNOB, Transfer Case Shift Lever.....	18.130-1	LEVER, Hydramatic Transmission Gear Shift .....	7.130-5
KNOB, Volume Control.....	15.320-4	LEVER, Reduction Unit Control .....	18.630-1
KNOB, Windshield Clamp Hold Down .....	25.005-4a	LEVER, Reduction Unit Shift .....	18.660-1
KNOB, Windshield Wiper And Washer Control .....	22.039-2	LEVER, Steering Wheel Actuator Shoe Release.....	10.848
KNUCKLE, Steering.....	10.004-1	LEVER, Steering Wheel Release.....	10.801-1
<b>- L -</b>		LEVER, Transfer Case Shift .....	18.125-1
LAMP, Ash Receiver.....	22.092-4	LEVER, Transfer Case Shifting.....	18.180-1
LAMP, Brake Pressure Warning .....	3.651-1	LEVER ASSEMBLY, Foot Operated Parking Brake.....	8.180-1
LAMP, Courtesy .....	3.349-3	LEVER ASSEMBLY, Reduction Unit Shift... ..	18.630-4
LAMP, Front Fender Side Marker.....	3.720-1	LID, Front Floor Pan Tool Compartment Panel.....	20.006-2
LAMP, Glove Box.....	3.378-2	LIFT, Jack .....	14.140-2
LAMP, Instrument Panel Controls Identification .....	22.100-15	LIFTGATE, Top Enclosure .....	28.570-1
LAMP, Parking And Front Directional Signal .....	3.292-1	LIGHTER ASSEMBLY, Cigar.....	3.352-2
LAMP, Rear Side Marker .....	3.740-1	LINER, Body Sill .....	20.001-11
LAMP ASSEMBLY, Backup.....	3.315-1	LINK, Brake Master Cylinder.....	8.054-1
LAMP ASSEMBLY, License.....	3.335-1	LINK, Brake Shoe To Cylinder Operating... ..	8.016-1
LAMP ASSEMBLY, Tail, Stop And Rear Directional.....	3.300-1	LINK, Clutch Release Rod .....	5.160-1c
LATCH, Front Door.....	23.050-1	LINK, Front Suspension Sway Stabilizer To Spring Tie Plate Connecting.....	10.260-6
LATCH, Front Floor Pan Tool Compartment Lid.....	20.006-6	LINK, Power Brake Unit To Pedal .....	8.420-1
LATCH, Passenger Seat Lock .....	29.105-21	LINK, Tailgate Chain.....	23.006-6b
LATCH, Rear Door.....	23.051-1		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>L - Cont.</b>		<b>M - Cont.</b>	
LINK, Tailgate Chain Cap .....	31.165-1	MOTOR, Tailgate Electric Operated Window Regulator .....	23.310-1
LINK, Transfer Case Shift Control Rod .....	18.170-1	MOTOR, Vacuum Air Valve .....	13.020-11
LINK, Transfer Case Shifting Lever .....	18.182-1	MOTOR, Windshield Wiper .....	22.027-1
LINK, Transfer Case Shifting Lever To Transfer Case .....	18.180-10	MOULDING, Armrest .....	29.075-4
LINK, Windshield Wiper Motor Drive .....	22.035-1	MOULDING, Cap Flat Trim .....	28.720-1
LITTER BAG, Front Door Trim Panel .....	29.070-5	MOULDING, Front Body Pillar Drip .....	20.395-2
LOCK, Gasoline Gauge To Gasoline Tank .....	3.615-4	MOULDING, Front Door Trim Panel .....	23.198-1
LOCK, Gasoline Tank Outlet And Return Tube Assembly .....	4.160-15	MOULDING, Headlining Retainer Cover .....	29.014-6
LOCK, Hood .....	12.061-1	MOULDING, Headlining Retainer End Cap .....	29.014-5
LOCK, Rear Post Half .....	31.125-1	MOULDING, Headlining Side Retainer "J" .....	29.014-1
LOCK, Steering Gear Shaft .....	10.703-1	MOULDING, Instrument Cluster And Radio Speaker Opening .....	22.056-6
LOCK, Tailgate .....	23.006-6a	MOULDING, Roof Edge Trim .....	28.718-1
LOCK, Tailgate Half .....	31.120-1	MOULDING, Side Roof Rail Drip .....	20.395-1
LOCK, Tailgate Slam .....	28.580-1	MOULDINGS, Exterior Ornamentation .....	26
LOCK, Upper Hood .....	12.060-7	MOULDINGS, Lower Ornamentation .....	26
LOCK, Valve Spring Retainer .....	1.085-1	MOULDINGS, Rear Quarter Finish .....	26
LOCK ASSEMBLY, Glove Box .....	22.073-1	MOULDINGS, Rear Window Finish .....	26
LOCK PLATE, Rear Axle Bearing Nut .....	8.312-4	MOULDINGS, Upper Ornamentation .....	26
LOOM, Brake Tube Master Cylinder To Valve	8.101-3	MOULDINGS, Windshield Finish .....	26
LOOP, Footman .....	12.001-15	MUFFLER .....	4.210-1
LOOP, Windshield Hold Down Footman .....	25.009-1		
LOUVER AND BEZEL ASSEMBLY .....	13.515-1	<b>- N -</b>	
LOUVER ASSEMBLY .....	13.515-2	NAMEPLATE, Instrument Panel .....	22.100-10
LOWER ORNAMENTATION .....	26	NECK, Gasoline Tank Filler Upper .....	4.141-1
LUBRICANT .....	18.500-5	NIPPLE, Heater Hose To Manifold .....	13.050-6
		NIPPLE, Power Brake Vacuum Unit .....	8.460-5
<b>- M -</b>		NOZZLE, Defroster .....	13.118-1
MAINSHAFT, Reduction Unit .....	18.615-4	NOZZLE, Windshield Washer .....	22.053-5
MANIFOLD, Exhaust Emission Air Injection .....	4.538-1	NO. 1 LEAF, Rear Leaf Spring .....	11.104-1
MANIFOLD, Intake .....	1.067-1	NO. 2 LEAF, Rear Leaf Spring .....	11.104-2
MANIFOLD ASSEMBLY, Exhaust .....	1.067-8	NUT, Brake Shoe Adjusting Screw .....	8.014-3
MASK, Instrument Cluster .....	3.515-4	NUT, Carburetor Air Cleaner Retainer .....	4.088-11
MAST, Radio Front Fender Antenna .....	15.030-1a	NUT, Carburetor Choke Heater Tube .....	4.020-3
MAT, Front Floor .....	29.294-1	NUT, End Rail Adjusting Stud .....	15.250-8b
MAT, Front Floor Extension .....	29.294-2	NUT, External Spare Tire Retaining .....	14.206-1
MAT, Rear Auxiliary Floor .....	29.420-1	NUT, Front Axle Pinion .....	9.350-4
MAT, Rear Floor .....	29.302-1	NUT, Front Wheel Braking Retaining .....	8.296-6
MEDALLION - NAMEPLATE, Instrument Panel .....	22.100-10a	NUT, Gasoline Gauge Wire To Gauge .....	3.615-6
MIRROR, Inside Rear View .....	27.084-1	NUT, Internal Spare Tire Retaining .....	14.160-5
MIRROR HEAD, Outside Rear View .....	15.270-3	NUT, Lighting Switch To Instrument Panel .....	3.145-4
MIRROR KIT, Outside Rear View .....	15.270-2	NUT, Lower Dovetail To Crossmember .....	12.060-4
MIRROR MOUNTING SUPPORT KIT, Inside Rear View .....	25.002-2	NUT, Power Steering Gear Pitman Shaft Adjusting Screw .....	10.600-1
MODULATOR, Throttle .....	4.005-1	NUT, Power Steering Gear Upper Thrust Bearing Adjuster Lock .....	10.637-1
MODULATOR ADAPTER AND LEVER KIT, Hydramatic Transmission .....	6.655-2	NUT, Rear Axle Pinion .....	9.050-4
MODULATOR ASSEMBLY, Hydramatic Transmission Vacuum .....	6.655-1	NUT, Rear Wheel Bearing Adjusting .....	8.312-5
MOTOR, Air Conditioning Blower .....	13.072-2	NUT, Spare Tire Retaining .....	14.206-1
MOTOR, Carburetor Air Cleaner Air Temperature Control Vacuum .....	4.088-13	NUT, Steering Gear Cross Shaft Adjusting Screw .....	10.308-2
MOTOR, Heater And Defroster .....	13.072-1	NUT, Steering Gear Worm Ball Bearing Adjuster Lock .....	10.326-2
		NUT, Threespeed Transmission Main Shaft .....	6.068-2
		NUT, Tie Down Stud .....	15.250-6b

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>N - Cont.</b>		<b>- P -</b>	
NUT, Transfer Case Front Yoke To Shaft . . .	18.110-3	PAD, Antenna Mounting . . . . .	15.030-4
NUT, Transfer Case Rear Yoke To Shaft . . .	18.115-3	PAD, Front Bucket Seat Back Kickpad Panel	29.112-1
NUT, Transfer Case Shift Lever Knob . . . . .	18.130-2	PAD, Front Seat Back . . . . .	29.108-1
NUT, Transfer Case Yoke To Output Shaft . .	18.570-3	PAD, Front Seat Center Armrest . . . . .	29.144-1
NUT, Turning Radius Stop Belt Adjusting . . .	10.010-2	PAD, Front Seat Center Cushion . . . . .	29.159-1
NUT, Upper Dovetail To Crossmember . . . . .	12.060-3	PAD, Front Seat Cushion . . . . .	29.164-1
<b>- O -</b>		PAD, Front Seat Cushion . . . . .	29.168-1
"O" RING, Air Conditioning Suction And Discharge Valve To Compressor . . . . .	13.405-2a	PAD, Instrument Panel Crash . . . . .	22.100-2
"O" RING, Brake Master Cylinder Piston Stop . . . . .	8.050-2	PAD, Longitudinal Seat Back . . . . .	29.205
"O" RING, Diaphragm Control . . . . .	18.565-2	PAD, Longitudinal Seat Cushion . . . . .	29.206
"O" RING, Engine Heater . . . . .	15.145-2	PAD, Rear Auxiliary Floor Carpet . . . . .	29.421-2a
"O" Ring, Fourspeed Transmission Shifting Pivot . . . . .	6.085-3	PAD, Rear Seat Back . . . . .	29.224-1
"O" RING, Hydramatic Transmission Center Support . . . . .	6.556-6	PAD, Rear Seat Cushion (Cotton) . . . . .	29.194-1
"O" RING, Hydramatic Transmission Manual Shaft . . . . .	6.551-3	PAD, Rear Seat Cushion (Foam) . . . . .	29.194-2
"O" RING, Hydramatic Transmission Oil Pump To Case . . . . .	6.535-10	PAD, Roof Panel Silencer . . . . .	20.420-4
"O" RING, Hydramatic Transmission Parking Brake Pawl Shaft . . . . .	6.552-3	PAD, Roof Trim Panel . . . . .	29.015-3
"O" RING, Oil Cooler Line Elbow To Transmission Seal . . . . .	6.631-5	PAD, Skid Plate To Tank . . . . .	4.131-9
"O" RING, Output Shaft Seal . . . . .	6.635-3	PAN, Hydramatic Transmission Oil . . . . .	6.507-1
"O" RING, Power Brake Master Cylinder Piston Stop Bolt . . . . .	8.515-2a	PAN ASSEMBLY, Center Floor . . . . .	20.007-1
"O" RING, Power Steering Gear Housing End Plug Seal . . . . .	10.537-1	PAN ASSEMBLY, Engine Oil . . . . .	1.151-1
"O" RING, Power Steering Gear Rack- Piston Backup Seal . . . . .	10.582-1	PAN ASSEMBLY, Rear Floor . . . . .	20.035-1
"O" RING, Power Steering Gear Upper Thrust Bearing Adjuster Seal . . . . .	10.646	PANEL, Auxiliary Gasoline Tank Side . . . . .	4.131-19
"O" RING, Quick Disconnect Coupling . . . . .	13.440-3d	PANEL, Body Lock Pillar Finish . . . . .	20.205-4
"O" RING, Reduction Unit Shift Lever . . . . .	18.630-3	PANEL, Body Rear Center Lower . . . . .	20.330-1
"O" RING KIT, Power Steering Gear . . . . .	10.550-1	PANEL, Body Side . . . . .	20.172-2
OIL, Motor . . . . .	1.207-1	PANEL, Body Side Lower . . . . .	31.050-1
OIL SEAL, Front Axle Pinion Bearing . . . . .	9.364-1	PANEL, Body Side Upper Rear Inside . . . . .	20.172-3
OIL SEAL, Front Axle Shaft Inner . . . . .	9.368-3	PANEL, Cap Roof . . . . .	28.703-1
OIL SEAL, Rear Axle Pinion Bearing . . . . .	9.064-1	PANEL, Cap Side . . . . .	28.702-1
OIL SEAL, Transfer Case Front Bearing Cap .	18.015-4	PANEL, Center Pillar Trim . . . . .	29.019-1
OIL SEAL, Transfer Case Rear Bearing Cap .	18.080-5	PANEL, Cowl Side Inner . . . . .	20.155-3
ORNAMENTATION, Exterior . . . . .	26	PANEL, Cowl Side Outer . . . . .	20.155-1
OUTLET, Heater Housing Air . . . . .	13.012-2b	PANEL, Cowl Top . . . . .	20.150-1
OUTPUT SHAFT KIT, Hydramatic Trans- mission To Rear Internal Gear . . . . .	6.634-3	PANEL, Cowl Trim . . . . .	29.010-1
OVERHAUL REPAIR KIT, Hydramatic Transmission . . . . .	6.501-2	PANEL, Cowl Ventilator Intake Cover . . . . .	22.016-1
OVERLAY, Accelerator Pedal Trim . . . . .	4.040-5	PANEL, Front Cowl Side Outer . . . . .	20.155-2
OVERLAY, Bumper Bar Rubber . . . . .	12.184-2	PANEL, Front Door Outer . . . . .	23.001-2
OVERLAY, Door Armrest . . . . .	23.215-1	PANEL, Front Door Trim . . . . .	29.070-1
OVERLAY, Instrument Cluster Bezel . . . . .	3.510-2	PANEL, Front Floor Pan Tool Compartment .	20.006-1
OVERLAY, Instrument Panel . . . . .	22.100-10b	PANEL, Front Louver Housing And Control .	13.515-3
		PANEL, Front Quarter Trim . . . . .	29.460-1
		PANEL, Front Stone Shield . . . . .	20.117-1
		PANEL, Grille Face Assembly . . . . .	20.116-1
		PANEL, Instrument . . . . .	22.056-2
		PANEL, Rear Door Lock Pillar Trim . . . . .	29.023-1
		PANEL, Rear Door Trim . . . . .	29.071-1
		PANEL, Rear Floor Pan To Side Sill Extension . . . . .	20.035-5
		PANEL, Rear Floor Riser . . . . .	29.202-1
		PANEL, Rear Station Wagon Door Outer . . . . .	23.002-2
		PANEL, Rear Quarter Center Inner . . . . .	20.267-1
		PANEL, Rear Quarter Lower . . . . .	12.125-2
		PANEL, Rear Quarter Lower Front Inner . . . . .	20.269-1
		PANEL, Rear Quarter Lower Inner . . . . .	20.268-1
		PANEL, Rear Quarter Trim . . . . .	29.460-2

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>P - Cont.</b>		<b>P - Cont.</b>	
PANEL, Rear Quarter Trim Upper .....	29.026-1	PIN, Front Axle Differential Shaft .....	9.336-3
PANEL, Rear Quarter Upper .....	12.125-1	PIN, Front Door Restraint Bracket .....	23.015-6
PANEL, Rear Quarter Upper Inner .....	20.266-1	PIN, Front Floor Pan Tool Compartment	
PANEL, Rocker Assembly .....	20.175-1	Lid Hinge .....	20.006-3
PANEL, Splash Apron .....	12.077-1	PIN, Front Seat Frame Pivot .....	29.105-29
PANEL, Tailgate Inner .....	23.006-2	PIN, Hinge License Plate .....	14.098-13
PANEL, Tailgate Opening Lower Pillar		PIN, Horn Blowing Contact .....	3.400-13
Closing .....	20.315-4	PIN, Hydramatic Transmission Front Servo..	6.530-5
PANEL, Tailgate Opening Side Pillar		PIN, Hydramatic Transmission Manual Shaft	
Closing .....	20.315-5	Anchor .....	6.551-4
PANEL, Windshield Header .....	20.150-4	PIN, Hydramatic Transmission Oil Pump....	6.535-8
PANEL ASSEMBLY, Body Side .....	20.172-1	PIN, Hydramatic Transmission Rear Band...	6.546-1
PANEL ASSEMBLY, Body Side .....	31.030-1	PIN, Hydramatic Transmission Valve Body	
PANEL ASSEMBLY, Body Rear .....	20.325-1	Plug .....	6.660-9
PANEL ASSEMBLY, Dash .....	20.120-1	PIN, Oil Pump To Cylinder Block Dowel....	1.154-3
PANEL ASSEMBLY, Front .....	31.020-1	PIN, Power Brake Unit Operating	
PANEL ASSEMBLY, Front Floor .....	20.005-2	Bellcrank Lever Clevis .....	8.430-4
PANEL ASSEMBLY, Inner Cowl Top .....	20.150-5	PIN, Power Brake Unit Operating	
PANEL ASSEMBLY, Rear Quarter Inner....	20.265-1	Bellcrank Lever Pivot .....	8.430-2
PANEL ASSEMBLY, Rear Wheelhouse .....	20.272-1	PIN, Power Steering Pump Ring To Body	
PANEL ASSEMBLY, Roof .....	20.420-1	Dowel .....	10.435-5
PANEL EXTENSION, Lower Rear Quarter...	12.125-3	PIN, Rear Axle Differential Shaft .....	9.036-3
PAWL, Front Passenger Seat Latching .....	29.103-14	PIN, Rear Door Hinge .....	23.023-1
PAWL, Front Seat Back Latch Control .....	29.105-32	PIN, Rear Quarter Window Handle Spring....	25.027-7
PAWL, Hydramatic Transmission Parking		PIN, Reduction Unit Spring .....	18.620-3
Brake .....	6.552-1	PIN, Seat Lock Latch Spring .....	29.105-24
PAWL, Transfer Case Shift Control Rod....	18.160-2	PIN, Steering Wheel Actuator Lock Shoe	
PEDAL, Accelerator .....	4.040-1	Retaining .....	10.845-1
PEDAL, Brake .....	8.140-1	PIN, Steering Wheel Actuator Pivot .....	10.832-1
PEDAL, Clutch .....	5.135-1	PIN, Steering Wheel Actuator Shoe Release	
PEG, Rear Leaf Spring To Axle .....	11.100-7	Lever .....	10.849-1
PICK-UP BOX, Body Hold Down Bracket....	31.005-3	PIN, Tailgate Hinge .....	23.006-8
PICK-UP BOX ASSEMBLY .....	31.001-1	PIN, Threespeed Transmission Countershaft.	6.159-2
PILLAR, Lower Body Front .....	20.195-3	PIN, Threespeed Transmission Guide Control	
PILLAR, Lower Body Lock .....	20.205-3	Housing .....	6.018-4a
PILLAR, Rear Quarter Body Lower Lock....	20.235-2	PIN, Threespeed Transmission Idler Gear	
PILLAR, Rear Quarter Body Upper Lock ...	20.235-1	Shaft Retaining .....	6.168-2
PILLAR, Upper Body Front .....	20.195-2	PIN, Timing Case Cover To Cylinder Block	
PILLAR, Upper Tailgate Inner Opening....	20.315-3	Dowel .....	1.120-3
PILLAR, Upper Tailgate Outer Opening....	20.315-2	PIN, Transmission Idler Gear Shaft	
PILLAR ASSEMBLY, Body Center .....	20.220-1	Retaining .....	6.168-2
PILLAR ASSEMBLY, Body Front .....	20.195-1	PIN, Transmission Speed Finder Interlock...	6.215-1
PILLAR ASSEMBLY, Tailgate Opening....	20.315-1	PIN, Valve Rocker Arm Shaft Plug .....	1.098-6
PIN, Automatic Speed Control Chain Clevis .	4.390-2	PIN SET, Piston .....	1.149-1
PIN, Brake Shoe Hold Down Spring Or Clip		PINCHWELT, Roof Rail .....	29.014-4
Retaining .....	8.008-7	PINION CAGE ASSEMBLY, Reduction Unit..	18.615-1
PIN, Column Gear Shift Upper Lever Pivot ..	7.020-3	PINION OUTPUT AND REACTION KIT,	
PIN, Cylinder Head To Block Dowel .....	1.059-3	Hydramatic Transmission .....	6.590-2
PIN, Engine Oil Pump Release Valve Spring		PIPE, Exhaust .....	4.178-1
Retainer Cotter .....	1.176-3	PIPE, Exhaust Extension .....	4.178-2
PIN, Floor Gear Shift Lever Fulcrum .....	7.001-4	PIPE, Hydramatic Transmission Oil	
PIN, Fourspeed Transmission Gear Shift		Strainer Intake .....	6.509-2
Interlock .....	6.018-7	PIPE, Hydramatic Transmission Valve To	
PIN, Fourspeed Transmission Reverse		Governor .....	6.660-10
Plunger Poppet Retainer .....	6.020-8	PIPE, Tail .....	4.227-1
PIN, Fourspeed Transmission Shifting Arm		PISTON .....	1.143-1
Pivot .....	6.085-4	PISTON, Disc Brake Caliper .....	8.810-8
		PISTON, Hydramatic Front Servo .....	6.530-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>P - Cont.</b>		<b>P - Cont.</b>	
PISTON, Hydramatic Transmission Direct Clutch Assembly .....	6.562-4	PLATE, Hydramatic Transmission Direct Clutch Driven.....	6.562-7
PISTON, Hydramatic Transmission Forward Clutch .....	6.595-3	PLATE, Hydramatic Transmission Forward Clutch Drive.....	6.595-5
PISTON, Hydramatic Transmission Front Accumulator.....	6.533-1	PLATE, Hydramatic Transmission Forward Clutch Driven.....	6.595-6
PISTON, Hydramatic Transmission Intermediate Clutch.....	6.554-1a	PLATE, Hydramatic Transmission Forward Clutch Driven Wave.....	6.595-7
PISTON, Hydramatic Transmission Rear Servo .....	6.540-1	PLATE, Hydramatic Transmission Inter- mediate Clutch Driving.....	6.554-2
PISTON, Hydramatic Transmission Rear Servo Accumulator.....	6.548-1	PLATE, Hydramatic Transmission Inter- mediate Clutch Reaction .....	6.554-4
PISTON, Master Cylinder Secondary.....	8.044-1	PLATE, Hydramatic Transmission Inter- mediate Clutch Reaction Wave .....	6.554-5
PISTON, Power Brake Master Cylinder Secondary .....	8.515-1	PLATE, Hydramatic Transmission Valve Body Spacer.....	6.660-11
PISTON KIT, Hydramatic Transmission Intermediate Clutch.....	6.554-1	PLATE, Instrument Cluster Gauge .....	3.506-1
PISTON SET, Front Brake Wheel Cylinder ..	8.078-1	PLATE, Insulator To Frame Bracket .....	4.219-2
PISTON SET, Rear Brake Wheel Cylinder...	8.078-2	PLATE, Liftgate Seal Backing .....	28.587-4
PIVOT, Clutch Release Idler .....	5.168-9	PLATE, Lock Striker Tapping .....	20.172-8
PIVOT, Fourspeed Transmission Reverse Shifting Arm.....	6.085-2	PLATE, Pintle Hook Reinforcement.....	11.066-4
PIVOT, Passenger Seat Hinge .....	29.105-11	PLATE, Power Steering Pump End.....	10.445-4
PIVOT, Valve Rocker Arm .....	1.101-1	PLATE, Power Steering Pump Pressure....	10.445-3
PIVOT ASSEMBLY, Clutch Throwout .....	5.130-1	PLATE, Power Steering Pump Pulley Belt Adjusting .....	10.455-5
PIVOT KIT, Front Door Ventilator Window Upper.....	23.118-1	PLATE, Rear Brake Support.....	8.002-1
PLATE, Air Conditioning Blower Motor Mounting.....	13.072-12	PLATE, Rear Door Scuff.....	27.007-1
PLATE, Blower Motor Switch.....	13.078-2a	PLATE, Rear Leaf Spring To Axle U-Bolt Tie .....	11.136-1
PLATE, Brake Shoe Anchor Pin Guide.....	8.022-1	PLATE, Reduction Unit Pinion Cage Lockup	18.615-8
PLATE, Clutch Master Cylinder Reinforcement .....	5.207-2	PLATE, Reduction Unit Ring Gear Collar...	18.615-11
PLATE, Column Gear Shift Upper Lever Housing Lock.....	7.020-7	PLATE, Regulator Mounting To Splash Apron	4.364-1
PLATE, Draw Bar .....	11.068-11	PLATE, Reinforcement .....	3.084-2
PLATE, Driven .....	5.040-1	PLATE, Ring Gear Flex.....	6.523-1
PLATE, Exhaust Gas Recirculating Valve Restrictor .....	4.700-7	PLATE, Seat Belt Anchor.....	27.290-7
PLATE, Fourspeed Transmission Adapter To Transfer Case .....	6.053-1	PLATE, Spare Tire Retaining .....	14.160-4
PLATE, Fourspeed Transmission Synchron- izer Low And Second .....	6.100-3a	PLATE, Steering Column Access Plate Cover Filler .....	20.120-16
PLATE, Fourspeed Transmission Synchron- izer Third And Fourth.....	6.100-3	PLATE, Steering Gear Jacket Tube To Toeboard Support.....	10.350-1
PLATE, Frame Reinforcement Rear .....	11.066-13	PLATE, Tailgate Hinge Cover.....	23.006-9
PLATE, Front Brake Support.....	8.001-1	PLATE, Tailgate Latch Handle Mounting ...	31.128-1
PLATE, Front Door Scuff .....	27.005-1	PLATE, Tailgate Side Wedge.....	23.006-27
PLATE, Front Leaf Spring To Axle "U" Bolt Tie.....	11.088-3	PLATE, Tail Light Mounting .....	12.125-4
PLATE, Front Seat Rear Corner Trim.....	29.103-5	PLATE, Threespeed Transmission Synchron- izer Clutch Shaft Low And Reverse .....	6.100-2
PLATE, Gasoline Tank Filler Neck Flange ..	4.141-18	PLATE, Threespeed Transmission Synchron- izer Clutch Shaft Second And High .....	6.100-1
PLATE, Gasoline Tank Skid .....	4.131-2	PLATE, Torque Reaction .....	18.200-6
PLATE, Gear Shift Operating Shaft Stop .....	7.038-8	PLATE, Transfer Case And Transmission Reinforcing .....	18.210-5
PLATE, Hydramatic Transmission Direct Clutch Backing.....	6.562-5	PLATE, Transfer Case Intermediate Gear Shaft Lock.....	18.050-7
		PLATE, Transmission Reverse Idler Shaft And Countershaft.....	6.172-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>P - Cont.</b>		<b>P - Cont.</b>	
PLATE, Windshield Catch Hold Down Tapping.....	25.007-1	PLUG, Transfer Case Filler.....	18.010-3
PLATE, Windshield Wiper Motor Cover.....	22.027-7c	PLUG, Transfer Case Shift Rod Interlock...	18.100-3
PLATE ASSEMBLY, Hydramatic Transmission Direct Clutch Drive.....	6.562-6	PLUG, Transfer Case Taper.....	18.001-4
PLATE ASSEMBLY, Hydramatic Transmission Intermediate Clutch Driving.....	6.554-3	PLUG, Transmission Control Housing.....	6.018-5
PLUG, Armrest Screw Hole.....	29.075-3	PLUG, Transmission Drain.....	6.005-5
PLUG, Camshaft Rear Bearing.....	1.041-2	PLUG, Transmission Filler Pipe.....	6.005-4
PLUG, Catalytic Converter.....	4.212-1a	PLUG, Valve Body (Pressure Regulator)....	6.660-12
PLUG, Cylinder Block Core Hole.....	1.038-1	PLUG, Valve Body (Valve Bore).....	6.660-13
PLUG, Cylinder Block Drain.....	1.020-3	PLUG, Vapor Canister Metering.....	4.144-1a
PLUG, Cylinder Block Oil Filter By-Pass...	1.038-2	PLUG KIT, License Plate Lamp.....	3.341-1a
PLUG, Cylinder Head Core.....	1.059-4	PLUNGER, Backup Lamp Switch.....	3.319-5
PLUG, Door Armrest Screw Hole.....	29.075-3	PLUNGER, Engine Oil Pump Release Valve.	1.176-1
PLUG, Engine Oil Pan Drain.....	1.151-3	PLUNGER, Fourspeed Transmission Shift Rail End Reverse.....	6.020-3
PLUG, Exhaust Manifold Air Emission Pump Tube Holes.....	1.067-9	PLUNGER, Transmission Gear Shift Interlock.....	6.018-6
PLUG, Fourspeed Transmission Expansion..	6.018-8	PLUNGER, Windshield Wiper And Washer ...	22.038-3
PLUG, Front And Rear Door Upper Corner...	23.016-5	POINTER, Gear Selector Dial.....	7.536-1
PLUG, Front Axle Differential Housing Filter.....	9.305-1	POLY WRAP, Carburetor Air Cleaner Element	4.088-6
PLUG, Front Door Front Upper Corner.....	23.016-6	POPPEY, Power Steering Gear Pressure Check Valve.....	10.530-1
PLUG, Front Floor Pan Drain Hole.....	20.005-6	POPPEY, Transmission Speed Finder Interlock.....	6.215-3
PLUG, Gasoline Tank Drain.....	4.130-6	POWER SECTION, Power Brake Unit.....	8.415-1
PLUG, Heater Hose Elbow Fitting.....	13.050-5b	POWER STEERING KIT.....	10.360-1
PLUG, Hydramatic Transmission Case.....	6.505-1	POWER UNIT ASSEMBLY, Power Brake ...	8.400-1
PLUG, Hydramatic Transmission Case Oil Passage.....	6.503-11	PROTECTOR, Directional Signal Switch Wire Harness.....	3.321-16
PLUG, Hydramatic Transmission Output Shaft.....	6.635-2	PROTECTOR, Front Seat Armrest Upholstery	29.145-2
PLUG, Hydramatic Transmission Parking Brake Pawl Shaft Cup.....	6.552-4	PROTECTOR, Front Seat Back Pad.....	29.108-2
PLUG, Intake Manifold Exhaust Gas Recirculation Holes.....	1.067-20	PROTECTOR, Front Seat Cushion Pad.....	29.164-2
PLUG, Intake Manifold Vacuum.....	1.067-18	PROTECTOR, Gear Selector Dial Lamp Wire	7.535-9
PLUG, Mat And Carpet Center Armrest Hole ..	29.302-4	PROTECTOR, Rear Seat Back Spring.....	29.224-2
PLUG, Oil Channel.....	1.185-1	PROTECTOR, Tailgate Wiring Harness.....	23.320-9
PLUG, Power Steering Gear Housing End...	10.535-1	PULLEY, Air Conditioning Compressor Drive.....	13.415-5
PLUG, Power Steering Gear Rack-Piston End	10.585-1	PULLEY, Air Conditioning Drive Belt Back Idler.....	13.435-1
PLUG, Rear Axle Filler.....	9.005-1	PULLEY, Air Conditioning Intermediate....	13.430-1
PLUG, Rear Axle Shaft Flange.....	9.072-2	PULLEY, Air Injection Pump Drive Damper ..	1.046-3
PLUG, Reduction Unit Drain.....	18.610-3	PULLEY, Exhaust Emission Air Pump.....	4.610-1
PLUG, Reduction Unit Housing Expansion..	18.620-1	PULLEY, Fan.....	2.003-1
PLUG, Reduction Unit Housing Taper (At Poppet Spring).....	18.620-8	PULLEY, Vibration Damper.....	1.046-1
PLUG, Reduction Unit Housing Taper (At Shift Rail).....	18.620-2	PUMP, Exhaust Emission Air.....	4.500-1
PLUG, Side Panel Holes.....	14.208-1	PUMP, Fuel.....	4.110-1
PLUG, Steering Housing Oil Filler.....	10.294-1	PUMP, Windshield Washer.....	22.051-1
PLUG, Tailgate Hinge Tube.....	31.150-4	PUMP ASSEMBLY, Engine Oil.....	1.154-1
PLUG, Transfer Case Cover Filler.....	18.151-6	PUMP ASSEMBLY, Power Steering.....	10.430-1
PLUG, Transfer Case Cover Magnetic.....	18.515-9	PUMP ASSEMBLY, Water.....	2.080-1
PLUG, Transfer Case Cover Oil Tube.....	18.515-11	<b>- R -</b>	
PLUG, Transfer Case Drain.....	18.010-4	RACE, Hydramatic Transmission Intermediate Clutch Outer.....	6.554-6
PLUG, Transfer Case Drain (Quadra Trac) ..	18.510-10	RACE, Steering Gear Shaft Upper Bearing Inner.....	10.825-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>R - Cont.</b>		<b>R - Cont.</b>	
RACK, Steering Column Housing.....	10.335-1	REINFORCEMENT, Spare Tire Hold Down ..	14.160-3
RACK - PISTON - NUT ASSEMBLY, Power Steering Gear.....	10.555-1	REINFORCEMENT, Spare Wheel Dampener..	14.204-1
RADIO ANTENNA KIT.....	15.030-1b	REINFORCEMENT KIT, Frame.....	11.001-2
RAIL, Cap Mounting.....	28.716-1	RELAY, Automatic Speed Control .....	4.330-3
RAIL, Fourspeed Transmission Shift Direct And Third.....	6.018-1a	RELAY, Heated Rear Window.....	3.770-7
RAIL, Fourspeed Transmission Shift Low And Second.....	6.018-2a	RELAY, Horn .....	3.125-1
RAIL, Fourspeed Transmission Shift Reverse	6.018-3	RELAY, Starting Motor (Solenoid).....	3.024-1
RAIL, Front Bumper (LEAB) .....	12.168-1	RELAY, Trailer Towing Harness .....	3.780-7
RAIL, Front Bumper (WEAB) .....	12.300-1	REPAIR KIT, Brake Master Cylinder .....	8.048-1
RAIL, Rear Bumper (LEAB) .....	12.168-6	REPAIR KIT, Disc Brake Piston Housing ...	8.820-1
RAIL, Rear Bumper (WEAB) .....	12.300-4	REPAIR KIT, Front Brake Wheel Cylinder..	8.080-1
RAIL, Reduction Unit Shift.....	18.620-4	REPAIR KIT, Parking Brake Lever And Strut	8.024-5
RAIL, Side Roof.....	20.255-1	REPAIR KIT, Power Brake Master Cylinder .	8.512-1
RAIL, Threespeed Transmission Shift High And Intermediate.....	6.018-1	REPAIR KIT, Power Brake Power Unit .....	8.405-1
RAIL, Threespeed Transmission Shift Low And Reverse .....	6.018-2	REPAIR KIT, Power Piston .....	8.485-8
RAIN SHIELD, Front Door .....	23.012-3	REPAIR KIT, Rear Brake Wheel Cylinder...	8.080-2
RAIN SHIELD, Rear Door.....	23.012-9	RESERVOIR, Power Steering Pump Oil .....	10.465-1
RALLY STRIPE, Exterior Decal.....	26	RESERVOIR, Windshield Washer.....	22.051-2
RECEIVER, Center Horn Button .....	3.400-15	RESISTOR, Heater And Defroster Motor.....	13.072-14
RECEIVER ASSEMBLY, Rear Door And Rear Quarter Ash .....	23.182-1	RESTRICTOR, Front Engine Support .....	1.009-4
RECEIVER-DRYER, Air Conditioning.....	13.455-1	RETAINER, Backup Lamp Switch .....	3.319-7
RECEPTACLE, Dovetail .....	23.006-17a	RETAINER, Body Wire Harness Thru Pillar Reinforcement .....	3.163-4
REDUCTION UNIT ASSEMBLY .....	18.600-1	RETAINER, Body Wire Harness Thru Pillar Reinforcement.....	20.230-4
REEL, Seat Belt.....	27.290-6	RETAINER, Brake Master Cylinder Cover ...	8.038-5
REGULATOR, Alternator Voltage .....	3.019-1	RETAINER, Brake Master Cylinder Piston Cup .....	8.046-3
REGULATOR, Automatic Speed Control.....	4.335-1	RETAINER, Brake Pedal .....	8.164-1
REGULATOR, Generator Voltage.....	3.011-1	RETAINER, Brake Shoe Parking Brake Lever Strut.....	8.024-3
REGULATOR, Rear Door Window .....	23.098-4	RETAINER, Center Horn Button.....	3.400-2
REGULATOR, Front Door Window.....	23.098-1	RETAINER, Clutch Push Rod Boot.....	5.160-6a
REGULATOR, Manual Tailgate Window.....	23.040-1	RETAINER, Clutch Release Idler Pivot Bushing Outer .....	5.168-18
REGULATOR, Tailgate Electric Operated Window .....	23.306-1	RETAINER, Door Speaker Wire .....	15.320-11b
REINFORCEMENT, Axle Bumper .....	10.260-2a	RETAINER, Floor Gear Shift Lever Boot....	7.013-3
REINFORCEMENT, Body Center Lower Pillar .....	20.230-2	RETAINER, Floor Gear Shift Lever Cover...	7.013-1a
REINFORCEMENT, Body Center Upper Pillar.....	20.230-1	RETAINER, Fourspeed Transmission Floor Gear Shift Lever Fulcrum Spring ...	7.001-5
REINFORCEMENT, Bumper Rail.....	12.305-1	RETAINER, Front Axle Shaft Inner.....	9.368-9
REINFORCEMENT, Cowl Top Panel.....	20.150-1a	RETAINER, Front Axle Shaft Seal Outer....	9.368-8
REINFORCEMENT, Footman Loop .....	12.001-16	RETAINER, Front Door Lock Cylinder.....	23.086-1
REINFORCEMENT, Front Engine Mount ....	1.004-5	RETAINER, Front Door Trim Panel.....	29.070-3
REINFORCEMENT, Front Engine Support ...	1.004-7	RETAINER, Front Door Window Regulator Stud.....	23.098-3
REINFORCEMENT, Front Fender Extension .	12.075-6a	RETAINER, Front Quarter Trim Panel .....	29.460-4
REINFORCEMENT, Lower Cover .....	15.320-2b	RETAINER, Front Seat Back Ash Receiver..	29.110-2
REINFORCEMENT, Power Brake Unit Retainer Bracket .....	8.400-2a	RETAINER, Front Wheel Grease .....	8.296-1
REINFORCEMENT, Rear Crossmember.....	11.066-9	RETAINER, Gear Selector Dial Lamp Lens..	7.535-10
REINFORCEMENT, Rear Cross Sill.....	20.040-2	RETAINER, Grease Catcher Front At Backing Plate .....	8.296-12
REINFORCEMENT, Rear Fender Extension .	20.173-1a	RETAINER, Headlining Trim Panel Joint ...	29.014-3
REINFORCEMENT, Rear Spring Hanger And Shock Mounting .....	11.107-2	RETAINER, Hood Lock Lower Dovetail Spring .....	12.060-5
REINFORCEMENT, Side Roof Rail.....	20.260-1	RETAINER, Hydramatic Transmission.....	6.655-5
		RETAINER, Hydramatic Transmission Case To Adapter .....	6.655-4

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>R - Cont.</b>		<b>R - Cont.</b>	
RETAINER, Hydramatic Transmission Direct Clutch Piston Release Spring .....	6.562-8	RETAINER CLIP, Hood Prop Rod.....	12.008-6
RETAINER, Hydramatic Transmission Forward Clutch Piston Spring.....	6.595-8	RING, Air Conditioning Blower Air Intake Orifice .....	13.072-7b
RETAINER, Hydramatic Transmission Front Servo Piston Spring .....	6.530-4	RING, Ball Louver Retainer .....	13.515-2a
RETAINER, Hydramatic Transmission Intermediate Clutch Outer Race .....	6.554-7	RING, Cancelling Directional Signal.....	3.321-6
RETAINER, Hydramatic Transmission Intermediate Clutch Piston Spring .....	6.554-8	RING, Center Horn Button Contact .....	3.400-14a
RETAINER, Hydramatic Transmission Parking Brake Shaft .....	6.552-5	RING, Coupling Sleeve Snap.....	6.593-2
RETAINER, Hydramatic Transmission Pressure Regulator Valve Spring.....	6.512-6	RING, Fourspeed Transmission Main Shaft Snap .....	6.068-6
RETAINER, Hydramatic Transmission Rear Servo Piston Spring .....	6.540-2	RING, Fourspeed Transmission Reverse Idler Gear Snap .....	6.170-3
RETAINER, Ignition Switch Cylinder Harness, Relay To Horn .....	3.105-6	RING, Fourspeed Transmission Synchronizer Low And Second .....	6.090-4
RETAINER, Instrument Cluster Lens.....	3.515-3	RING, Fourspeed Transmission Synchronizer Low And Second Shifting Plate Retaining.	6.100-9
RETAINER, Instrument Panel Ash Receiver .	22.096-1	RING, Fourspeed Transmission Synchronizer Third And Fourth.....	6.090-3
RETAINER, Lock Striker Tapping Plate ....	20.172-9	RING, Fourspeed Transmission Synchronizer Third And Fourth Snap.....	6.080-7
RETAINER, Master Cylinder Push Rod Retention .....	8.046-1	RING, Front Axle Shaft Snap .....	9.368-6
RETAINER, Neutral Safety Switch.....	3.022-5	RING, Front Axle Shaft Spider Assembly Snap.....	9.370-2
RETAINER, Oil Filter Bypass Valve.....	1.220-1	RING, Gear Shift Operating Shaft Retainer...	7.038-7
RETAINER, Outside Rear View Remote Control Mirror.....	15.270-8	RING, Headlamp Retaining.....	3.275-1
RETAINER, Power Brake Master Cylinder...	8.510-6	RING, Hydramatic Front Servo Piston Oil Seal.....	6.530-3
RETAINER, Power Brake Master Cylinder Secondary Piston Cup.....	8.515-4	RING, Hydramatic Transmission Accumulator Piston Oil Seal .....	6.533-4
RETAINER, Rear Auxiliary Floor Mat .....	29.420-3	RING, Hydramatic Transmission Accumulator Piston Retainer Snap.....	6.533-3
RETAINER, Rear Door Trim Panel .....	29.071-3	RING, Hydramatic Transmission Center Support Snap.....	6.556-7
RETAINER, Rear Door Window Regulator Stud.....	23.098-6	RING, Hydramatic Transmission Direct Clutch Hub And Backing Plate Snap .....	6.562-9
RETAINER, Rear Wheel Bearing .....	8.303-1	RING, Hydramatic Transmission Direct Clutch Piston Spring Retainer .....	6.562-10
RETAINER, Rear Wheel Guide .....	8.310	RING, Hydramatic Transmission Forward Clutch Piston Spring Retainer Snap.....	6.595-9
RETAINER, Speedometer Cable Grommet ....	3.570-5	RING, Hydramatic Transmission Front Internal Gear .....	6.634-2
RETAINER, Steering Gear Jacket Tube Lower Bearing.....	10.347	RING, Hydramatic Transmission Inter- mediate Clutch Backing Plate Snap.....	6.554-9
RETAINER, Steering Gear Shaft Lock Cover Screw.....	10.702-3	RING, Hydramatic Transmission Inter- mediate Clutch Outer Race Retainer Snap.	6.554-10
RETAINER, Steering Gear Worm Bearing....	10.324-2	RING, Hydramatic Transmission Intermediate Clutch Piston Spring Retainer Snap.....	6.554-11
RETAINER, Steering Wheel Tilt Spring .....	10.856	RING, Hydramatic Transmission Main Shaft Snap.....	6.630-2
RETAINER, Stop Light Switch.....	3.333-2	RING, Hydramatic Transmission Output Shaft Snap.....	6.635-5
RETAINER, Tail And Stop Lamp Lens.....	3.306-4	RING, Hydramatic Transmission Parking Snap.....	6.551-6
RETAINER, Tailgate Window Regulator Stud	23.040-3	RING, Hydramatic Transmission Pressure Regulator Valve Retaining Snap.....	6.512-5
RETAINER, Transfer Case Shift Control Retainer And Pin.....	18.152-3	RING, Hydramatic Transmission Rear Servo Accumulator Piston Oil Seal.....	6.548-2
RETAINER, Transfer Case Shift Lever Seal .	18.128-7		
RETAINER, Transmission Rear Bearing....	6.052-2a		
RETAINER, Valve Rocker Arm Shaft .....	1.102-2		
RETAINER, Valve Spring.....	1.084-1		
RETAINER, Wiring Harness Grommet.....	3.166-2		
RETAINER AND PIN, Transfer Case Shift Lever.....	18.152-1		



## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>R - Cont.</b>		<b>R - Cont.</b>	
RING, Hydramatic Transmission Rear Servo Piston Retainer Snap .....	6.540-4	ROD, Front Passenger Seat Latching .....	29.103-12
RING, Ignition Switch Cylinder Antitheft .....	3.135-6	ROD, Hood Prop .....	12.008-1
RING, Lens Retaining .....	15.516-2a	ROD, Hydramatic Transmission Gear Shift ...	7.125-1
RING, Lens Retaining, Front Park And Directional .....	3.292-9	ROD, Link To Clutch Bellcrank .....	5.160-1b
RING, Power Steering Gear Housing End Plug Retaining .....	10.540-1	ROD, Passenger Seat Support Latch .....	29.132-9
RING, Power Steering Gear Rack-Piston ....	10.580-1	ROD, Power Brake Unit Master Cylinder Piston Push .....	8.505-1
RING, Power Steering Pump .....	10.435-4	ROD, Reduction Unit Shift Lever .....	18.670-1
RING, Power Steering Pump Drive Shaft Retainer Snap .....	10.440-3	ROD, Power Brake Unit Push .....	8.480-1
RING, Power Steering Pump End Plate Retaining .....	10.445-5	ROD, Seat Lock Release .....	29.105-19
RING, Power Takeoff Cover To Transfer Case Cover Sealing .....	18.515-3	ROD, Steering Gear Jacket Tube Support ....	10.340-1
RING, Rear Axle Bearing Retaining .....	8.303-2	ROD, Sun Visor End Retaining .....	29.004-1
RING, Rear Axle Differential Pinion And Shaft Snap .....	9.040	ROD, Sun Visor Mounting .....	29.003-2
RING, Retaining Diaphragm Control To Shift Fork .....	18.565-3	ROD, Tailgate Counter Balance Torque ....	23.006-11
RING, Road Wheel Side .....	8.270-2	ROD, Tailgate Latch Actuating Bellcrank To Latch .....	31.131-1
RING, Steering Gear Cross Shaft Adjusting Screw Snap .....	10.306-3	ROD, Tailgate Latch Release Handle To Bellcrank .....	31.130-1
RING, Steering Gear Jacket Tube Upper Bearing Retaining .....	10.344-5	ROD, Transfer Case Shift .....	18.100-1
RING, Steering Gear Lower Shaft To Steering Gear Coupling Seal Retainer ....	10.750	ROD, Transfer Case Shift Control (Direct And Low Range) .....	18.165-1
RING, Steering Gear Shaft Lock Retaining ...	10.703-2	ROD, Transfer Case Shift Control (4WD And Neutral) .....	18.160-1
RING, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling Seal Retainer .....	10.733-1	ROD, Transfer Case Shift Control Rod Torsion Spring Retaining .....	18.165-3
RING, Steering Wheel Actuator Drive Shaft Retaining .....	10.830-4	ROD, Transfer Case Shift Lever To Shifting Lever Connecting .....	18.180-8
RING, Stud Steering Knuckle Ball Snap .....	10.013-1	ROD, Valve Push .....	1.095-1
RING, Threespeed Transmission Low Gear Snap .....	6.144-4	ROD ASSEMBLY, Clutch Fork Release ....	5.187-1
RING, Threespeed Transmission Synchro- nizer Clutch Snap Second And High .....	6.080-5	ROD ASSEMBLY, Connecting .....	1.136-1
RING, Transmission Front Ball Bearing Lock	6.048-1	ROD ASSEMBLY, Pitman Arm To Steering Arm Tie .....	10.118-2
RING, Transmission Front Ball Bearing Snap	6.044-1	ROD ASSEMBLY, Steering Arm To Steering Arm Tie .....	10.118-1
RING, Valve Tappet Snap .....	1.088-2	ROD KIT, Transfer Case Shift Control .....	18.165-5
RING AND RETAINER, Front Floor Pan Tool Compartment .....	20.006-5	ROLLER, Transmission Countershaft Rear Bearing .....	6.167-1
RING AND SEAL KIT, Power Steering Gear Valve .....	10.625-1	ROLLER, Transmission Reverse Idler Gear Bearing .....	6.170-4
RING SET, Piston .....	1.146-1	ROLLER, Transmission Spline Shaft Pilot Bearing .....	6.076-1
RING SET, Threespeed Transmission Synchronizer Clutch Friction .....	6.090-1	ROLLER KIT, Hydramatic Transmission Center Support Low Clutch .....	6.556-3
RING SET, Transmission Overhaul Snap ....	6.004-1	ROTATOR, Exhaust Valve .....	1.084-2
ROD, Accelerator Pedal .....	4.045-1	ROTOR, Distributor .....	3.035-1
ROD, Bellcrank To Clutch Pedal Shaft .....	5.160-1	ROTOR, Power Steering Pump .....	10.435-3
ROD, Bellcrank To Rear Door Latch .....	23.057-4	ROTOR - VANE - RING KIT, Power Steering Pump .....	10.435-2
ROD, Bellcrank To Rear Door Lock Push Knob .....	23.057-3	<b>- S -</b>	
ROD, Clutch Pedal To Link .....	5.160-1a	SCREEN, Evaporator Coil Filter .....	13.475-2
ROD, Dash To Radiator Air Deflector .....	20.130-1	SCREEN, Hydramatic Transmission Governor	6.545-6
ROD, Front Door Locking .....	23.055-1	SCREEN, Side Window .....	28.706-3
		SCREW, Brake Shoe Adjusting .....	8.014-1
		SCREW, Brake Wheel Cylinder Bleeder .....	8.088-1
		SCREW, Brake Wheel Cylinder Bleeder .....	8.830-1

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>S - Cont.</b>		<b>S - Cont.</b>	
SCREW, Front Axle Differential Side Bearing Cap .....	9.318-1	SEAL, Power Steering Pump Mounting Stud..	10.430-5
SCREW, Headlamp Adjusting .....	3.268-1	SEAL, Power Steering Pump Oil Reservoir To Pump .....	10.465-3
SCREW, Headlamp Bulb Retaining Ring .....	3.275-2	SEAL, Power Steering Pump Pressure Hose Union Inner .....	10.470-9
SCREW, Hydramatic Transmission Center Support .....	6.556-5	SEAL, Power Steering Pump Pressure Hose Union Outer .....	10.470-10
SCREW, Rear Axle Differential Side Bearing Cap .....	9.018-1	SEAL, Propeller Shaft Sleeve Yoke Dust Cap	9.110-3
SCREW, Steering Column Locking Bolt Spring To Actuator .....	10.337-10	SEAL, Rear Axle Bearing .....	8.303-3
SCREW, Steering Gear Cross Shaft Adjusting	10.308-1	SEAL, Rear Axle Drive Shaft Inner Oil .....	9.072-1
SCREW, Steering Gear Shaft Lock Cover .....	10.702-2	SEAL, Rear Wheel Oil .....	8.312-1
SCREW, Transfer Case Shift Control Rod Pawl Set .....	18.160-3	SEAL, Speedometer Driven Gear .....	3.590-3
SCREW, Transfer Case Shift Fork To Rod Set .....	18.095-2	SEAL, Steering Gear Cross Shaft .....	10.310-1
SCREW KIT, Brake Adjusting Screw .....	8.014-5	SEAL, Steering Gear Jacket Tube To Instrument Panel .....	10.339-5
SEAL, Auxiliary Gasoline Tank Outlet Tube	4.131-21	SEAL, Steering Gear Jacket Tube To Toeboard .....	10.350-4
SEAL, Bezel To Back Panel .....	3.671-8	SEAL, Steering Gear Shaft Oil .....	10.320-1
SEAL, Clutch Wear Adjuster To Throwout Lever .....	5.187-5	SEAL, Tailgate Inner Panel Dust .....	23.013-4
SEAL, Door Inner Panel Dust .....	23.002-3	SEAL, Tailgate Opening .....	23.013-2
SEAL, Engine Oil Pan Timing Case Cover ..	1.152-3	SEAL, Tailgate Pillar .....	23.013-7
SEAL, Engine Oil Pan To Bearing Cap .....	1.152-2	SEAL, Timing Case Cover .....	1.123-1
SEAL, Exhaust Pipe To Manifold .....	4.186-1	SEAL, Threespeed Transmission Front Bearing Oil .....	6.021-1
SEAL, Exhaust Valve .....	1.078-3	SEAL, Top Enclosure To Body .....	28.608
SEAL, Fourspeed Transmission Adapter Plate .....	6.053-2	SEAL, Top Enclosure To Windshield .....	28.610
SEAL, Fresh Air Inlet Valve .....	22.020-5	SEAL, Top Enclosure Side Door Header To Windshield .....	28.612
SEAL, Front Door Hinge .....	23.015-4	SEAL, Transfer Case Front Output Shaft Oil	18.025-3
SEAL, Front Floor Pan Transmission Access Cover .....	20.005-5	SEAL, Transfer Case Intermediate Gear Shaft .....	18.050-6
SEAL, Front Spindle Bearing .....	10.004-17	SEAL, Transfer Case Oil .....	18.520-9
SEAL, Front Steering Spindle Oil .....	10.004-14	SEAL, Transfer Case Shift Lever .....	18.128-1
SEAL, Gasoline Tank Filler Tube Protective Cover .....	4.143-3	SEAL, Transfer Case Shift Rod Oil .....	18.100-4
SEAL, Heater And Defroster Blower Housing To Heater Housing .....	13.072-11	SEAL, Transmission Output Shaft .....	6.503-9
SEAL, Heater Core Tubes .....	13.028-2	SEAL, Windshield Wiper Motor Mounting .....	22.027-4
SEAL, Horn Button To Wheel .....	3.400-1b	SEAL AND RING KIT, Power Steering Gear	10.545-1
SEAL, Hydramatic Transmission Oil Connector .....	6.660-8	SEAL KIT, Air Conditioning Compressor .....	13.400-3
SEAL, Hydramatic Transmission Oil Pump Front .....	6.535-11	SEAL KIT, Exhaust Valve .....	1.078-5
SEAL, Hydramatic Transmission Oil Pump To Reaction Carrier .....	6.535-9	SEAL KIT, Hydramatic Transmission Intermediate Clutch Piston .....	6.554-15
SEAL, Hydramatic Transmission Oil Strainer Intake Pipe .....	6.509-3	SEAL KIT, Intake Valve .....	1.077-5
SEAL, Hydramatic Transmission Rear Servo Piston .....	6.540-3	SEAL KIT, Power Steering Gear Housing End Plug .....	10.537-2
SEAL, Intake Valve .....	1.077-3	SEAL KIT, Power Steering Gear Pitman Shaft	10.605-1
SEAL, Modulator To Case .....	6.655-3	SEAL KIT, Power Steering Gear Pitman Shaft Cover .....	10.612-2
SEAL, Oil Filler Tube To Transmission Case .....	6.510-3	SEAL KIT, Power Steering Gear Rack - Piston .....	10.582-2
SEAL, Output Shaft Front And Rear .....	18.570-6	SEAL KIT, Power Steering Gear Upper Thrust Bearing Adjuster .....	10.645-1
SEAL, Output Shaft Oil .....	18.570-4	SEAL KIT, Power Steering Pump .....	10.430-3
SEAL, Power Steering Pump Drive Shaft Oil	10.440-2	SEAL KIT, Rear Main Bearing Cap .....	1.032-1
		SEAL KIT, Steering Gear Upper Shaft To Lower Shaft Coupling .....	10.725-1
		SEAL SET, Exhaust Valve .....	1.078-4
		SEAL SET, Intake Valve .....	1.077-4
		SEAL SET, Transmission .....	6.002-3

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>S - Cont.</b>		<b>S - Cont.</b>	
SEALER, Front Door.....	23.012-1	SHAFT, Steering Gear Intermediate.....	10.700-3
SEALER, Front Door Lowering Glass Bottom Channel.....	25.030-2	SHAFT, Steering Gear Lower.....	10.700-2
SEALER, Rear Door.....	23.012-6	SHAFT, Steering Gear Upper.....	10.700-1
SEALER, Rear Door Lowering Glass Bottom Channel.....	25.032-2	SHAFT, Steering Wheel Actuator Drive.....	10.830-3
SEALER, Tailgate.....	23.013-1	SHAFT, Tailgate Lock Cylinder.....	23.081-7
SEALER, Tailgate Glass Bottom Channel...	25.033-3	SHAFT, Transfer Case Intermediate Gear...	18.050-2
SEAT, Exhaust Valve Spring.....	1.083-2	SHAFT, Transfer Case Output.....	18.060-1
SEAT, Power Brake Master Cylinder.....	8.517-2	SHAFT, Transfer Case Output Front.....	18.025-1
SEAT, Power Steering Gear Pressure Hose Connector.....	10.525-1	SHAFT, Transmission Clutch.....	6.060-1
SEAT, Power Steering Gear Return Hose Connector.....	10.527-1	SHAFT, Transmission Idler Gear.....	6.168-1
SEAT, Steering Gear Jacket Tube Upper Bearing Spring.....	10.344-2	SHAFT, Transmission Spline.....	6.068-1
SEAT, Steering Gear Shaft Upper Bearing Inner Race.....	10.826-1	SHAFT, Valve Rocker Arm.....	1.098-1
SEAT ASSEMBLY, Trimmed Front.....	29.100-2	SHAFT ASSEMBLY, Front Axle Drive.....	9.368-1
SEAT ASSEMBLY, Trimmed Rear.....	29.180-2	SHAFT ASSEMBLY, Power Steering Gear Pitman.....	10.590-1
SEAT ASSEMBLY KIT, Trimmed Front Passenger.....	29.100-1	SHAFT ASSEMBLY, Propeller.....	9.100-1
SEAT ASSEMBLY KIT, Trimmed Rear.....	29.180-1	SHAFT KIT, Power Steering Pump Drive....	10.440-1
SECTOR, Ignition Switch Actuator.....	3.130-6	SHEDDER, Crankshaft Sprocket Oil.....	1.132-3
SENDING UNIT, Oil Pressure.....	3.605-3	SHELL, Headlamp.....	3.265-1
SENDING UNIT, Water Temperature.....	3.610-3	SHELL ASSEMBLY, Body.....	20.001-1
SENSOR, Exhaust Gas Recirculating Back Pressure.....	4.700-4	SHIELD, Canister.....	4.144-7
SENSOR KIT, Carburetor Air Cleaner Temperature.....	4.088-12	SHIELD, Front Axle Yoke Dust.....	9.404-1
SEPARATOR, Ignition Wire.....	3.230-1	SHIELD, Insulator Heat.....	1.009-1a
SHACKLE, Front Leaf Spring.....	11.170-1	SHIELD, Steering Wheel Release Lever.....	10.802
SHACKLE, Rear Leaf Spring.....	11.170-2	SHIELD, Transfer Case Torque Reaction Support.....	18.192-1
SHACKLE PLATE.....	11.170-4	SHIFT FORK.....	18.565-4
SHAFT, Brake Pedal.....	8.160-1	SHIM, Front Door Hinge Pillar.....	23.016-4
SHAFT, Clutch And Brake Pedal.....	5.148-1	SHIM, Front Spring To Axle.....	11.088-4
SHAFT, Engine Oil Pump Drive.....	1.161-1	SHIM, Lock Pillar Striker.....	23.087-3
SHAFT, Engine Oil Pump Idler Gear.....	1.157-2	SHIM, Rear Door Hinge Plate To Door.....	23.023-3
SHAFT, Front Axle Differential Pinion Mate.	9.336-1	SHIM, Rear Leaf Spring To Spring Seat.....	11.100-8
SHAFT, Front Output.....	18.540-1	SHIM, Rear Wheel Bearing.....	8.315
SHAFT, Front Seat Back Latch Control.....	29.105-34	SHIM, Steering Gear Housing Worm Cover....	10.298-2
SHAFT, Gear Shift Operating.....	7.038-1	SHIM, Steering Gear Spacer To Frame.....	10.354-2a
SHAFT, Hydramatic Transmission Main.....	6.630-1	SHIM, Tailgate Wedge Plate Striker.....	23.039-9
SHAFT, Hydramatic Transmission Manual...	6.551-2	SHIM, Transfer Case Front Output Shaft Rear Bearing Cap.....	18.028-3
SHAFT, Hydramatic Transmission Output...	6.635-1	SHIM KIT, Steering Gear Cross Shaft Adjusting Screw.....	10.309-1
SHAFT, Hydramatic Transmission Parkina Brake.....	6.552-2	SHIMS, Rear Axle Differential Side Bearing..	9.045-3
SHAFT, Hydramatic Transmission Sun Gear.	6.518-2	SHIM SET, Front Axle Differential Pinion...	9.350-7
SHAFT, Hydramatic Transmission Turbine..	6.537-1	SHIM SET, Front Axle Pinion.....	9.350-6
SHAFT, Rear Axle Differential.....	9.036-1	SHIM SET, Front Axle Differential Side Gear Bearing.....	9.345-1
SHAFT, Rear Axle Drive.....	9.068-1	SHIM SET, Rear Axle Differential Side Bearing.....	9.045-1
SHAFT, Rear Output.....	18.550-1	SHIM SET, Rear Axle Pinion Adjusting.....	9.057-1
SHAFT, Rear Shock Mounting.....	11.225-1	SHIM SET, Transfer Case Front Output Shaft Rear Bearing Cap.....	18.028-4
SHAFT, Rear Spring Front Hanger.....	11.106-2	SHIM SET, Transfer Case Rear Output Shaft Bearing.....	18.080-8
SHAFT, Steering Gear.....	10.314-1	SHIM SET KIT, Rear Axle Differential Side Bearing.....	9.045-2
SHAFT, Steering Gear Cross.....	10.306-1		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>S - Cont.</b>		<b>S - Cont.</b>	
SHIM STRIP, Center Pillar Lower.....	23.087-4	SNAP RING, Reduction Unit Collar Plate To Ring Gear.....	18.615-12
SHIM STRIP, Rear Door Lock Pillar.....	23.018-8	SNAP RING, Reduction Unit Holding Plate..	18.615-18
SHIM STRIP, Rear Quarter Pivoting Type Window .....	25.027-5a	SNAP RING, Reduction Unit Mainshaft Rear.	18.615-2
SHOCK, Front.....	11.200-1	SNAP RING, Reduction Unit Mainshaft Rear Bearing.....	18.615-20
SHOCK, Rear.....	11.220-1	SNAP RING KIT, Hydramatic Transmission..	6.501-3
SHOE, Fourspeed Transmission Shifting Reverse.....	6.085-5	SNUBBER, Transfer Case Insulator.....	18.185-2
SHOE, Shift Fork .....	18.565-5	SOCKET, Ash Receiver Lamp .....	22.092-5
SHOE, Steering Wheel Actuator Lock.....	10.843-1	SOCKET, Brake Shoe Adjusting Screw.....	8.014-2
SHOE SET, Front Brake .....	8.004-1	SOCKET, Gear Selector Dial Lamp .....	7.535-7
SHOE SET, Front Wheel Disc Brake .....	8.815-1	SOCKET, Heated Rear Window Indicator Lamp .....	3.770-4
SHOE SET, Rear Brake.....	8.004-2	SOCKET, Instrument Cluster Illumination ...	3.525-1
SHROUD, Exhaust Manifold Heat.....	4.015-3	SOLENOID, Distributor Vacuum Control.....	3.051-6
SHROUD, Fan.....	2.013-1	SOLENOID ASSEMBLY, Hydramatic Transmission.....	6.660-14
SHROUD, Steering Column Bowl .....	10.338-8	SPACER, Air Conditioning Intermediate Pulley Bracket To Mounting Bracket .....	13.430-4
SIDE RAIL, Luggage Rack .....	15.250-6	SPACER, Alternator Pivot .....	3.018-18
SILENCER, Roof Bow .....	20.420-2a	SPACER, Alternator Pulley .....	3.017-4
SILL, Front Side .....	20.070-1	SPACER, Backup Lamp Mounting .....	3.316-7
SILL, Rear Cross .....	20.040-1	SPACER, Clutch And Brake Pedal .....	5.148-4
SKID PLATE, Engine Oil Pan .....	1.151-5	SPACER, Clutch Cable Bracket.....	5.165-4
SKID PLATE, Under Frame To Transmission	6.007-1	SPACER, Clutch Cable Bracket To Transmission .....	5.165-5
SKID PLATE KIT, Gasoline Tank.....	4.131-1	SPACER, Clutch Housing To Engine .....	5.065-1
SKIRT, Steering Wheel.....	10.283	SPACER, Cowl Ventilator Intake Cover Panel .....	22.016-3
SLAT, Roof.....	15.250-11a	SPACER, Drive Pulley To Vibration Damper Pulley.....	1.046-5
SLEEVE, Carburetor Choke Heater Tube....	4.020-2	SPACER, Electric Tailgate Window Regulator Panel.....	23.306-1c
SLEEVE, Clutch Throwout Lever .....	5.109-1	SPACER, Engine Oil Pump Inlet Tube Screen To Oil Pan.....	1.167-2
SLEEVE, Crankshaft Pilot.....	1.043-3	SPACER, Fan Blade.....	2.002-3
SLEEVE, Drive.....	18.520-3	SPACER, Floor Strainer To Frame Crossmember .....	31.005-1
SLEEVE, Fourspeed Transmission Reverse Idler Shaft.....	6.170-7	SPACER, Fourspeed Transmission Speedometer Gear .....	6.057-1
SLEEVE, Front Door Locking Rod .....	23.055-3	SPACER, Fourspeed Transmission Spline Shaft Pilot Bearing Roller.....	6.076-2
SLEEVE, Pick-Up Box Tailgate Support Arm	31.135-1	SPACER, Front Axle Bumper Frame Bracket..	9.304-4
SLEEVE, Reduction Unit Direct Drive.....	18.615-17	SPACER, Front Spring To Axle .....	11.088-5
SLEEVE, Seat Belt .....	27.290-5	SPACER, Front Steering Spindle.....	14.004-16
SLEEVE, Speedometer Driven Gear.....	3.590-2	SPACER, Guard To Bumper Rail .....	12.302-4
SLEEVE, Steering Gear Jacket Tube Upper Bearing.....	10.344-3	SPACER, Horn Switch To Flange.....	3.400-7
SLEEVE, Tailgate Support Arm.....	23.006-14	SPACER, Hydramatic Transmission Center Support .....	6.556-9
SLEEVE, Transmission Output Shaft To Transfer Case Input Shaft Coupling.....	6.593-1	SPACER, Hydramatic Transmission Regulator Valve.....	6.512-2
SLIDE, Front Seat Adjusting.....	29.131-1	SPACER, Inner Bellcrank Bracket To Clutch Housing .....	5.168-11a
SLINGER, Front Axle Pinion Bearing Oil ...	9.364-3	SPACER, Intermediate Rear To Frame.....	11.024-3a
SLINGER, Rear Axle Pinion Bearing Oil ....	9.064-3	SPACER, Power Brake Unit To Dash .....	8.400-2
SNAP RING, Bearing Inner.....	18.540-5	SPACER, Rear Leaf Spring To Axle.....	11.100-6
SNAP RING, Bearing Outer.....	18.540-7		
SNAP RING, Drive Sleeve To Drive Hub ....	18.520-5		
SNAP RING, Hydramatic Transmission Case Extension Bearing.....	6.503-8		
SNAP RING, Master Cylinder Push Rod ...	8.046-5		
SNAP RING, Propeller Shaft Universal Joint.	9.107-3		
SNAP RING, Reduction Unit (Sun Gear To Shaft) .....	18.615-6		
SNAP RING, Reduction Unit (To Reduction Collar Plate Hub) .....	18.615-9		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>S - Cont.</b>		<b>S - Cont.</b>	
SPACER, Rear Seat Back Latch Guide Hook	29.226-3	SPRING, Brake Pedal Return	8.140-3
SPACER, Reduction Unit	18.615-3	SPRING, Brake Shoe Automatic Adjusting Lever	8.008-2
SPACER, Ring Gear Flex Plate To Trunkshaft	6.521-1	SPRING, Brake Shoe Return	8.008-1
SPACER, Skid Plate To Engine Rear Support Crossmember	6.007-3	SPRING, Carburetor Pull Back	4.080-1
SPACER, Steering Gear Housing Worm Cover	10.298-1	SPRING, Center Horn Button Receiver	3.400-14
SPACER, Steering Gear To Frame	10.354-1	SPRING, Clutch Pedal Over Center	5.155-2
SPACER, Tailgate To Sealer Lower	23.013-3	SPRING, Clutch Pedal Return	5.155-1
SPACER, Tailgate Window Regulator Panel	23.040-2a	SPRING, Clutch Throwout Lever	5.132-1
SPACER, Tail Lamp	3.300-8	SPRING, Clutch Throwout Lever Return	5.190-1
SPACER, Tail Pipe	4.234-5	SPRING, Column Gear Shift Upper Lever Tension	7.020-9
SPACER, Three-speed Transmission Main Shaft Bearings	6.068-5	SPRING, Cross Shaft Rattle	7.080-1
SPACER, Transfer Case And Transmission Torque Reaction Bracket	18.200-8	SPRING, Diaphragm Control	18.565-8
SPACER, Transfer Case Front Output Shaft	18.025-6	SPRING, Directional Cancelling Cam	3.321-15
SPACER, Transfer Case Intermediate Gear Shaft Bearings	18.050-4	SPRING, Electric Tailgate Window Regulator Balance	23.306-1a
SPACER, Transfer Case Mounting Insulator	18.190-7	SPRING, Engine Oil Pump Release Valve	1.176-2
SPACER, Transfer Case Support Bracket	18.190-5	SPRING, Exhaust Manifold Damper Heat Valve	1.067-17
SPACER, Transfer Case Torque Snubber	18.190-4	SPRING, Floor Gear Shift Lever Fulcrum	7.001-3
SPACER, Transmission Countershaft Gear Roller Bearings	6.167-2	SPRING, Fourspeed Transmission Shift Rail End Plunger Poppet	6.020-7
SPACER, Valve Rocker Arm Shaft Center	1.098-5	SPRING, Fourspeed Transmission Shift Rail End Reverse Plunger	6.020-4
SPACER, Valve Rocker Arm Shaft End	1.098-3	SPRING, Fourspeed Transmission Speed Finder Interlock Poppet First, Second And Reverse	6.215-5
SPACER, Valve Rocker Arm Shaft Intermediate	1.098-4	SPRING, Fourspeed Transmission Speed Finder Interlock Poppet Third And Direct	6.215-6
SPACER, Windshield Washer Nozzle	22.053-7	SPRING, Fourspeed Transmission Synchro- nizer Low And Second Poppet	6.100-7
SPACER, Windshield Wiper Motor Mounting	22.027-9	SPRING, Fourspeed Transmission Synchro- nizer Third And Fourth	6.100-6
SPACER KIT, Rear Leaf Springs To Axle	11.100-4	SPRING, Front Brake Wheel Cylinder Piston Return	8.086-1
SPARK PLUGS	3.001-1	SPRING, Front Passenger Seat Pawl Tension	29.103-13
SPEAKER, Front	15.320-5	SPRING, Front Seat Adjusting Assist	29.138-1
SPEAKER, Front Door	15.320-13	SPRING, Front Seat Back	29.106-1
SPEAKER, Rear Compartment	15.320-14	SPRING, Front Seat Back Latch Control	29.105-35
SPEEDOMETER (Kiloh)	3.550-1	SPRING, Front Seat Cushion	29.103-4
SPEEDOMETER (Kiloh)	3.550-2	SPRING, Front Wheel Retainer	8.296-11
SPHERE KIT, Steering Gear Shaft Centering	10.839-1	SPRING, Gear Selector Dial Housing	7.538-1
SPINDLE ASSEMBLY, Steering	10.004-11	SPRING, Headlamp Adjusting	3.272-1
SPIDER ASSEMBLY, Front Axle Shaft	9.370-1	SPRING, Hinge License Plate	14.098-14
SPIDER ASSEMBLY, Front Propeller Shaft Universal Joint	9.107-1	SPRING, Hood Lock Lower Dovetail	12.060-6
SPIDER ASSEMBLY, Propeller Shaft Universal Joint	9.107-2	SPRING, Horn Blowing Contact	3.401-7
SPIDER ASSEMBLY, Steering Gear Lower Shaft Or Intermediate Shaft	10.719-1	SPRING, Horn Blowing Cover	3.401-4
SPINDLE, Steering	10.004-12	SPRING, Hydramatic Transmission Direct Clutch Piston Release	6.562-11
SPRAG, Hydramatic Transmission Intermediate Clutch	6.554-12	SPRING, Hydramatic Transmission Forward Clutch Piston Release	6.595-10
SPRAG-ROLLER ASSEMBLY, Hydramatic Transmission Low Clutch	6.556-2	SPRING, Hydramatic Transmission Front Accumulator Piston	6.533-2
SPRING, Accelerator Pedal To Bellcrank	4.040-7	SPRING, Hydramatic Transmission Front Servo Piston Spring	6.530-3a
SPRING, Accelerator Retracting	4.050-6		
SPRING, Backup Lamp Switch	3.319-6		
SPRING, Brake Master Cylinder Secondary Piston Return	8.046-2a		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>S - Cont.</b>		<b>S - Cont.</b>	
SPRING, Hydramatic Transmission Intermediate Clutch Retainer.....	6.554-14	SPRING, Threespeed Transmission Synchronizer Shaft Plate Retainer Second And High.....	6.100-4
SPRING, Hydramatic Transmission Parking Brake Pawl Return.....	6.552-8	SPRING, Transfer Case Shift Control Case Antirattle.....	18.167-1
SPRING, Hydramatic Transmission Pressure Regulator.....	6.512-3	SPRING, Transfer Case Shift Control Rod Torsion.....	18.165-2
SPRING, Hydramatic Transmission Rear Servo.....	6.548-3	SPRING, Transfer Case Shift Rod Poppet... ..	18.100-7
SPRING, Ignition Switch.....	3.135-5	SPRING, Upper Hood Lock Safety Hook.....	12.060-9
SPRING, Ignition Switch Cylinder Tumblers..	3.135-10	SPRING, Vacuum Air Valve Actuator Return.....	13.020-12
SPRING, Instrument Cluster Socket.....	3.525-4	SPRING, Valve.....	1.083-1
SPRING, Master Cylinder Check Valve.....	8.042-1	SPRING ASSEMBLY, Front Leaf (Incl. Bushings).....	11.070-1
SPRING, Oil Filter Bypass Valve.....	1.217-1	SPRING ASSEMBLY, Front Leaf (Less Bushings).....	11.070-1a
SPRING, Parking Brake Lever Strut.....	8.008-6	SPRING ASSEMBLY, Rear Leaf (Incl. Bushings).....	11.100-1
SPRING, Passenger Seat Support Latch Rod..	29.132-11	SPRING ASSEMBLY, Rear Leaf (Less Bushings).....	11.100-1a
SPRING, Poppet.....	18.565-7	SPROCKET, Camshaft.....	1.134-1
SPRING, Power Brake Master Cylinder Piston Return.....	8.515-3	SPROCKET, Crankshaft.....	1.132-1
SPRING, Power Steering Gear Pressure Check Valve Poppet.....	10.532-1	SPROCKET, Drive.....	18.520-1
SPRING, Power Steering Pump Flow Control Valve.....	10.445-2	STABILIZER, Battery Support.....	3.082-7
SPRING, Rear Brake Cable.....	8.220-4	STABILIZER, Front Suspension Sway.....	10.260-1
SPRING, Rear Brake Wheel Cylinder Piston Return.....	8.086-2	STABILIZER, Liftgate To Enclosure.....	28.600-5
SPRING, Rear License Plate Bracket.....	14.098-8	STANCHION, Luggage Rack.....	15.250-2
SPRING, Rear Seat Back Lock.....	29.226-2	STEP, Body.....	20.176-2
SPRING, Rear Seat Cushion.....	29.192-1	STEP ASSEMBLY, Body.....	20.176-1
SPRING, Reduction Unit Cable To Power Brake Master Cylinder.....	18.650-8	STICKER, Air Cleaner.....	14.145-3
SPRING, Reduction Unit Shift Rail Poppet..	18.620-7	STICKER, Exhaust Emission Maintenance Information.....	14.145-6
SPRING, Seat Lock Latch Return.....	29.105-25	STICKER, Exhaust Emission Maintenance Instructions.....	14.145-6
SPRING, Shoe Support.....	8.815-2	STICKER, Vehicle Emission Information....	14.145-7
SPRING, Steering Column Housing Rack Preload.....	10.335-2	STOP, Clutch Pedal.....	5.164-1
SPRING, Steering Column Lock Inhibitor....	10.337-7	STOP, Front Seat Back.....	29.105-30
SPRING, Steering Column Locking Bolt.....	10.337-9	STORMSTRIP, Door.....	29.358-1
SPRING, Steering Gear Jacket Tube Upper Bearing.....	10.344-4	STRAINER, Hydramatic Transmission Oil... ..	6.509-1
SPRING, Steering Gear Lower Shaft To Steering Gear Coupling.....	10.747	STRAINER, Tailgate Rear Panel To Frame..	23.006-1a
SPRING, Steering Gear Shaft Lower Bearing..	10.770	STRAP, Auxiliary Gasoline Tank Hold Down	4.131-24
SPRING, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling....	10.727-1	STRAP, Canister Hose To Air Cleaner Hose Or Carburetor.....	4.144-11a
SPRING, Steering Gear Upper Shaft To Lower Shaft Preload.....	10.837-1	STRAP, Diverter Valve Hose.....	4.578-2
SPRING, Steering Wheel Actuator Lock Shoe..	10.847-1	STRAP, Door Restraint.....	23.015-8
SPRING, Steering Wheel Actuator Shoe Release Lever.....	10.846	STRAP, Engine Heater Cord.....	15.145-3
SPRING, Steering Wheel Tilt.....	10.855-1	STRAP, Exhaust Emission Air Pump To Compressor.....	4.535-1
SPRING, Tailgate Latch Release Handle Return.....	31.126-6	STRAP, Gasoline Tank Mounting.....	4.152-1
SPRING, Threespeed Transmission Speed Under Interlock Poppet.....	6.215-4	STRAP, Generator Adjusting.....	3.014-1
SPRING, Threespeed Transmission Synchronizer Shaft Plate Retaining Low And High.....	6.100-5	STRAP, Harness To Tailgate.....	3.770-10
		STRAP, Hose (Nylon).....	4.144-15
		STRAP, Hose (Nylon Tie).....	4.703-3
		STRAP, Longitudinal Seat Stowage.....	29.201-11
		STRAP, Power Steering Pump Hoses To Air Pump Hoses.....	10.470-3a

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>S - Cont.</b>		<b>S - Cont.</b>	
STRAP, Power Steering Pump Hoses To Brake Line.....	10.470-3	SUPPORT, Full Front Seat Cushion .....	29.132-1
STRAP, Rear Seat Back Hold Up Trim .....	29.220-4	SUPPORT, Gasoline Tank Filler Neck Flange.....	4.141-19
STRAP, Reduction Unit Cable To Instrument Panel Support Bracket .....	18.650-5	SUPPORT, Left Side Bumper.....	11.068-9
STRAP, Speed Plate To Gasoline Tank .....	4.131-2a	SUPPORT, Liftgate Window.....	28.709-1
STRAP, Vacuum Tube To Speedometer Cable	18.585-10	SUPPORT, Passenger Seat Cushion .....	29.132-6
STRAP, Windshield Hold Down .....	25.008-1	SUPPORT, Power Brake Master Cylinder To Side Panel .....	8.400-5
STRIKER, Back Frame Lock.....	29.105-15	SUPPORT, Rear Seat Cushion Frame .....	29.181-6
STRIKER, Cushion Frame Lock.....	29.105-13	SUPPORT, Roof Panel .....	20.420-2
STRIKER, Door Lock.....	23.087-1	SUPPORT, Splash Apron To Side Panel Cover .....	12.077-7
STRIKER, Glove Box Door Lock .....	22.075-1	SUPPORT, Steering Wheel And Directional Signal Actuator .....	10.850-1
STRIKER, Liftgate Latch .....	28.577-1	SUPPORT, Transfer Case Shift Lever .....	18.180-6
STRIKER, Tailgate .....	23.039-7	SUPPORT AND BAFFLE, Radiator Grille...	20.115-1
STRIKER, Tailgate Latch.....	31.133-1	SUPPORT BRACKET, Front Stabilizer Bar..	10.260-3a
STRIKER, Ventilating Windshield Opening Handle.....	25.011-1	SUPPORT KIT, Inside Rear View Mirror Mounting.....	27.084-2
STRIP, Rear Auxiliary Floor Carpet Skid....	29.421-1	SUPPORT STEP.....	20.177
STRIP, Rear Quarter Window Weatherstrip Filler Insert .....	25.027-5	SUPPRESSOR, Radio Noise.....	15.320-9
STRIP, Tailgate Carpet Skid .....	29.465-3	SWITCH, Automatic Transmission Neutral Safety And Backup Lamp .....	3.022-1
STRIP, Windshield Glass Weatherstrip Filler	25.002-3	SWITCH, Backup Lamp .....	3.319-2
STRIPES, Exterior Decal Rally.....	26	SWITCH, Courtesy Lamp .....	3.349-6
STRUT, Brake Shoe Parking Brake.....	8.024-2	SWITCH, Directional Lever And Automatic Speed Control .....	4.305-1
STUD, Alternator Pivot Ball .....	4.040-2	SWITCH, Directional Signal .....	3.321-1
STUD, Carburetor Air Cleaner Retaining....	4.088-10	SWITCH, Distributor Thermostatic Vacuum...	3.050-1
STUD, Carburetor Control Shaft Ball.....	4.070-3	SWITCH, Hazard Warning.....	3.690-1
STUD, Clutch Housing.....	5.054-1a	SWITCH, Headlamp Dimmer.....	3.158-1
STUD, End Rail Adjusting .....	15.250-8a	SWITCH, Heated Rear Window Control .....	3.770-1
STUD, Front Wheel Disc Brake Disc Assembly.....	8.805-2	SWITCH, Heater And Defroster Motor.....	13.078-1
STUD, Power Steering Pump Mounting .....	10.430-2	SWITCH, Horn .....	3.400-4
STUD, Power Steering Pump Pivot.....	10.432-1	SWITCH, Hydramatic Transmission Kickdown	6.665-1
STUD, Rear Quarter Handle Retaining .....	25.027-8	SWITCH, Hydramatic Transmission Solenoid Control .....	6.633-1
STUD, Steering Knuckle Ball (Lower).....	10.006-3	SWITCH, Ignition (Incl. Cylinder And 2 Keys)	3.130-1
STUD, Steering Knuckle Ball (Upper) .....	10.006-2	SWITCH, Ignition (Less Cylinder) .....	3.130-2
STUD, Tie Down .....	15.250-6a	SWITCH, Ignition Key Alarm.....	3.140-1
STUD, Transfer Case To Transmission .....	18.001-6	SWITCH, Lighting.....	3.145-1
STUD, Windshield Hold Down Strap.....	25.008-3	SWITCH, Lockout Indicator.....	18.565-9
STUD AND NUT, End Rail Adjusting .....	15.250-8a	SWITCH, Low Sound Horn.....	3.106-4
STUD AND NUT, Tie Down.....	15.250-6a	SWITCH, Parking, Brake Warning Lamp .....	3.650-1
STUD KIT, Steering Knuckle Ball.....	10.006-1	SWITCH, Pick-Up Box Cargo Lamp .....	3.671-12
SUPPORT, Air Conditioning Compressor Mounting Bracket.....	13.410-6	SWITCH, Speedometer Controlled Spark....	3.052-1
SUPPORT, Alternator Bracket Lower .....	3.018-10	SWITCH, Stop Lamp.....	3.333-1
SUPPORT, Alternator Bracket Upper.....	3.018-8	SWITCH, Tailgate Electric Operated Window Regulator (On Instrument Panel) .....	23.330-1
SUPPORT, Battery Tray .....	3.082-4	SWITCH, Tailgate Electric Operated Window Regulator (On Tailgate - Key Operated) ..	23.330-3
SUPPORT, Bellows Mounting Bracket .....	4.385-2	SWITCH, Tailgate Electric Operated Window Regulator Safety .....	23.330-5
SUPPORT, Clutch Release Idler Pivot.....	5.168-11	SWITCH, Thermostatic Vacuum.....	3.050-2
SUPPORT, Cowl Top Inner.....	20.150-2	SWITCH, Transmission Control Spark .....	3.051-1
SUPPORT, Driver's Seat Cushion .....	29.132-3	SWITCH, Vacuum Ported.....	4.704-1
SUPPORT, Exhaust Emission Air Pump Mounting Bracket .....	4.530-1		
SUPPORT, Exhaust Emission Backfire .....	4.557-1		
SUPPORT, Front Energy Absorber Bracket... ..	12.323-1		
SUPPORT, Front Seat Center Cushion .....	29.158-1		
SUPPORT, Fuel Vapor Storage Canister Mounting Bracket.....	4.144-4		

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>- T -</b>		<b>T - Cont.</b>	
TACHOMETER .....	3.700-1	TUBE, Carburetor Choke Heater (In Manifold) .....	4.020-4
TAILGATE ASSEMBLY .....	23.006-1	TUBE, Carburetor Choke Heater (To Carburetor) .....	4.020-1
TANK, Auxiliary Gasoline .....	4.131-10	TUBE, Carburetor Clean Air .....	4.020-7
TANK, Vacuum Storage .....	13.020-2	TUBE, Check Valve To Canister .....	4.144-12a
TANK ASSEMBLY, Gasoline .....	4.130-1	TUBE, Coolant Temperature Override Switch Hose To Transmission Controlled Spark Switch Hose .....	3.051-15
TAPPET, Valve .....	1.088-1	TUBE, Distributor Vacuum Control .....	3.048-1
TEE, Air Pump Vacuum Hose .....	4.367-2	TUBE, Distributor Vacuum Control To Coolant Temperature Override Switch .....	3.051-14
TEE, Heater Vacuum Fitting To Crankcase Vent Hose .....	1.117-3	TUBE, Diverter Valve Tee To Coolant Temperature Override Switch Hose .....	4.702-3
TEE, Manifold Vacuum And Hydramatic Vacuum Fitting .....	1.067-23	TUBE, Engine Oil Pump Inlet .....	1.167-1
TEE, Modulator Valve Hose .....	4.006-4	TUBE, Exhaust Emission Air Injection Manifold .....	4.540-1
TEE, Vacuum Connection At Engine .....	18.585-7	TUBE, Exhaust Emission Air Pump Exhaust .....	4.510-2
TEE, Vacuum Hose .....	4.701-2	TUBE, Exhaust Gas Recirculating Valve Hose To Vacuum Ported Switch Hose .....	4.702-1
TEE, Vacuum Ported Switch And Heater Hose Nipple To Manifold .....	4.704-2	TUBE, Fuel Filter To Gas Tank .....	4.110-6
TEE, Vacuum Ported Switch Hose To Carburetor Hose .....	4.703-1	TUBE, Fuel Line .....	4.160-1
TEMPATROL, Fan .....	2.004-2	TUBE, Fuel Pump To Gasoline Filter .....	4.175-1
TERMINAL, Connector (Female) .....	3.165-13	TUBE, Front Fuel Line .....	4.160-2
TERMINAL, Connector (Male) .....	3.165-12	TUBE, Gasoline Filter To Carburetor .....	4.176-1
TERMINAL, Jumper .....	3.165-12a	TUBE, Gasoline Tank Filler Neck To Connector Hose .....	4.141-6
TERMINAL, Wire (Female) .....	3.165-7	TUBE, Gasoline Tank Vent .....	4.142-21
TERMINAL, Wire (Insulated) .....	3.165-8	TUBE, Heater Control Assembly To Heat Distributor .....	13.020-6
TERMINAL, Wire (Strip) .....	3.165-11	TUBE, Heater Control Assembly To Heat Transition Duct .....	13.020-9
TERMINAL, Wire (Spade) .....	3.165-10	TUBE, Heater Control Assembly To Vacuum Storage Tank .....	13.020-8
TERMINAL, Wire Assembly .....	3.400-10	TUBE, Hydramatic Transmission .....	6.632-1
THERMOSTAT, Air Conditioning Temperature Control .....	13.477-1	TUBE, Hydramatic Transmission Oil Outlet To Oil Cooler .....	6.631-1
THERMOSTAT ASSEMBLY Engine Cooling .....	2.100-1	TUBE, Hydramatic Transmission Oil Return .....	6.631-2
THRUST BEARING AND RACES KIT .....	6.518-4	TUBE, Hydramatic Transmission Vacuum .....	6.515-1
TIE BAR, Interrail .....	1.004-8	TUBE, Hydraulic Clutch .....	5.213-1
TIE PLATE, Steering Gear .....	10.290-5	TUBE, Intake Manifold To PCV Hose .....	1.067-25
TIMER, Seat Belt Warning .....	3.789-1	TUBE, Intake Manifold To Power Brake Hose .....	1.067-26
TIP, Passenger Seat Support Leg .....	29.105-9	TUBE, Intermediate Fuel Line .....	4.160-2a
TIP, Rear Seat Cushion Frame Leg .....	29.181-13	TUBE, Left Rear Brake .....	8.126-1
TOP ENCLOSURE, Hardtop .....	28.500-1	TUBE, Oil Filler .....	1.022-2
TRANSFER CASE AND PIN ASSEMBLY .....	18.510-2	TUBE, Oil Level Gauge .....	1.187-2
TRANSFER CASE ASSEMBLY (Complete) .....	18.001-1	TUBE, Power Brake Hose To Intake Manifold .....	8.460-5a
TRANSFER CASE ASSEMBLY (Quadra Trac) .....	18.500-1	TUBE, Rear Fuel Line .....	4.160-3
TRANSMISSION, Fourspeed .....	6.001-1	TUBE, Return Fuel Line .....	4.160-4
TRANSMISSION, Hydramatic .....	6.500-1	TUBE, Right Rear Brake .....	8.126-2
TRANSMISSION, Threespeed .....	6.001-1	TUBE, Steering Gear Jacket .....	10.338-1
TRAY ASSEMBLY, Instrument Panel Ash Receiver .....	22.092-1	TUBE, Steering Linkage Tie Rod Adjusting .....	10.222-1
TRUNNION, Gear Shift Rod .....	7.125-6	TUBE, Transfer Case Oil .....	18.515-10
TUBE, Air Cleaner Duct Or Elbow To Adapter Or Exhaust Manifold Shroud .....	4.015-1	TUBE, Transfer Case To Shift Control Case Support .....	18.175-1
TUBE, Air Conditioning Evaporator Housing Drain .....	13.448-7		
TUBE, Brake Master Cylinder Front To Valve .....	8.100-1		
TUBE, Brake Master Cylinder Rear To Valve .....	8.100-2		
TUBE, Brake Master Cylinder To Warning Tube .....	8.100-6		
TUBE, Brake Warning Valve To Front Tee .....	8.100-7		



## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>T - Cont.</b>		<b>V - Cont.</b>	
TUBE, Transmission Oil Fuller.....	6.510-1	VALVE, Oil Filter Bypass.....	1.215-1
TUBE, Union To Rear Axle Tee Flex Line ..	8.100-5	VALVE, Power Steering Pump Control.....	10.445-1
TUBE, Vacuum.....	18.585-5b	VALVE ASSEMBLY, Hydramatic Trans-	
TUBE, Vacuum Ported Switch Hose .....	4.702-2	mission Control.....	6.660-1
TUBE, Valve Assembly To Diaphragm Motor.	18.585-6a	VALVE ASSEMBLY, Power Brake Unit	
TUBE, Valve Or Tee To Rear Brake Hose...	8.100-4	Vacuum Check .....	8.460-1
TUBE, Valve To Front Brake Hose.....	18.106-1	VALVE ASSEMBLY, Power Steering Gear...	10.615-1
TUBE, Valve To Rear Axle Tee Flex Line ..	8.100-11	VALVE ASSEMBLY, Remote Control At	
TUBE ASSEMBLY, Gasoline Tank Outlet		Glove Box.....	18.585-1
And Return.....	4.160-14	VALVE KIT, Exhaust .....	1.078-2
TUMBLER, Ignition Switch Cylinder.....	3.135-8	VALVE KIT, Intake.....	1.077-2
TUNE-UP KIT .....	3.003-1	VALVE PLATE KIT, Air Conditioning	
TURN SIGNAL REPAIR KIT .....	3.322-1	Compressor.....	13.400-4
<b>- U -</b>		VANE KIT, Power Steering Pump Rotor.....	10.435-1
U-BOLT, Front Spring .....	11.088-1	VENT, Front Axle Tube To Breather Hose ..	9.301-4b
U-BOLT, Rear Spring.....	11.132-1	VENT, Rear Axle Tube To Breather Hose ...	9.003-2
U-JOINT, Steering Gear Upper Shaft To		VENT ASSEMBLY, Hydramatic Transmission	
Lower Shaft Or Lower Shaft To Inter-		Steve And Pipe .....	6.503-10
mediate Shaft.....	10.717-1	VENTILATOR, Front Door.....	23.110-1
UNION, Brake Tube Side Rail To Rear Tube.	8.100-5a	VISOR, Sun .....	29.003-1
UPHOLSTERY, Front Seat Back .....	29.104-1	VOLTMETER.....	3.600-7
UPHOLSTERY, Front Seat Back Center		<b>- W -</b>	
Armrest .....	29.146-1	WASHER, Adjustable Rail.....	15.250-8c
UPHOLSTERY, Front Seat Center Cushion ..	29.161-1	WASHER, Brake Shoe Adjusting Screw.....	8.014-4
UPHOLSTERY, Front Seat Cushion.....	29.152-1	WASHER, Brake Shoe Parking Lever Strut...	8.024-4
UPHOLSTERY, Longitudinal Seat Back.....	29.203-1	WASHER, Door Window Regulator Handle...	23.104-1
UPHOLSTERY, Longitudinal Seat Cushion ..	29.204-1	WASHER, Fourspeed Transmission Reverse	
UPHOLSTERY, Rear Seat Back.....	29.212-1	Idler Gear Thrust.....	6.170-6
UPHOLSTERY, Rear Seat Cushion.....	29.182-1	WASHER, Fourspeed Transmission Second	
UPPER ORNAMENTATION.....	26	Speed Gear Thrust.....	6.120-3
<b>- V -</b>		WASHER, Front Axle Differential Pinion	
VACUUM STORAGE TANK KIT.....	13.020-1	Gear Thrust .....	9.333-1
VALVE, Air Conditioning Compressor		WASHER, Front Axle Differential	
Suction And Discharge.....	13.405-1	Side Gear Thrust .....	9.329-1
VALVE, Air Conditioning Expansion .....	13.470-1	WASHER, Front Axle Drive Pinion Nut.....	9.350-5
VALVE, Brake Warning And Proportioning		WASHER, Front Output Shaft Thrust.....	18.540-3
Valve Assembly.....	8.104-1	WASHER, Front Steering Spindle To Shaft	
VALVE, Combination.....	8.118-1	Thrust.....	10.004-15
VALVE, Cylinder Block Ventilation.....	1.119-1	WASHER, Front Wheel Braking Lock.....	8.296-4
VALVE, Exhaust .....	1.078-1	WASHER, Front Wheel Braking Nut Lock ....	8.296-5
VALVE, Exhaust Emission Backfire.....	4.558-1	WASHER, Gear Shift Upper Lever Housing...	7.020-12
VALVE, Exhaust Gas Recirculating .....	4.700-1	WASHER, Horn Link Lower Dovetail Spring ..	12.060-6a
VALVE, Exhaust Gas Recirculating Delay ..	4.700-8	WASHER, Horn Blowing Cover Insulating....	3.401-4a
VALVE, Gasoline Tank Fuel Vent Line		WASHER, Hydramatic Transmission Center	
Check.....	4.142-15	Support Thrust.....	6.556-8
VALVE, Heater Water Flow Control .....	13.035	WASHER, Hydramatic Transmission Forward	
VALVE, Hydramatic Transmission Pressure		Clutch Hub And Direct Housing Clutch	
Regulator.....	6.512-4	Thrust.....	6.595-12
VALVE, Hydramatic Transmission Vacuum		WASHER, Hydramatic Transmission Forward	
Modulator.....	6.655-7	Clutch Hub Thrust.....	6.595-11
VALVE, Intake.....	1.077-1	WASHER, Hydramatic Transmission Front	
VALVE, Modulator Vacuum Control .....	4.006-2	Servo Piston.....	6.530-6
		WASHER, Hydramatic Transmission Output	
		Shaft To Case Thrust.....	6.635-7

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>W - Cont.</b>		<b>W - Cont.</b>	
WASHER, Hydramatic Transmission Pump To Case .....	6.535-7	WASHER, Transmission Reverse Idler Gear Bearing Roller.....	6.170-5
WASHER, Hydramatic Transmission Pump To Forward Clutch Drum .....	6.538-1	WASHER, Valve Assembly To Glove Box....	18.585-2
WASHER, Hydramatic Transmission Reaction Carrier To Output Carrier .....	6.590-3	WASHER, Valve Rocker Arm Shaft Spring....	1.098-7
WASHER, Hydramatic Transmission Rear Servo Piston.....	6.540-8	WASHER, Windshield Hold Down Strap.....	25.008-4
WASHER, Hydraulic Hose To Slave Cylinder.	5.216-3	WATERSHIELD, Instrument Panel Speaker ..	15.320-7
WASHER, Hydraulic Tube Connector.....	5.213-3	WEATHERSEAL, Top Enclosure Body Side Glass.....	28.565-1
WASHER, Ignition Cylinder Wave .....	3.135-7	WEATHERSTRIP, Front Door Glass (Inner) ..	25.055-1
WASHER, Lever To Clutch Throwout Lever Pin .....	5.123-2	WEATHERSTRIP, Front Door Glass (Outer) .	25.058-1
WASHER, Master Cylinder Push Rod Retention .....	8.046-4	WEATHERSTRIP, Front Door Glass Division Bar.....	23.117
WASHER, Rear Axle Differential Pinion Thrust.....	9.033-1	WEATHERSTRIP, Front Floor Pan Tool Compartment Lid.....	20.006-7
WASHER, Rear Axle Differential Side Gear Thrust .....	9.029-1	WEATHERSTRIP, Front Door Ventilator.....	23.116-1
WASHER, Rear Axle Pinion Nut.....	9.050-5	WEATHERSTRIP, Gasoline Tank Check Valve Drain Tube .....	4.132-3
WASHER, Remote Control Handle .....	23.058-3	WEATHERSTRIP, Hood.....	12.022-1
WASHER, Steering Column Locking Bolt Spring Thrust.....	10.337-5	WEATHERSTRIP, Rear Door Glass (Inner) ..	25.056-1
WASHER, Steering Column Lock Inhibitor Wave .....	10.337-8	WEATHERSTRIP, Rear Door Glass (Outer) ..	25.059-1
WASHER, Steering Gear Cross Shaft Adjusting Screw Thrust .....	10.306-2	WEATHERSTRIP, Rear Quarter Pivoting Type Window.....	25.027-4
WASHER, Steering Gear Jacket Tube Lower Bushing To U-Joint.....	10.346-3	WEATHERSTRIP, Rear Quarter Window.....	25.026-2
WASHER, Steering Gear Jacket Tube Upper Bearing Thrust.....	10.344-6	WEATHERSTRIP, Tailgate Glass (Inner)....	25.065-1
WASHER, Steering Gear Shaft Lower Bearing Spring Thrust.....	10.771	WEATHERSTRIP, Tailgate Glass (Outer) ...	25.066-1
WASHER, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling Bearing Retainer.....	10.730-1	WEATHERSTRIP, Top Enclosure Liftgate... Glass.....	28.587-2
WASHER, Threespeed Transmission Main Shaft Nut.....	6.068-3	WEATHERSTRIP, Top Enclosure Liftgate Glass.....	28.587-1
WASHER, Thrust.....	18.520-11	WEATHERSTRIP, Windshield To Cowl.....	25.002-4
WASHER, Transfer Case Front Output Shaft Gear Thrust .....	18.035-2	WEIGHT, Wheel Balance .....	8.280
WASHER, Transfer Case Front Yoke To Shaft .....	18.110-2	WELT, Radiator Grille.....	2.050-8
WASHER, Transfer Case Intermediate Gear Shaft Thrust.....	18.050-5	WELT, Tail And Stop Lamp To Panel.....	3.305-5
WASHER, Transfer Case Rear Yoke To Shaft .....	18.115-2	WHEEL.....	8.270-1
WASHER, Transfer Case Yoke To Output Shaft .....	18.570-2	WHEEL, Air Conditioning Blower Motor....	13.072-13
WASHER, Transmission Countershaft Gear Bearing Roller.....	6.167-3	WHEEL, Heater And Defroster Motor.....	13.072-13a
WASHER, Transmission Countershaft Gear Thrust (Front) .....	6.166-1	WHEEL, Steering .....	10.280-1
WASHER, Transmission Countershaft Gear Thrust (Rear) .....	6.166-2	WICK, Crankshaft Bushing Oil.....	1.043-2
WASHER, Transmission Front Ball Bearing Retaining .....	6.040-2	WINDOW ASSEMBLY, Front.....	28.704-1
		WINDOW ASSEMBLY, Rear Liftgate .....	28.708-1
		WINDOW ASSEMBLY, Side .....	28.706-1
		WIRE, Ammeter And Oil Pressure Gauge ...	3.600-5
		WIRE, Backup Lamp And Transmission Controlled Spark .....	3.318-1
		WIRE, Backup Lamp Extension .....	3.318-5
		WIRE, Backup Lamp Switch To Left Tumblers	3.135-9
		WIRE, Brake Pressure Warning Lamp Extension .....	3.651-2
		WIRE, Cigar Lighter.....	3.352-5
		WIRE, Courtesy Lamp To Domelamp Harness Jumper.....	3.349-8
		WIRE, Distributor To Coil High Tension ...	3.232-1
		WIRE, Domelamp Switch To Harness.....	3.346-6
		WIRE, Electronic Ignition Control Ground ...	3.044-3
		WIRE, Front Door To Rear Switches.....	3.346-5
		WIRE, Gasoline Gauge To Frame Harness...	3.615-7

## ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
<b>W - Cont.</b>			
WIRE, Heattump Ground .....	3.173-1a		
WIRE, Heater And Defroster Control .....	13.017-12		
WIRE, Heater And Defroster Motor Jumper ...	13.072-2b		
WIRE, Horn .....	3.400-11		
WIRE, Parking And Directional Signal Lamp Wire .....	3.292-11		
WIRE, Parking Brake Switch Jumper .....	3.650-5		
WIRE, Parking Brake Warning Lamp Extension .....	3.650-7		
WIRE, Portable Air Compressor .....	15.460		
WIRE, Pressure Warning Valve To Light Switch .....	3.651-6		
WIRE, Seat Upholstery .....	29.114		
WIRE, Seat Upholstery Listing .....	29.113-1		
WIRE ASSEMBLY, Carburetor Closing Solenoid .....	3.165-1c		
WIRE ASSEMBLY, Electric Choke .....	3.169-1		
WIRE ASSEMBLY, Jumper Door Light Switch ..	3.346-16		
WIRE SET, Ignition .....	3.228-1		
WRENCH, Wheel Kit .....	14.138-3		
WRENCH, Wheel Nut .....	14.138-3		
<b>- Y -</b>			
YOKE, Axle Pinion .....	9.104-6		
YOKE, Front Axle To Propeller Shaft .....	9.404-1		
YOKE, Front Propeller Shaft Universal Joint Sleeve .....	9.104-1		
YOKE, Rear Propeller Shaft Universal Joint Sleeve .....	9.104-2		
YOKE, Steering Gear Upper Shaft To Lower Shaft Or Lower Shaft To Intermediate Shaft	10.718-1		
YOKE ASSEMBLY, Transfer Case To Universal Joint (Front) .....	18.110-1		
YOKE ASSEMBLY, Transfer Case To Universal Joint (Rear) .....	18.115-1		
YOKE ASSEMBLY, Transfer Case To Universal Joint Front .....	18.570-1		
YOKE ASSEMBLY, Transfer Case To Universal Joint Rear .....	18.575-1		
YOKE KIT, Front Propeller Shaft Socket ....	9.110-6		

# ALPHABETICAL INDEX

---

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
-------------	-----------	-------------	-----------

---

## ABBREVIATIONS AND CODES INDEX

* .....	Refer To Notes Preceding Group	Lbs. ....	Pounds
# .....	Nominal Number Size	LBS .....	Less Bucket Seats
# .....	Number	LBWV .....	Less Brake Warning Valve
2WD .....	Two Wheel Drive	LCC .....	Less Catalytic Converter
4WD .....	Four Wheel Drive	LCCS .....	Less Catalytic Converter System
84WB .....	84 Inch Wheelbase	LCAI .....	Less Cold Air Induction
104WB .....	104 Inch Wheelbase	LCFE .....	Less Controlled Fuel Evaporation
110WB .....	110 Inch Wheelbase	LCGS .....	Less Column Gear Shift
119WB .....	119 Inch Wheelbase	LDB .....	Less Disc Brakes
131WB .....	131 Inch Wheelbase	LDE .....	Less Dual Exhaust
232 .....	SIX-232 Cubic Inch Displacement	LDT .....	Less Dual Throat Carburetor
258 .....	SIX-258 Cubic Inch Displacement	LEAB .....	Less Energy Absorbing Bumper
304 .....	V8-304 Cubic Inch Displacement	LEEP .....	Less Exhaust Emission Pump
360 .....	V8-360 Cubic Inch Displacement	LEGR .....	Less Exhaust Gas Recirculation
401 .....	V8-401 Cubic Inch Displacement	LEOW .....	Less Electrically Operated Windshield Washer
Alt. ....	Alternator	LER .....	Less Electric Regulator
Amp. ....	Amphere	LFGS .....	Less Floor Gear Shift
API .....	Necessary Attaching Parts Included	LFFC .....	Less Filter Oil Filler Cap
AR .....	As Required	LFRS .....	Less Fold Down Rear Seat
Assy. ....	Assembly	LHPG .....	Less Handling Package
Auto. ....	Automatic	LHD .....	Less Hand Drive
Bbl. ....	Barrel	LHDC .....	Less Heavy Duty Cooling
Beg. ....	Beginning	LHT .....	Less Hydramatic Transmission
Brg. ....	Bearing	LOCT .....	Less Oil Cooler Tubes
Calif. ....	California	LPB .....	Less Power Brakes
Carb. ....	Carburetor	LPS .....	Less Power Steering
CP .....	Complete	LQT .....	Less Quadra Trac
C.I.D. ....	Cubic Inch Displacement	LSFC .....	Less Sealed Oil Filler Cap
C.P. ....	Candle Power	LTAC .....	Less Thermostatic Air Control In Air Cleaner
C.R. ....	Cross Recess	LTCS .....	Less Transmission Controlled Spark
CKD .....	Complete Knock Down	LTTP .....	Less Trailer Towing Package
Cyl. ....	Cylinder	LTVS .....	Less Thermostatic Vacuum Switch
Dia. ....	Diameter	LWO .....	Less Woodgrain Overlay
D/S .....	Directional Signal	L4ST .....	Less 4-Speed Transmission
Dlx. ....	Deluxe	LRC .....	Less Roof Cover
DR. ....	Door	LSP .....	Less Snow Plow
E/ .....	Except	Mldg. ....	Moulding
Ft. ....	Serviced In Bulk Only; Therefore, Specify Length Required In Feet	M.P.H. ....	Miles Per Hour
Gal. ....	Gallon	MR .....	Modification May Be Required
Gskt. ....	Gasket	NA .....	Not Available
GVW .....	Gross Vehicle Weight	NC .....	Neutral Color
Hsg. ....	Housing	NO. ....	Number
I.D. ....	Inside Diameter	OAC .....	Optional Air Conditioning
Incl. ....	Includes	O.D. ....	Outside Diameter
Inter. ....	Intermediate	OEO .....	Optional Exterior Ornamentation
L .....	Left	Ord. ....	Order
L/C .....	Low Compression	O.S. ....	Oversize
LAC .....	Less Production Installed Air Conditioning And Also Applicable To Vehicles Equipped With American Air	Oz. ....	Ounce
LAE .....	Less Alternator Equipment	PCV .....	Positive Crankcase Ventilation
LAF .....	Less Automatic Fan	PO .....	Indicates Part Of
LASC .....	Less Automatic Speed Control	Pkg. ....	Package
LAW .....	Less Adjusting Steering Wheel	Pr. ....	Price
		Qt. ....	Quart
		R .....	Right
		Ref. ....	Refer
		Reg. ....	Regulator
		Req. ....	Required
		RHD .....	Right Hand Drive
		RWD .....	Rear Window Defogger
		SE .....	Special Equipment
		Six .....	Six Cylinder Engine
		SS .....	Supplied For Service
		Std. ....	Standard

## ABBREVIATIONS AND CODES INDEX (Continued)

Temp. ....	Temperature	W3ST .....	With Threespeed Transmission
Therm. ....	Thermostat	W4ST .....	With Fourspeed Transmission
Thrifside .....	(Same As Flairside)		
Townside .....	(Same As Styleside)	W4B .....	With Four Barrel Carburetor
Trans. ....	Transmission	W4BF .....	With Four Blade Fan
TRK .....	Truck	W5BF .....	With Five Blade Fan
U. S. ....	Undersize	W6BF .....	With Six Blade Fan
		W7BF .....	With Seven Blade Fan
V .....	Volts		
V8 .....	Eight Cylinder Overhead Valve Engine		
VDO .....	Vehicle Deviation Order		
w/ .....	With		
w/o .....	Without		
WAA .....	With American Air		
WAC .....	With Production Installed Air Conditioning But Not Applicable To Vehicles Equipped With American Air		
WAE .....	With Alternator Equipment		
WAF .....	With Automatic Fan		
WASC .....	With Automatic Speed Control		
WAW .....	With Adjusting Steering Wheel		
WB .....	Wheelbase		
WBG .....	With Bumper Guards		
WBS .....	With Bucket Seats		
WBV .....	With Brake Warning Valve		
WCAI .....	With Cold Air Induction		
WCC .....	With Catalytic Converter		
WCCS .....	With Catalytic Converter System		
WCFE .....	With Controlled Fuel Evaporation (Evaporative Emission Control)		
WCGS .....	With Column Gear Shift		
WCHB .....	With Center Horn Button		
WDB .....	With Disc Brakes		
WDBD .....	With Dual Belt Drive		
WDT .....	With Dual Throat Carburetor		
WEAB .....	With Energy Absorbing Bumper		
WECP .....	With Exhaust Emission Pump		
WEGR .....	With Exhaust Gas Recirculation		
WEOW .....	With Electrically Operated Windshield Washer		
WER .....	With Electric Regulator		
WEW .....	With Electric Wiper		
WFFC .....	With Filter Oil Filler Cap		
WFGS .....	With Floor Gear Shift		
WFS .....	With Full Seat		
WHDC .....	With Heavy Duty Cooling		
WHT .....	With Hydramatic Transmission		
WLD .....	With Locking Differential (Applies To Powr - Lok And Twin Grip Differential)		
WMT .....	With Manual Transmission		
WOCT .....	With Oil Cooler Tubes		
WPB .....	With Power Brakes		
WPS .....	With Power Steering		
WQT .....	With Quadra Trac		
WSBD .....	With Single Belt Drive		
WSFC .....	With Sealed Oil Filler Cap		
WSH .....	With Spoke Horn		
WST .....	Recoded W3ST - With Threespeed Transmission		
WTAC .....	With Thermostatic Air Control In Air Cleaner		
WTCS .....	With Transmission Controlled Spark		
WTTP .....	With Trailer Towing Package		
WTVS .....	With Thermostatic Vacuum Switch		
WWO .....	With Woodgrain Overlay		