

SPECIAL INFORMATION

The Engine Build Code Number, the Vehicle Identification Number and the information provided on the Trim Plate are often necessary when determining the proper replacement parts for your vehicle. For their location refer to the General Information Section found at the front of this catalog.

NOTES

TRANSMISSION

6.007

GROUP NO. — DESCRIPTION — YEAR and MODEL	PAKS CODE	PRIMARY GROUP NO.	PER CAR	PART NO.	CODE
6.001-1 TRANSMISSION					
W3ST					
76 10-20-40 (Six).....			1	535 3955	
74/75 (13-02-000-047)(T14A) 10-25-45 (Six).....			1	535 1099	
74 (13-07-000-005)(T15A) 20-40 (Six).....			1	812 0378	
74/75 (13-02-000-046)(T14A) 80 (Six).....			1	535 1073	
74 (13-07-000-017)(T15A) 10-20-40 (V8).....			1	812 2250	
75 (13-07-000-043)(T15A) 10-20-40 (V8).....			1	535 3955	
76 10-20-40 (V8).....			1	535 5259	
74/75 (13-07-000-012)(T15A) 80 (V8).....			1	999 638	
76 80-90.....			1	535 4448	
W4ST					
74/ (13-01-000-040) 10-20-40 (Six).....			1	535 1416	
76 10-20-40 (Six).....			1	535 1416	
74 (13-01-000-041) 10-20-40 (V8).....			1	535 1417	
75 (13-01-000-148) 10-20-40 (V8).....			1	535 3953	
76 10-20-40 (V8).....			1	535 3953	
74/75 (13-01-000-023) 80.....			1	999 636	
76 80-90.....			1	535 5010	
6.002-1 GASKET SET, Transmission Overhaul (Incl. Oil Seal)					
74/75 (T14A)...(Incl. Oil Seal).....			1	991 198	
74/75 (T15A)...(Incl. Oil Seal).....			1	991 199	
74/ W4ST...(Incl. Oil Seal)..... 78			1	923 302	
76 W3ST (10)(20)(40)...(Incl. Oil Seal).....			1	991 199	
76 W3ST (80)(90)...(Less Oil Seal).....			1	812 7215	
6.004-1 RING SET, Transmission Overhaul Snap					
76 W3ST (80)(90).....			1	812 7216	
6.005-1 CASE, Transmission					
74/75 (T14A).....			1	991 010	
74/75 (T15A).....			1	991 011	
74/ W4ST.....			1	940 495	
76 W3ST (10)(20)(40).....			1	991 011	
76 W3ST (80)(90).....			1	812 6808	
6.005-2 ATTACHING PARTS, Transmission To Clutch Housing					
BOLT, Hexagon..... 74/.....	17.038		4	G180147	
WASHER, Lock..... 74/.....	17.820		4	G120383	
6.005-3 BREATHER, Transmission Case					
74/75 (T15A).....			1	916 901	
74/ W4ST.....			1	912 375	
76 W3ST (80)(90).....			1	812 6822	
6.005-4 PLUG, Transmission Filler Pipe					
74/75 (T14A).....	17.512		1	G444588	
74/75 (T15A)(W4ST).....	17.512		1	G444592	
76 W3ST (10)(20)(40).....	17.512		1	G444592	
76 W3ST (80)(90).....	17.		1	G438159 NA	
76 W4ST.....	17.512		1	G444592	
6.005-5 PLUG, Transmission Drain					
74/75 W3ST.....			1	991 035	
76 W3ST (10)(20)(40).....			1	991 035	
76 W3ST (80)(90).....			1	812 6812	
74/75 W4ST.....	17.512		1	G444592	
76 W4ST.....	17.512		1	G444592	
6.007-1 SKID PLATE, Under Frame To Transmission					
74 80.....			1	535 0710	
75 80.....			1	535 4379	
76 80 (W4ST).....			1	535 5838	

6.007

TRANSMISSION

6.007-2 ATTACHING PARTS, Skid Plate To Under Frame							
BOLT, Round Head	74	80...	(3/8"-16 x 1")	17.046	4	G120915	
BOLT, Round Head	74	80...	(3/8"-16 x 1/2")	17.	4	G120411	NA
BOLT, Hexagon	75/	80...	(3/8"-16 x 3/4")	17.629	4	G273773	
WASHER, Plain	74	80		17.814	4	G120394	
NUT, Hexagon	74	80		17.412	4	G271190	
NUT, Lock	75/	80		4.500	4	400 3909	
6.007-3 SPACER, Skid Plate To Engine Rear Support Crossmember							
75	10				1	997 876	
74	80			11.001	4	999 882	
6.009-2 COVER, Transmission Case							
74/75	(T14A)				1	812 1345	
74/75	(T15A)				1	812 0443	
76	W3ST (10)(20)(40)				1	812 0443	
74/	W4ST (10)(20)(40)				1	999 050	
74/	W4ST (80)(90)				1	812 1361	
76	W3ST (80)(90)				1	812 6819	
6.009-3 ATTACHING PARTS, Transmission Cover To Case							
BOLT, Hexagon	74/75	(T14A)		17.038	6	G179816	
BOLT, Hexagon	74/75	(T15A)		17.038	8	G179816	
BOLT, Hexagon	76	W3ST (10)(20)(40)		17.038	8	G179816	
BOLT, Hexagon	76	W3ST (80)(90)	(Incl. Washer)		7	812 6815	
BOLT, Hexagon	76	W3ST (80)(90)			1	812 6816	
WASHER, Lock	74/75	W3ST		17.820	8	G120638	
WASHER, Lock	74/	W4ST		17.820	6	G120638	
WASHER, Lock	76	W3ST (10)(20)(40)		17.820	8	G120638	
WASHER, Lock	76	W3ST (80)(90)			1	812 6817	
6.009-4 GASKET, Transmission Case Cover							
74/75	(T14A)				1	991 089	
74/75	(T15A)				1	991 090	
76	W3ST (10)(20)(40)				1	991 090	
74/	W4ST				1	912 373	
76	W3ST (80)(90)				1	812 6814	
6.009-5 COVER, Fourspeed Transmission Case Side Opening							
74/					1	912 400	
6.009-6 ATTACHING PARTS, Fourspeed Transmission Side Cover To Case							
BOLT, Hexagon	74/			17.038	6	G179838	
BOLT, Hexagon	74/			17.038	6	G180121	
WASHER, Lock	74/			17.820	6	G120382	
6.009-7 GASKET, Fourspeed Transmission Case Side Opening Cover							
74/					1	912 401	
6.017-1 CAP, Transmission Front Bearing							
74/75	(T14A) 10-20-40 (Six)				1	812 2415	
74	(T15A) 10-20 (Six)				1	991 057	
74	(T15A) 10-20-40 (V8)				1	998 590	
75	(T15A) 10-20-40 (V8)				1	812 5717	
74/75	(T15A)				1	991 057	
74/75	(T14A) 80				1	991 055	
76	W3ST (10-Six)(20-Six)(40-Six)				1	991 057	
76	10-20-40 (Six)				1	812 2415	
76	W3ST (80)(90)				1	812 4880	
76	W3ST (10-V8)(20-V8)(40-V8)				1	812 5717	
76	10-20-40 (V8)				1	812 5945	
74	W4ST (10-V8)(20-V8)(40-V8)				1	998 601	
75	W4ST (10-V8)(20-V8)(40-V8)				1	812 5945	
74/75	W4ST (80)				1	812 1359	
76	W4ST (80)(90)				1	812 6874	
6.017-2 ATTACHING PARTS, Cap To Transmission							
BOLT, Hexagon	74/75	(T14A)			3	991 064	
BOLT, Hexagon	74/75	(T15A)			4	934 498	

TRANSMISSION

6.020

	BOLT, Hexagon..... 74/	W4ST.....	17.038	4	G179817
	BOLT, Hexagon..... 76	W3ST (80)(90).....		4	317 1599
	WASHER, Lock..... 74/	W4ST.....	17.822	4	G138485
	SCREW, Tapping..... 76	W3ST (10)(20)(40).....		4	319 0386
6.017-3	GASKET, Front Bearing Cap				
	74/75 (T14A).....			1	991 062
	74/75 (T15A).....	<i>(Use 319 2431)</i>		1	991 063
	76 W3ST (10)(20)(40).....			1	319 2431
	76 W3ST (80)(90).....			1	812 4853
	74/ W4ST.....			1	912 371
6.017-4	GASKET, Threespeed Transmission Front Bearing Cap Screw				
	74/75 (T14A).....			3	51 875
	74/75 (T15A).....			4	51 875
	76 10-20-40.....			4	319 0387
6.018-1	RAIL, Threespeed Transmission Shift High And Intermediate				
	74/75 (T14A).....			1	812 1346
	74/75 (T15A).....	6.190		1	812 0445
	76 10-20-40.....	6.190		1	812 0445
	76 80-90.....			1	812 6824
6.018-1a	RAIL, Fourspeed Transmission Shift Direct And Third				
	74/.....			1	812 1362
6.018-2	RAIL, Threespeed Transmission Shift Low And Reverse				
	74/75 (T14A).....			1	991 086
	74/75 (T15A).....			1	991 087
	76 10-20-40.....			1	991 087
	76 80-90.....			1	812 6823
6.018-2a	RAIL, Fourspeed Transmission Shift Low And Second				
	74/.....			1	948 701
6.018-3	RAIL, Fourspeed Transmission Shift Reverse				
	74/.....			1	948 750
6.018-4	CAP, Threespeed Transmission Shift Rail				
	74/75.....			2	991 083
	76 10-20-40.....			2	991 083
	76 80-90.....			2	812 6820
6.018-4a	PIN, Threespeed Transmission Guide Control Housing				
	74/75.....			1	643 700
	76 10-20-40.....			1	643 700
6.018-5	PLUG, Transmission Control Housing (Tapper)				
	74/75.....	6.265		1	642 759
	76 10-20-40.....	17.		1	G453593
	76 80-90 (W3ST).....			1	812 6821
6.018-6	PLUNGER, Transmission Gear Shift Interlock				
	76 W3ST (10)(20)(40).....			1	912 389
	76 W3ST (80)(90).....			1	812 6830
	74/ W4ST.....			2	912 389
6.018-7	PIN, Fourspeed Transmission Gear Shift Interlock				
	74/.....			1	912 388
6.018-8	PLUG, Fourspeed Transmission Expansion				
	74/.....	17.500		6	G103892
	76 10-20-40.....			1	314 5192
6.020-1	END, Fourspeed Transmission Shift Rail First And Second				
	74/.....			1	948 704
6.020-2	END, Fourspeed Transmission Shift Rail Reverse				
	74/.....			1	948 705

6.020

TRANSMISSION

6.020-3	PLUNGER, Fourspeed Transmission Shift Rail End Reverse			
74/	1	946	309
6.020-4	SPRING, Fourspeed Transmission Shift Rail End Reverse Plunger			
74/	1	912	393
6.020-5	"C" WASHER, Fourspeed Transmission Shift Rail End Reverse Plunger			
74/	1	912	394
6.020-6	BALL, Fourspeed Transmission Shift Rail End Plunger Poppet			
74/	16.085	1	321 3666
6.020-7	SPRING, Fourspeed Transmission Shift Rail End Plunger Poppet			
74/	1	912	395
6.020-8	PIN, Fourspeed Transmission Reverse Plunger Poppet Retainer			
74/	17.460	1	G137185
6.021-1	SEAL, Threespeed Transmission Front Bearing Oil			
74 (Use 317 4533)	1	941	664
75	(T14A) SIX (Use 317 4533)	1	941	664
76	10-20 (Six).....	1	812	5718
75	(T15A) 10-20-40 (V8).....	1	812	5718
76	10-20-40 (V8).....	1	812	5718
75	(T15A) 80 (V8)..... (Use 317 4533)	1	941	664
76	80-90.....	1	812	4881
6.040-1	BEARING, Transmission Front Ball			
74/75	(T14A).....	1	941	658
74/75	W4ST (T15A).....	1	448	8141
76	10-20-40.....	1	448	8141
76	W3ST (80)(90).....	1	812	4933
76	W4ST.....	1	448	8141
6.040-2	WASHER, Transmission Front Ball Bearing Retaining			
74/75	(T14A)..... (Use 319 3968)	1	991	072
74/75	(T15A)(W4ST).....	1	640	893
76	W3ST (10)(20)(40).....	1	640	893
6.044-1	RING, Transmission Front Ball Bearing Snap			
74/75	(T14A)...(.118-.120 Thick).....	6.144	1	991 022
74/75	(T14A)...(.121-.123 Thick).....	6.144	1	991 023
74/75	(T14A)...(.124-.126 Thick).....	6.144	1	991 024
74/75	(T14A)...(.127-.129 Thick).....	6.080	1	991 025
74/75	(T14A)...(.130-.132 Thick).....	1	991 066
74/75	(T15A)...(.119 Thick).....	1	991 067
74/75	(T15A)...(.122 Thick).....	1	991 068
76	W3ST (10)(20)(40).....	1	319	2351
76	W3ST (10)(20)(40).....	1	320	9983
76	W3ST (80)(90).....	1	812	4883
74/75	(T15A)...(.125 Thick).....	1	991	069
74/75	(T15A)...(.127 Thick).....	1	991	070
76	W3ST (10)(20)(40).....	1	320	9984
76	W3ST (10)(20)(40).....	1	320	9985
74/	W4ST...(.117-.119 Thick).....	AR	912	363
74/	W4ST...(.120-.122 Thick).....	AR	912	364
74/	W4ST...(.123-.125 Thick).....	AR	912	365
74/	W4ST...(.127-.129 Thick).....	AR	912	366
6.048-1	RING, Transmission Front Ball Bearing Lock			
74/75	(T14A).....	16.160	1	640 782
74/75	(T15A).....	1	991	065
76	W3ST (10)(20)(40).....	1	448	8142
76	W3ST (80)(90).....	1	812	4882
74/	W4ST.....	6.052	1	912 342

TRANSMISSION

6.068

6.052-1	BEARING, Transmission Rear Ball			
	74/75 (T14A)	1	992 289	
	74/75 (T15A)	1	991 076	
	76 W3ST (10)(20)(40)	1	991 076	
	76 W3ST (80)(90)	1	812 6834	
	74/ W4ST	1	912 341	
6.052-2	ADAPTER, Transmission Rear Bearing			
	74/75 (T14A)	1	991 308	
	74/75 (T15A)	1	812 3033	
	76 W3ST (10)(20)(40)	1	812 3033	
	76 W3ST (80)(90)	1	812 6810	
6.052-2a	RETAINER, Transmission Rear Bearing			
	74/75 (T14A)	1	991 077	
	74/75 (T15A)	1	991 078	
	76 W3ST (10)(20)(40)	1	991 078	
	74/ W4ST	1	912 342	
	76 80-90	1	812 6813	
6.052-2b	ATTACHING PARTS, Adapter To Case			
	BOLT, Hexagon 76 W3ST (80)(90)	3	812 7054	
	WASHER, Lock 76 W3ST (80)(90)	1	812 6811	
6.052-3	GASKET, Fourspeed Transmission Rear Bearing Retainer			
	74/	1	933 450	
6.053-1	PLATE, Fourspeed Transmission Adapter To Transfer Case			
	74/ 10-20-40	1	927 829	
	74/ 80-90	6.031	1 948 434	
6.053-2	SEAL, Transmission Adapter Plate			
	74/ W4ST	6.070	1 939 335	
	76 80-90 (W3ST)	1	938 031	
6.053-3	GASKET, Transmission Adapter Plate To Transfer Case			
	74/ W3ST	1	937 974	
	74/ W4ST	1	936 615	
6.053-4	ATTACHING PARTS, Fourspeed Adapter Plate To Transfer Case			
	BOLT, Hexagon 74/ (1-1/4" Long)	17.038	4 G180124	
	BOLT, Hexagon 74/ (1-3/8" Long)	17.038	2 G106337	
	WASHER, Lock 74/ (3/8")	17.820	4 G120382	
	WASHER, Lock 74/ (7/16")	17.820	2 G120383	
6.057-1	SPACER, Fourspeed Transmission Speedometer Gear			
	74/	6.035	1 911 215	
6.060-1	SHAFT, Transmission Clutch			
	74/75 (T14A)	1	991 059	
	74 (T15A) 20-40 (Six)	1	991 061	
	74 (T15A) 10-20-40 (V8)	1	998 607	
	75 (T15A) 10-20-40 (V8)	1	812 5561	
	74/75 (T15A) 80 (V8)	1	991 061	
	76 W3ST (10-Six)(20-Six)(40-Six)	1	991 061	
	76 W3ST (10-V8)(20-V8)(40-V8)	1	812 5561	
	74 W4ST (10-Six)(20-Six)(40-Six)	1	941 110	
	76 W4ST (10-Six)(20-Six)(40-Six)	1	941 110	
	74 W4ST (10-V8)(20-V8)(40-V8)	1	812 3036	
	75 W4ST (10-V8)(20-V8)(40-V8)	1	812 5946	
	76 W4ST (10-V8)(20-V8)(40-V8)	1	812 5946	
	76 W3ST (80)(90)	1	812 6106	
	74/75 W4ST (80)	1	812 1360	
	76 W4ST (80)(90)	1	812 6875	
6.068-1	SHAFT, Transmission Spline			
	74/75 (T14A)	1	991 012	
	74/75 (T15A)	1	991 013	
	76 W3ST (10)(20)(40)	1	991 013	
	74/ W4ST	1	942 937	
	76 W3ST (80)(90)	1	812 6804	

6.068

TRANSMISSION

6.068-2	NUT, Threespeed Transmission Main Shaft			
	74/75	1	940	970
	76 10-20-40.....	1	940	970
	76 80-90.....	1	812	6806
6.068-3	WASHER, Threespeed Transmission Main Shaft Nut			
	74/75	18.070	1	A 1410
	76 80-90.....	1	812	6807
6.068-5	SPACER, Threespeed Transmission Main Shaft Bearing			
	74/75 (T14A).....	1	991	079
	74/75 (T15A).....	1	991	080
	76 10-20-40.....	1	991	080
6.068-5a	BUSHING, Threespeed Transmission Mainshaft			
	76 80-90.....	1	812	6805
6.068-6	RING, Fourspeed Transmission Main Shaft Snap			
	74/	3	912	333
6.076-1	ROLLER, Transmission Spline Shaft Pilot Bearing			
	74/75 W3ST	21	941	659
	76 W3ST (10)(20)(40)	21	320	8152
	76 W3ST (80)(90).....	15	812	4929
	74/ W4ST	22	912	345
6.076-2	SPACER, Fourspeed Transmission Spline Shaft Pilot Bearing Roller			
	74/	6.167	1	912 346
6.080-1	CLUTCH ASSEMBLY, Threespeed Transmission Synchronizer Second And High			
	74/75 (T14A)...(Less Friction Rings).....	95	1	948 991
	74/75 (T15A)...(Less Friction Rings).....	89	1	991 014
	76 10-20-40...(Less Friction Rings).....	89	1	991 014
	76 80-90.....	1	812	6235
6.080-2	CLUTCH ASSEMBLY, Threespeed Transmission Synchronizer Low And Reverse			
	74/75 (T14A)...(Less Friction Rings).....	93	1	948 992
	74/75 (T15A)...(Less Friction Rings).....	1	991	031
	76 10-20-40.....	1	991	031
	76 80-90.....	1	812	6234
6.080-3	CLUTCH ASSEMBLY, Fourspeed Transmission Synchronizer Third And Fourth			
	74/	47	1	912 319
6.080-4	CLUTCH ASSEMBLY, Fourspeed Transmission Synchronizer Low And Second			
	74/	227	1	940 499
6.080-5	RING, Threespeed Transmission Synchronizer Clutch Snap Second And High			
	74/75 (.118-.120 Thick).....	6.144	AR	991 022
	76 (.118-.120 Thick)...10-20-40.....	AR	318	4552
	74/75 (.121-.123 Thick).....	6.144	AR	991 023
	76 (.121-.123 Thick)...10-20-40.....	AR	318	6261
	74/75 (.124-.126 Thick).....	6.144	AR	991 024
	76 (.124-.126 Thick)...10-20-40.....	AR	318	6262
	74/75 (.127-.129 Thick).....	6.080	AR	991 025
	76 (.127-.129 Thick)...10-20-40.....	AR	318	6263
	76 80-90.....	1	812	4935
6.080-6	SNAP RING, Threespeed Transmission Synchronizer Clutch Low And Reverse			
	76 80-90.....	1	812	4934
6.080-7	RING, Fourspeed Transmission Synchronizer Third And Fourth Snap			
	74/	1	912	328
6.085-1	ARM, Fourspeed Transmission Reverse Shifting			
	74/	1	912	397
6.085-2	PIVOT, Fourspeed Transmission Reverse Shifting Arm			
	74/	1	912	398

TRANSMISSION

6.120

6.085-3	"O" RING, Fourspeed Transmission Shifting Pivot 74/	6.190	1	912 399
6.085-4	PIN, Fourspeed Transmission Shifting Arm Pivot (Tapper) 74/	17.470	1	G103565
6.085-5	SHOE, Fourspeed Transmission Shifting Reverse 74/		1	912 386
6.085-6	"C" WASHER, Fourspeed Transmission Shifting Shoe Reverse 74/		1	912 387
6.090-1	RING SET, Threespeed Transmission Synchronizer Clutch Friction 74/75 (T14A)..... 224 74/75 (T15A)..... 224 76 10-20-40..... 224 76 80-90.....		1 1 1 1	320 9971 320 9972 320 9972 812 4898
6.090-3	RING Fourspeed Transmission Synchronizer Third And Fourth 74/		2	912 324
6.090-4	RING, Fourspeed Transmission Synchronizer Low And Second 74/		1	912 340
6.090-5	RING, Threespeed Transmission Synchronizer Clutch Friction Low And Reverse 76 80-90.....		1	812 4906
6.100-1	PLATE, Threespeed Transmission Synchronizer Clutch Shaft Second And High 74/ 10-20-40..... (Use 319 2412) 74/75 80..... 76 80-90.....		3 3 3	991 015 991 015 812 4895
6.100-2	PLATE, Threespeed Transmission Synchronizer Clutch Shaft Low And Reverse 74/75 (T14A)..... 74/75 (T15A)..... 76 10-20-40..... 76 80-90.....		3 3 3 3	991 032 319 2434 319 2412 812 4904
6.100-3	PLATE, Fourspeed Transmission Synchronizer Third And Fourth 74/		3	912 322
6.100-3a	PLATE, Fourspeed Transmission Synchronizer Low And Second 74/		3	912 337
6.100-4	SPRING, Threespeed Transmission Synchronizer Shaft Plate Retaining Second And High 74/75 (T14A)..... (Use 319 3236) 74/75 (T15A)..... 76 10-20-40..... 76 80-90.....		2 2 2 2	991 016 991 017 991 017 812 4896
6.100-5	SPRING, Threespeed Transmission Synchronizer Shaft Plate Retaining Low And Reverse 74/75 (T14A)..... (Use 319 3236) 74/75 (T15A)..... 76 10-20-40..... 76 80-90.....		1 1 1 1	991 016 991 034 319 2454 812 4905
6.100-6	SPRING, Fourspeed Transmission Synchronizer Third And Fourth 74/		2	940 511
6.100-7	SPRING, Fourspeed Transmission Synchronizer Low And Second Poppet 74/		3	917 117
6.100-8	BALL, Fourspeed Transmission Synchronizer Low And Second Poppet Spring 74/	17.018	3	G453593
6.100-9	RING, Fourspeed Transmission Synchronizer Low And Second Shifting Plate Retaining 74/		1	912 338
6.120-1	GEAR, Transmission Second Speed 74/75 (T14A)..... 74/75 (T15A)..... 76 W3ST (10)(20)(40).....		1 1 1	812 4644 991 019 991 019

	76	W3ST (80)(90).....	1	812 4899
	74/75	W4ST (10)(20)(40).....	1	940 498
	74/75	W4ST (80).....	1	998 441
	76	W4ST.....	1	940 498
6.120-3	WASHER, Fourspeed Transmission Second Speed Gear Thrust			
	74/	1	912 332
6.130-1	GEAR, Fourspeed Transmission Third Speed			
	74/	10-20-40.....	1	940 497
	74/	80.....	1	998 440
6.144-2	GEAR, Threespeed Transmission Low			
	74/75	(T14A).....	1	991 026
	74/75	(T15A).....	1	991 027
	76	10-20-40.....	1	991 027
	76	80-90.....	1	812 4902
6.144-2a	WASHER, Transmission Low Gear Thrust			
	76	80-90.....	1	812 4936
6.144-3	GEAR, Threespeed Transmission Reverse (Incl. Bearing)			
	74/	(T14A)..... 90	1	991 037
	74/	(T15A)..... 90	1	991 038
	76	10-20-40..... 90	1	991 038
6.144-4	RING, Threespeed Transmission Low Gear Snap			
	74/75	(T14A)...(.098 Thick)..... 6.040	1	932 111
	74/75	(T14A)...(.118-.120 Thick).....	1	991 022
	74/75	(T14A)...(.121-.123 Thick).....	1	991 023
	74/75	(T14A)...(.124-.126 Thick).....	1	991 024
	74/75	(T15A)...(.119 Thick)..... (Use 318 2332)	1	991 028
	74/75	(T15A)...(.122 Thick).....	1	991 029
	74/75	(T15A)...(.125 Thick).....	1	991 030
	76	10-20-40...(.119 Thick).....	1	318 2332
	76	10-20-40...(.122 Thick).....	1	318 6124
	76	10-20-40...(.125 Thick).....	1	318 6125
	76	80-90.....	1	812 4935
6.159-1	COUNTERSHAFT, Transmission			
	74/75	(T14A)..... (Use 319 2435)	1	991 048
	74/75	(T15A)..... (Use 319 2422)	1	991 049
	76	W3ST (10)(20)(40).....	1	319 2422
	76	W3ST (80)(90).....	1	812 4911
	74/	W4ST.....	1	940 494
6.159-2	PIN, Threespeed Transmission Countershaft			
	76	80 90.....	1	812 4931
6.164-1	GEAR, Transmission Countershaft			
	74/75	(T14A).....	1	321 8914
	74/75	(T15A).....	1	991 044
	76	W3ST (10)(20)(40).....	1	991 044
	76	W3ST (80)(90).....	1	812 4907
	74/	W4ST (10)(20)(40).....	1	940 502
	74/	W4ST (80)(90).....	1	998 442
6.166-1	WASHER, Transmission Countershaft Gear Thrust (Front)			
	74/75	(T14A).....	1	641 451
	74/75	(T15A).....	1	941 662
	76	W3ST (10)(20)(40).....	1	941 662
	76	W3ST (80)(90).....	1	812 4909
	74/	W4ST.....	1	912 348
6.166-2	WASHER, Transmission Countershaft Gear Thrust (Rear)			
	74/	(T14A).....	1	991 047
	74/	(T15A).....	1	941 662
	76	W3ST (80)(90).....	1	812 4909
	74/	(Steel) W4ST.....	1	912 350
	74/	(Steel) Backed Bronze W4ST.....	1	939 357

TRANSMISSION

6.172

6.167-1	ROLLER, Transmission Countershaft Rear Bearing		
	74/75 (T14A)	40	640 777
	74/75 (T15A)	44	991 042
	76 W3ST (10)(20)(40)	44	448 5673
	76 W3ST (80)(90)	50	812 4908
	74/ W4ST	88	912 345
6.167-2	SPACER, Transmission Countershaft Gear Roller Bearing		
	74/75 (T14A)	1	991 045
	74/75 (T15A)	1	991 046
	76 W3ST (10)(20)(40)	1	991 046
	74/ W4ST	1	912 347
6.167-3	WASHER, Transmission Countershaft Gear Bearing Roller		
	74/75 (T14A)	4	321 9632
	74/75 (T15A)	4	640 778 <i>(Use 311 2993)</i>
	76 W3ST (10)(20)(40)	4	311 2993
	76 W3ST (80)(90)	2	812 4910
	74/ W4ST	6	912 346
6.168-1	SHAFT, Transmission Idler Gear		
	74/75 (T14A)	1	991 050
	74/75 (T15A)	1	991 051
	76 W3ST (10)(20)(40)	1	319 2373
	76 W3ST (80)(90)	1	812 4912
	74/ W4ST	1	912 359
6.168-2	PIN, Threespeed Transmission Idler Gear Shaft Retaining		
	76 80-90	1	812 4932
6.170-1	GEAR, Transmission Reverse Idler		
	74/75 (T14A)	1	991 039
	74/75 (T15A)	1	991 040
	76 W3ST (10)(20)(40)	1	319 2424
	76 W3ST (80)(90)	1	812 4913
	74/ W4ST	1	940 503
6.170-3	RING, Fourspeed Transmission Reverse Idler Gear Snap		
	74/	2	912 358
6.170-4	ROLLER, Transmission Reverse Idler Gear Bearing		
	74/75 (T14A)	20	640 777
	74/75 (T15A)	22	991 042 <i>(Use 448 5673)</i>
	76 W3ST (10)(20)(40)	22	448 5673
	74/ W4ST	74	912 354
6.170-4a	BUSHING, Threespeed Transmission Reverse Idler Gear		
	76 80-90	2	812 4914
6.170-5	WASHER, Transmission Reverse Idler Gear Bearing Roller		
	74/75 (T14A)	2	991 041 <i>(Use 319 2427)</i>
	74/75 (T15A)	2	944 334
	76 W3ST (10)(20)(40)	2	944 334
	76 W3ST (80)(90)	2	812 4915
	74/ W4ST	6.175	1 912 355
6.170-6	WASHER, Fourspeed Transmission Reverse Idler Gear Thrust		
	74/	2	912 356
6.170-7	SLEEVE, Fourspeed Transmission Reverse Idler Shaft		
	74/	1	912 357
6.172-1	PLATE, Transmission Reverse Idler Shaft And Countershaft		
	74/75 (T14A)	1	991 052
	74/75 (T15A)	1	991 053 <i>(Use 319 2372)</i>
	76 W3ST (10)(20)(40)	1	319 2372
	74/ W4ST	1	912 360

TRANSMISSION

6.198-1	FORK, Threespeed Transmission Shifter Low And Reverse				
	74/75 (T14A).....	1	948	990	
	74/75 (T15A).....	1	991	088	
	76 10-20-40.....	1	991	088	
	76 80-90.....	1	812	6825	
6.198-2	FORK, Fourspeed Transmission Shifter Third And Direct				
	74/.....	1	948	702	
6.198-3	FORK, Threespeed Transmission Shifter Third And Direct				
	74/75 (T14A).....	1	948	990	
	74/75 (T15A).....	1	991	088	
	76 10-20-40.....	1	991	088	
	76 80-90.....	1	812	6826	
6.198-4	FORK, Fourspeed Transmission Shifter First And Second				
	74/.....	1	948	703	
6.215-1	PIN, Transmission Speed Finder Interlock				
	74/75 W3ST.....	17.472	2	G273503	
	76 W3ST (10)(20)(40).....	17.472	2	G273503	
	76 W3ST (80)(90).....	2	812	7052	
	74/ W4ST.....	17.472	4	G455481	
6.215-3	POPPET, Transmission Speed Finder Interlock				
	74/ W3ST.....	17.018	2	G453593	
	74/ W4ST.....	17.018	3	G453593	
	76 W3ST (80)(90).....	2	812	6829	
6.215-4	SPRING, Threespeed Transmission Speed Finder Interlock Poppet				
	74/75.....	2	944	322	
	76 10-20-40.....	2	944	322	
	76 80-90.....	2	812	6828	
6.215-5	SPRING, Fourspeed Transmission Speed Finder Interlock Poppet First, Second And Reverse				
	74/.....	2	948	707	
6.215-6	SPRING, Fourspeed Transmission Speed Finder Interlock Poppet Third And Direct				
	74/.....	1	948	708	
6.500-1	TRANSMISSION, Hydramatic				
	74 SIX (LQT).....	1	535	1792	
	75 SIX.....	1	535	4521	
	76 SIX (10)(25)(45).....	1	535	5260	
	74 SIX (25-WQT)(45-WQT).....	1	535	2725	
	76 SIX (90).....	1	535	5011	
	74 V8 (LQT).....	1	535	1793	
	74 V8 (10-WQT).....	1	535	1794	
	75 V8 (10).....	1	535	4520	
	76 V8 (10).....	1	535	5261	
	75 V8 (20)(40).....	1	535	4522	
	76 V8 (20)(40).....	1	535	5262	
	74 V8 (25-WQT)(40-WQT).....	1	535	3389	
	76 V8 (90).....	1	535	5012	
6.500-2	ATTACHING PARTS, Transmission To Engine				
	BOLT, Hexagon..... 74/ SIX.....	3.018	5	G180132	
	BOLT, Hexagon..... 74/ V8.....	3.018	4	G180132	
6.501-1	GASKET SET, Hydramatic Transmission				
	74/..... 67.....	1	862	5905	
6.501-2	OVERHAUL REPAIR KIT, Hydramatic Transmission				
	74/.....	1	862	5967	

TRANSMISSION

6. 510

6. 501-3	SNAP RING KIT, Hydramatic Transmission 74/	79	1	862 3979
6. 503-1	CASE, Hydramatic Transmission 74/		1	812 5086
6. 503-2	EXTENSION, Hydramatic Transmission Case 74 (Model JJ)(Model JL) 74 (Model JK)(Model JM)(Model JR) 75/		1 1 1	862 4113 862 7466 862 7466
6. 503-3	BUSHING, Hydramatic Transmission Case 74/		1	862 3941
6. 503-4	BEARING, Hydramatic Transmission Case 74 WQT 75/		1 1	862 7585 862 7585
6. 503-6	GASKET, Hydramatic Transmission Extension To Case 74/		1	862 4709
6. 503-7	ATTACHING PARTS, Extension To Case BOLT, Hexagon 74/	17.038	2	G179816
6. 503-8	SNAP RING, Hydramatic Transmission Case Extension Bearing 74 LQT ... (1-13/16" I. D.) 74 LQT ... (3-5/8" O. D.) 74 WQT 75/ (Model JM)(Model JR) WQT		1 1 1 1	861 4528 861 5796 862 6951 862 6951
6. 503-9	SEAL, Transmission Output Shaft 74 (Model JJ)(Model JL)		2	862 4117
6. 503-10	VENT ASSEMBLY, Hydramatic Transmission Sleeve And Pipe 74 WQT		1	862 3425
6. 503-11	PLUG, Hydramatic Transmission Case Oil Passage 74/		1	861 1710
6. 505-1	PLUG, Hydramatic Transmission Case (Speedometer Gear Hole) 74		1	862 3463
6. 507-1	PAN, Hydramatic Transmission Oil 74/		1	862 5766
6. 507-2	GASKET, Hydramatic Transmission Oil Pan 74/		1	862 6931
6. 507-3	ATTACHING PARTS, Oil Pan To Transmission Case BOLT, Hexagon 74/	13	382	9139
6. 509-1	STRAINER, Hydramatic Transmission Oil 74/		1	643 7741
6. 509-2	PIPE, Hydramatic Transmission Oil Strainer Intake 74/	6. 504	1	862 6886
6. 509-3	SEAL, Hydramatic Transmission Oil Strainer Intake Pipe ("O" Ring) 74/75		1	136 3951
6. 509-4	ATTACHING PARTS, Oil Strainer To Transmission Valve Body BOLT 74/		1	862 5769
6. 510-1	TUBE, Transmission Oil Filler 74/ SIX 76 SIX (10)(20)(40) 74 V8 75 V8 76 V8 (10)(20)(40) 76 90		1 1 1 1 1 1	942 759 942 759 535 2145 535 4036 535 4746 535 4746

6. 510

TRANSMISSION

6. 510-2	GAUGE, Indicator (Dip Stick)			
	74/75 SIX.....	1	941 015
	76 SIX (10)(20)(40).....	1	941 015
	74/75 V8.....	1	940 297
	76 V8 (10)(20)(40).....	1	940 297
	76 90.....	1	940 297
6. 510-3	SEAL, Oil Filler Tube To Transmission Case ("O" Ring)			
	74/.....	1	940 298
6. 510-4	BRACKET, Oil Filler Tube Support			
	74.....	6.010	1	535 2707
	75/ SIX.....	1	535 4136
6. 510-5	CLIP, Oil Filler Tube To Bracket			
	74.....	17.134	1	G120528
	75.....	1	400 4892
6. 510-6	ATTACHING PARTS, Clip To Oil Filler Tube Support Bracket			
	SCREW, Tapping..... 74/.....	17.670	1	G172427
	CLIP..... 74/.....	1	400 4892
6. 510-7	ATTACHING PARTS, Oil Filler Tube To Engine			
	BOLT, Hexagon..... 74/ (1/4"-20 x 5/8").....	12.001	1	673 600
	BOLT, Hexagon..... 74/ (3/8"-16 x 3/4").....	17.629	1	G423569
	BOLT, Hexagon..... 74/ (3/8"-16 x 7/8").....	17.626	1	G451977
	CLIP, Closed..... 74.....	17.108	1	G179150
	WASHER, Plain..... 74/ (3/8").....	17.814	2	G120394
	NUT, Hexagon..... 74/ (1/4"-20).....	17.417	1	G273801
6. 512-1	BUSHING AND VALVE, Hydramatic Transmission Pressure Regulator Booster			
	74/.....	51.....	1	862 5902
6. 512-2	SPACER, Hydramatic Transmission Regulator Valve			
	74/.....	2	862 3368
6. 512-3	SPRING, Hydramatic Transmission Pressure Regulator			
	74/.....	1	862 5648
6. 512-4	VALVE, Hydramatic Transmission Pressure Regulator			
	74/.....	1	862 3422
6. 512-5	RING, Hydramatic Transmission Pressure Regulator Valve Retaining Snap			
	74/.....	17.628	1	G274613
6. 512-6	RETAINER, Hydramatic Transmission Pressure Regulator Valve Spring			
	74/.....	1	862 3039
6. 515-1	TUBE, Hydramatic Transmission Vacuum			
	74/75 SIX.....	1	535 0579
	76 SIX (10)(20)(40).....	1	535 5583
	76 SIX (90).....	1	535 4750
	74/75 V8.....	1	535 2133
	76 V8 (10)(20)(40).....	1	535 4751
	76 304 (90).....	1	535 4751
6. 515-2	HOSE, Hydramatic Transmission Vacuum			
	74.....	1	940 610
	75/.....	1	322 6079
6. 515-3	CLAMP, Hydramatic Transmission Vacuum Hose			
	74/ (7/16" Dia.).....	4.141	1	319 7566
	74/ (1/2" Dia.).....	(Use 934 246)	1	934 245
6. 515-4	CLIP, Hydramatic Transmission Vacuum Tube Support			
	74/75.....	17.134	1	G126166
	76.....	17.134	1	G140783

TRANSMISSION

6. 530

6. 515-6	ATTACHING PARTS, Hydramatic Transmission Vacuum Tube To Intake Manifold			
	ELBOW 74	16.240	1	318 6526
	ELBOW 76 SIX.....	17.218	1	G224425
	ELBOW 76 V8	17.218	1	G442409
6. 515-7	ATTACHING PARTS, Hydramatic Transmission Vacuum Tube To Transmission			
	WASHER, Plain..... 74/	17.814	1	G120394
6. 518-1	GEAR, Hydramatic Transmission Sun			
	74/		1	862 6807
6. 518-2	SHAFT, Hydramatic Transmission Sun Gear			
	74/ ... (Incl. Bushing)		1	862 3177
6. 518-3	BUSHING, Hydramatic Transmission Sun Gear Shaft			
	74/		2	862 3944
6. 518-4	THRUST BEARING AND RACES KIT (Center Support To Sun Gear)			
	74/ 228		1	862 3920
6. 518-5	BEARING AND RACES KIT (Sun Gear To Rear Internal Gear)			
	74/ 94		1	862 3921
6. 519-1	CONVERTER, Hydramatic Transmission			
	74/		1	862 4954
6. 519-2	ATTACHING PARTS, Converter To Ring Gear Flex Plate			
	BOLT, Hexagon 74/	17.042	3	G9408973
6. 521-1	SPACER, Ring Gear Flex Plate To Crankshaft			
	74/	16.035	1	321 4094
6. 523-1	PLATE, Ring Gear Flex			
	74/ SIX.....		1	535 1819
	76 304.....		1	535 1820
	74/ 360.....		1	535 1821
	74/ 401.....		1	535 1822
6. 523-3	ATTACHING PARTS, Flex Plate To Crankshaft			
	BOLT, Hexagon 74/	16.035	6	315 1407
6. 527-1	COVER, Hydramatic Transmission Front			
	74/	5.054	1	321 3744
6. 527-2	ATTACHING PARTS, Cover To Hydramatic Transmission			
	BOLT, Hexagon 74/ (5/16"-18 x 1/2")	17.038	4	G180073
	SCREW 75 (5/16"-18 x 5/8")	17.626	4	400 0987
	SCREW, Hexagon 76 (14-10 x 5/8")	17.	4	G149501
	WASHER, Lock 74/	17.820	4	G120214
6. 528-1	COVER, Hydramatic Transmission Converter Housing Lower			
	74/75		1	535 2334
	76		1	535 5013
6. 530-1	PISTON, Hydramatic Front Servo			
	74/		1	862 3131
6. 530-3	RING, Hydramatic Front Servo Piston Oil Seal			
	74/		1	862 6878
6. 530-3a	SPRING, Hydramatic Transmission Front Servo Piston Spring			
	74/		1	862 3489
6. 530-4	RETAINER, Hydramatic Transmission Front Servo Piston Spring			
	74/		1	862 6881

6. 530

TRANSMISSION

6. 530-5	PIN, Hydramatic Transmission Front Servo 74/	1	862 6879	
6. 530-6	WASHER, Hydramatic Transmission Front Servo Piston 74/	1	862 6884	
6. 533-1	PISTON, Hydramatic Transmission Front Accumulator 74/	1	862 6883	
6. 533-2	SPRING, Hydramatic Transmission Front Accumulator Piston 74 (Model JJ) 74/ (Model JC)(Model JK)(Model JL) 74 (Model JM)(Model JR) 75 (Model JK)(Model JR) 76 (Model JS)	1 1 1 1 1	862 4348 862 3654 862 4358 862 3654 862 4358	
6. 533-3	RING, Hydramatic Transmission Accumulator Piston Retainer Snap 74/	6. 551 1	941 2978	
6. 533-4	RING, Hydramatic Transmission Accumulator Piston Oil Seal 74/	1	862 3653	
6. 535-1	BODY, Hydramatic Transmission Oil Pump 74/ 71	1	862 5954	
6. 535-2	COVER, Hydramatic Transmission Oil Pump 74/ 70	1	862 5955	
6. 535-3	BUSHING, Hydramatic Transmission Oil Pump Body 74/	1	862 3940	
6. 535-4	BUSHING, Hydramatic Transmission Oil Pump Stator Shaft 74/	6. 518 2	862 3944	
6. 535-5	ATTACHING PARTS, Pump Cover To Body BOLT, Hexagon 74/ (1" Long) BOLT, Hexagon 74 (1-1/2" Long) BOLT, Hexagon 74 (1-3/4" Long)	17.038 17.042 17.042	2 2 1	G179818 G220425 G220426
6. 535-6	GASKET, Hydramatic Transmission Oil Pump To Case 74/	1	862 3978	
6. 535-7	WASHER, Hydramatic Transmission Pump To Case 74/	8	862 6281	
6. 535-8	PIN, Hydramatic Transmission Oil Pump 74/	2	862 3078	
6. 535-9	SEAL, Hydramatic Transmission Oil Pump To Reaction Carrier 74/75 76	2 1	862 3148 812 6228	
6. 535-10	"O" RING, Hydramatic Transmission Oil Pump To Case 74/	1	862 6309	
6. 535-11	SEAL, Hydramatic Transmission Oil Pump Front 74/	1	862 6916	
6. 537-1	SHAFT, Hydramatic Transmission Turbine 74/	1	862 4772	
6. 538-1	WASHER, Hydramatic Transmission Pump To Forward Clutch Drum 74/ (.060"- .064") 74/ (.071"- .075") 74/ (.082"- .086") 74/ (.093"- .097") 74/ (.104"- .108") 74/ (.115"- .119") 74/ (.126"- .130")	AR AR AR AR AR AR AR	862 3300 862 3301 862 3302 862 3303 862 3304 862 3305 862 3306	

TRANSMISSION

6.551

6.540-1	PISTON, Hydramatic Transmission Rear Servo 74/	1	862 4138
6.540-2	RETAINER, Hydramatic Transmission Rear Servo Piston Spring 74/	1	862 3664
6.540-3	SEAL, Hydramatic Transmission Rear Servo Piston 74/	1	862 3430
6.540-4	RING, Hydramatic Transmission Rear Servo Piston Retainer Snap 74	1	941 3523
6.540-5	COVER, Hydramatic Transmission Rear Servo 74/	1	862 4136
6.540-6	GASKET, Hydramatic Transmission Rear Servo Cover 74/	1	862 3174
6.540-7	ATTACHING PARTS, Hydramatic Transmission Rear Servo Cover BOLT, Hexagon 74/	17.038	6 G179816
6.540-8	WASHER, Hydramatic Transmission Rear Servo Piston 74/	1	862 3744
6.545-1	GOVERNOR ASSEMBLY, Hydramatic Transmission 74/ (Model JJ)(Model JL)(Model JM) 74 (Model JK) 75/ (Model JK) 75/ (Model JR)(Model JS) 76 (Model JC)	1 1 1 1 1	862 7441 862 7441 812 6137 862 3852 812 7303
6.545-2	COVER, Hydramatic Transmission Governor 74/	1	862 3262
6.545-3	ATTACHING PARTS, Hydramatic Transmission Governor Cover To Case BOLT, Hexagon 74/ (9/16" Long)	17.038	5 G115658
6.545-4	GASKET, Hydramatic Transmission Governor Cover 74/75 76	1 1	862 3263 812 6942
6.545-5	GEAR AND PIN, Hydramatic Governor Transmission Driven 74/	1	862 3924
6.545-6	SCREEN, Hydramatic Transmission Governor 74/	1	862 7509
6.546-1	PIN, Hydramatic Transmission Rear Band 74/ (Identified By 1 Ring) 74/ (Identified By 2 Rings) 74/ (Identified By 3 Rings)	AR AR AR	862 4139 862 4140 862 4141
6.548-1	PISTON, Hydramatic Transmission Rear Servo Accumulator (Incl. Rings) 74/	1	862 6902
6.548-2	RING, Hydramatic Transmission Rear Servo Accumulator Piston Oil Seal 74/75 (1.65" O. D. -Aluminum) 74/ (2.80" O. D. -Teflon)	1 1	862 3671 862 7153
6.548-3	SPRING, Hydramatic Transmission Rear Servo 74/ (3/4" Dia.) 74/ (1-1/8" Dia.)	1 1	862 3666 862 4256
6.551-1	ACTUATOR, Hydramatic Transmission Parking Brake (Rod) 74/	1	862 4091
6.551-2	SHAFT, Hydramatic Transmission Manual 74/	1	862 7206

6.551

TRANSMISSION

6.551-3	"O" RING, Hydramatic Transmission Manual Shaft 74/	1	862 1767
6.551-4	PIN, Hydramatic Transmission Manual Shaft Anchor 74/	1	862 3232
6.551-5	DETENT, Hydramatic Transmission Roller And Spring 74/	1	862 5773
6.551-6	RING, Hydramatic Transmission Parking Snap (Actuator To Lever) 74/	1	941 2978
6.551-7	LEVER, Hydramatic Transmission Detent 74/ ... (Incl. Pin)	1	862 4336
6.551-8	ATTACHING PARTS, Hydramatic Transmission Manual Shaft NUT, Hexagon 74/	17.416	1 G145005
6.552-1	PAWL, Hydramatic Transmission Parking Brake 74/	1	862 3037
6.552-2	SHAFT, Hydramatic Transmission Parking Brake 74/ ... (Incl. Cup Plug)	1	862 4976
6.552-3	"O" RING, Hydramatic Transmission Parking Brake Pawl Shaft 74/	1	862 3040
6.552-4	PLUG, Hydramatic Transmissiin Parking Brake Pawl Shaft Cup 74/	1	862 0318
6.552-5	RETAINER, Hydramatic Transmission Parking Brake Shaft (Spring Type) 74/	17.710	1 G148148
6.552-6	BRACKET, Hydramatic Transmission Parking Brake (Cast Iron) 74/	1	862 3042
6.552-7	ATTACHING PARTS, Hydramatic Transmission Parking Brake Bracket To Case BOLT, Hexagon 74/	17.038	2 G179816
6.552-8	SPRING, Hydramatic Transmission Parking Brake Pawl Return 74/	1	862 3041
6.554-1	PISTON KIT, Hydramatic Transmission Intermediate Clutch 74/	1	862 6938
6.554-1a	PISTON, Hydramatic Transmission Intermediate Clutch 74/ WQT	1	862 4210
6.554-2	PLATE, Hydramatic Transmission Intermediate Clutch Driving 74/	1	862 3152
6.554-3	PLATE ASSEMBLY, Hydramatic Transmission Intermediate Clutch Driving 74/	3	862 3151
6.554-4	PLATE, Hydramatic Transmission Intermediate Clutch Reaction 74/	3	862 3150
6.554-5	PLATE, Hydramatic Transmission Intermediate Clutch Reaction Wave 74/	1	862 4199
6.554-6	RACE, Hydramatic Transmission Intermediate Clutch Outer 74/	1	862 3117
6.554-7	RETAINER, Hydramatic Transmission Intermediate Clutch Outer Race 74/	1	862 3119

TRANSMISSION

6. 562

6. 554-8	RETAINER, Hydramatic Transmission Intermediate Clutch Piston Spring 74/	1		862 3146
6. 554-9	RING, Hydramatic Transmission Intermediate Clutch Backing Plate Snap 74/	1		862 3149
6. 554-10	RING, Hydramatic Transmission Intermediate Clutch Outer Race Retainer Snap 74/	1		862 3120
6. 554-11	RING, Hydramatic Transmission Intermediate Clutch Piston Spring Retainer Snap 74/	1		862 3153
6. 554-12	SPRAG, Hydramatic Transmission Intermediate Clutch (Incl. Bushing) 74/	6. 562	1	862 5814
6. 554-14	SPRING, Hydramatic Transmission Intermediate Clutch Retainer 74/	3		862 3145
6. 554-15	SEAL KIT, Hydramatic Transmission Intermediate Clutch Piston 74/	73	1	862 3918
6. 556-1	CENTER SUPPORT AND RACE KIT, Hydramatic Transmission 74/	65	1	862 5990
6. 556-2	SPRAG-ROLLER ASSEMBLY, Hydramatic Transmission Low Clutch 74/	1		862 3842
6. 556-3	ROLLER KIT, Hydramatic Transmission Center Support Low Clutch 74/ ... (Incl. 4 Rollers)	1		862 4960
6. 556-4	BUSHING, Hydramatic Transmission Center Support 74/	1		862 3942
6. 556-5	SCREW, Hydramatic Transmission Center Support 74/	1		862 4009
6. 556-6	"O" RING, Hydramatic Transmission Center Support 74/75	6		862 3148
6. 556-7	RING, Hydramatic Transmission Center Support Snap 74/	1		862 3437
6. 556-8	WASHER, Hydramatic Transmission Center Support Thrust 74/	1		862 4783
6. 556-9	SPACER, Hydramatic Transmission Center Support 74/	1		862 6816
6. 562-1	HOUSING, Hydramatic Transmission Direct Clutch 74/75 ... (Incl. Race) 76	1		862 5816
		1		812 6313
6. 562-2	BAND, Hydramatic Transmission Direct Clutch Brake 74/	1		862 3123
6. 562-3	HUB, Hydramatic Transmission Direct Clutch 74/	1		862 5718
6. 562-4	PISTON, Hydramatic Transmission Direct Clutch Assembly 74 (Model JJ)(Model JM)(Model JR) 74 (Model JK)(Model JL) 75/ (Model JC)(Model JK)(Model JS) 75/ (Model JM)(Model JR)	1		862 5514
		1		862 5518
		1		862 5518
		1		862 5514
6. 562-5	PLATE, Hydramatic Transmission Direct Clutch Backing 74/	1		862 3122
6. 562-6	PLATE ASSEMBLY, Hydramatic Transmission Direct Clutch Drive 74/	6. 595	5	862 3483

6. 562

TRANSMISSION

6. 562-7	PLATE, Hydramatic Transmission Direct Clutch Driven			
	74 (Model JJ)(Model JM)(Model JR)	4	862	5197
	74 (Model JK)(Model JL)	3	862	5197
	75/ (Model JC)(Model JK)(Model JS)	3	862	5197
	75/ (Model JM)(Model JR)	4	862	5197
6. 562-8	RETAINER, Hydramatic Transmission Direct Clutch Piston Release Spring			
	74/	6.595	1	862 3104
6. 562-9	RING, Hydramatic Transmission Direct Clutch Hub And Backing Plate Snap			
	74/		2	862 3112
6. 562-10	RING, Hydramatic Transmission Direct Clutch Piston Spring Retainer			
	74/	6.595	1	862 3105
6. 562-11	SPRING, Hydramatic Transmission Direct Clutch Piston Release			
	74/		16	862 4073
6. 562-12	DIRECT CLUTCH KIT, Hydramatic Transmission			
	74/	6.595	2	862 3917
6. 590-1	CARRIER, Hydramatic Transmission Reaction Assembly			
	74/75		1	862 5859
	76		1	812 6566
6. 590-2	PINION OUTPUT AND REACTION KIT, Hydramatic Transmission			
	74/	63	1	862 5913
6. 590-3	WASHER, Hydramatic Transmission Reaction Carrier To Output Carrier			
	74/		2	862 6372
6. 592-1	CARRIER ASSEMBLY, Hydramatic Transmission Output			
	74/		1	862 5957
6. 592-2	BAND, Hydramatic Transmission Rear Bracket			
	74/		1	862 3155
6. 593-1	SLEEVE, Transmission Output Shaft To Transfer Case Input Shaft Coupling			
	74/		1	946 575
6. 593-2	RING, Coupling Sleeve Snap			
	74/		1	940 206
6. 595-1	FORWARD CLUTCH HOUSING AND WASHER KIT, Hydramatic Transmission			
	74/	91	1	862 4908
6. 595-2	FORWARD CLUTCH KIT, Hydramatic Transmission			
	74/ ... (Incl. Piston And Seals)		1	862 3917
6. 595-3	PISTON, Hydramatic Transmission Forward Clutch			
	74/		1	862 4021
6. 595-4	HUB, Hydramatic Transmission Forward Clutch			
	74/		1	862 5717
6. 595-5	PLATE, Hydramatic Transmission Forward Clutch Drive (Steel)			
	74/		2	862 3851
6. 595-6	PLATE, Hydramatic Transmission Forward Clutch Driven			
	74/		3	862 3849
6. 595-7	PLATE, Hydramatic Transmission Forward Clutch Driven Wave			
	74/		4	862 3483
6. 595-8	RETAINER, Hydramatic Transmission Forward Clutch Piston Spring			
	74/		1	862 3104

TRANSMISSION

6.631

6.595-9	RING, Hydramatic Transmission Forward Clutch Piston Spring Retainer Snap 74/	1	862 3105
6.595-10	SPRING, Hydramatic Transmission Forward Clutch Piston Release 74/	16	862 4101
6.595-11	WASHER, Hydramatic Transmission Forward Clutch Hub Thrust 74/	1	862 4196
6.595-12	WASHER, Hydramatic Transmission Forward Clutch Hub And Direct Housing Clutch Thrust 74/	1	862 4781
6.630-1	SHAFT, Hydramatic Transmission Main 74/	1	862 5736
6.630-2	RING, Hydramatic Transmission Main Shaft Snap 74/	1	862 5221
6.631-1	TUBE, Hydramatic Transmission Oil Outlet To Oil Cooler 74 SIX	1	999 456
	75 SIX	1	535 4437
	76 SIX (10)(20)(40)	1	535 5528
	76 SIX (90)	1	535 5528
	74/ V8	1	535 2138
	76 V8 (10)(20)(40)	1	535 4748
	76 V8 (90)	1	535 4748
6.631-2	TUBE, Hydramatic Transmission Oil Return 74 SIX	1	999 449
	75 SIX	1	535 4436
	76 SIX	1	535 5529
	74/75 V8	1	535 2135
	76 V8 (10)(20)(40)	1	535 4749
	76 V8 (90)	1	535 4749
6.631-3	HOSE ASSEMBLY, Hydramatic Transmission Oil Cooler Lines To Radiator 74 SIX	2	535 1997
	74/75 V8	2	940 453
	75/ SIX	2	535 1997
	76 V8	2	535 0540
6.631-4	ELBOW, Hydramatic Transmission (Oil Cooler Lines To Transmission) 74/	2	947 234
6.631-5	"O" RING, Oil Cooler Line Elbow To Transmission Seal 74/	1	862 4361
6.631-6	BRACKET, Hydramatic Transmission Oil Cooler Lines Support 74	13.440	1 948 915
	75	13.440	1 315 8227
	76	13.440	1 948 915
6.631-7	ATTACHING PARTS, Hydramatic Transmission Oil Cooler Line And Supports BOLT, Hexagon 74/ V8...(1" Long)	17.626	2 G186494
	BOLT, Hexagon 74/ V8...(1-1/4" Long)	17.626	1 G423563
	SCREW, Tapping 75	17.660	1 G161901
	SPACER 74/ Six	2 941 011
	SPACER 74/ V8	1.151	6 669 842
	CLIP, Closed 74/ SIX (Used With 1/4" Bolt)	17.134	2 G120523
	CLIP, Closed 74/ V8	17.134	2 G127879
	CLAMP 74/ V8	1 400 4831
	NUT, Hexagon 75	17.426	1 G445446
6.631-8	CLIP, Hydramatic Transmission Oil Tube (S Type) 74/	2	940 450
6.631-9	CLAMP, Hydramatic Transmission Oil Cooler Tube At Radiator 74/ SIX	3.165	1 926 878

6. 631

TRANSMISSION

6. 631-10	ELBOW, Hydramatic Transmission (Oil Cooler Tube At Radiator)			
	74/75 (Hose To Radiator)	17, 232	1	G444054
	76 (Hose To Radiator)	17.	1	G444040
	74/ (90 Degree Tube To Hose).....	1	940 467
6. 632-1	TUBE, Hydramatic Transmission (Radiator To Hose)			
	74/ SIX.....	1	940 451
6. 634-1	GEAR, Hydramatic Transmission Rear Internal Mainshaft			
	74/	1	862 3202
6. 634-2	RING, Hydramatic Transmission Front Internal Gear			
	74/	1	862 6112
6. 634-3	OUTPUT SHAFT KIT, Hydramatic Transmission To Rear Internal Gear			
	74/ ... (Incl. Bearings And Races).....	1	862 3922
6. 635-1	SHAFT, Hydramatic Transmission Output			
	74 (Model JJ)(Model JL) ... (Incl. Plua)	1	862 5970
	74 (Model JK)(Model JM)(Model JR)	1	862 7582
	75/	1	862 7582
6. 635-2	PLUG, Hydramatic Transmission Output Shaft			
	74	1	862 3484
6. 635-3	"O" RING, Output Shaft Seal			
	74 LQT.....	1	861 6504
6. 635-4	BUSHING, Hydramatic Transmission Output Shaft			
	74/	1	812 5056
6. 635-5	RING, Hydramatic Transmission Output Shaft Snap			
	74/	1	862 6173
6. 635-7	WASHER, Hydramatic Transmission Output Shaft To Case Thrust			
	74/ (.074"-078")	AR	862 5401
	74/ (.082"-086")	AR	862 5402
	74/ (.090"-094")	AR	862 5403
	74/ (.098"-102")	AR	862 5404
	74/ (.106"-110")	AR	862 5405
	74/ (.114"-118")	AR	862 5406
6. 655-1	MODULATOR ASSEMBLY, Hydramatic Transmission Vacuum			
	74/75	1	862 5976
	76 (Model JC)(Model JS)	1	812 7273
	76 (Model JK)(Model JM)(Model JR).....	1	812 6090
6. 655-2	MODULATOR ADAPTER AND LEVER KIT, Hydramatic Transmission (Incl. Cast Adapter)			
	74/	1	862 4902
6. 655-3	SEAL, Modulator To Case			
	74/	3	861 9568
6. 655-4	RETAINER, Hydramatic Transmission Case To Adapter			
	74/	1	862 4133
6. 655-5	RETAINER, Hyramatic Transmission			
	74/	1	862 4132
6. 655-6	ATTACHING PARTS, Retainer To Case			
	BOLT, Hexagon 74/	17.	2	G121887
6. 655-7	VALVE, Hydramatic Transmission Vacuum Modulator			
	74/	1	862 4122

TRANSMISSION

6. 665

6. 660-1	VALVE ASSEMBLY, Hydramatic Transmission Control			
	74 (Model JJ)	1	812	4730
	74 (Model JK)(Model JL)	1	812	5067
	74 (Model JM)	1	812	5065
	75 (Model JM)	1	812	6138
	74/ (Model JR)	1	812	6318
	75/ (Model JK)	1	812	6136
	76 (Model JC)	1	812	7298
	76 (Model JM)	1	812	6800
	76 (Model JS)	1	812	7297
6. 660-2	ATTACHING PARTS, Hydramatic Transmission Control Valve Assembly To Case			
	BOLT, Hexagon 74/	17.038	10	G122058
6. 660-3	BALL, Hydramatic Transmission Control Valve Body Case Pad			
	74/	17.018	6	G147485
6. 660-4	CONNECTOR, Hydramatic Transmission Stator Sleeve			
	74/		1	862 6252
6. 660-5	GASKET, Hydramatic Transmission Solenoid			
	74/		1	862 3741
6. 660-6	GASKET, Hydramatic Transmission Valve Body To Plate			
	74/		1	862 3561
6. 660-7	GASKET Hydramatic Transmission Valve Plate To Case			
	74/		1	862 3563
6. 660-8	SEAL, Hydramatic Transmission Oil Connector			
	74/	6. 655	1	861 9568
6. 660-9	PIN, Hydramatic Transmission Valve Body Plug			
	74/		1	862 2045
6. 660-10	PIPE, Hydramatic Transmission Valve To Governor			
	74/		2	862 3157
6. 660-11	PLATE, Hydramatic Transmission Valve Body Spacer			
	74/75 (Model JJ)(Model JM)		1	812 5057
	74 (Model JK)(Model JL)		1	862 5663
	75 (Model JM)		1	862 5899
	75/ (Model JC)(Model JK)(Model JS)		1	862 5663
	76 (Model JM)(Model JR)		1	812 6322
6. 660-12	PLUG, Valve Body (Pressure Regulator)			
	74/		1	862 3292
6. 660-13	PLUG, Valve Body (Valve Bore)			
	74/ (. 437" O. D.)		1	862 3298
	74/ (. 500" O. D.)		1	862 3295
6. 660-14	SOLENOID ASSEMBLY, Hydramatic Transmission			
	74/		1	199 3620
6. 660-15	ATTACHING PARTS, Solenoid To Valve Body			
	BOLT, Hexagon 74/	17.038	3	G180020
6. 665-1	SWITCH, Hydramatic Transmission Kickdown			
	74 10-20-40		1	992 909
	75/ 10-20-40-90		1	535 4533
6. 665-2	BRACKET, Transmission Kickdown Switch			
	74 10-20-40	6. 655	1	999 943
	75/ 10-20-40-90		1	535 4532
6. 665-3	ATTACHING PARTS, Kickdown Switch To Bracket			
	SCREW, Tapping 75/ 10-20-40-90	17. 672	1	G172427
	NUT, Hexagon 74 10-20-40	17.428	1	G107824
6. 665-4	HARNESS, Transmission Kickdown			
	74/ WHT (10)(20)(40)		1	535 0253

TRANSMISSION