


- 65 DIR. SIG. FEED
- 17 STOP LIGHT SW. FEED
- 60 CIGAR LIGHTER FEED
- 14A IGN. START
- 14B IGN. START
- 34 BACK-UP LIGHTS
- 52 BACK-UP LIGHT SW. FEED
- 57D IGN. GND. WARNING LTS.
- 75 IGN. (3) FEED TO FUSE BLOCK
- 67 IGN. ACC. FEED
- 12E BATT. TO IGN.
- 13C IGN. TO SPLICE
- 14A IGN. START
- P DIR. SIG. FEED FROM STOP LT. SW.
- N RT. TURN SIG. REAR
- M LT. TURN SIG. REAR
- L DIR. SIG. FEED FROM FLASHER
- K HAZ. SW. TO HAZ. FLASHER
- J RT. TURN IND. & SIG.
- H LT. TURN IND. & SIG.
- G HORN BUTTON
- D PANEL LIGHTS

NOTE: JUMPERS USED FOR STANDARD TRANSMISSION ONLY

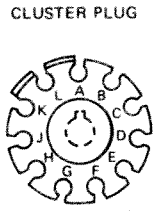

- A WARNING LTS.
- L GAS GAUGE
- K HI-BEAM INDICATOR
- J CLUSTER LIGHTS
- G LEFT TURN INDICATOR
- F RIGHT TURN INDICATOR
- E IGNITION
- C TEMPERATURE

- D DOME LIGHT (-)
- H FOOT DIM. SW.
- I INST. CLUSTER LIGHTS
- B2 DOME LIGHT (-)
- R TAIL LAMP
- B1 SOLENOID-"B" TERM

BULKHEAD CONNECTOR  
VIEW FROM ENGINE COMPARTMENT

WIRING DIAGRAM-TRUCK