

A

Adjust-O-Tilt column diagnosis	11-12
Adjustment, alternator belt	3-8
Adjustment, alternator drive belt	2-9
Adjustment, antenna trimmer	3-66
Adjustment, auto trans linkage	7-6
Adjustment, backup light switch	3-61
Adjustment, clutch	B-9
Adjustment, clutch linkage	5-3
Adjustment, clutch release lever	5-7
Adjustment, fan belt	2-9
Adjustment, front wheel bearing	9-40
Adjustment, parking brake	9-30
Adjustment, reduction unit shift cable	8-11
Adjustment, turning angle	10-9
Adjustment, voltage regulator	3-27
Adjustment, wheel bearings	B-7
Adjustments, bench seat	19-1
Adjustments, Model 2100 carburetor	4-26
Adjustments, Model 4300 carburetor	4-40
Adjustments, auto trans	7-17
Adjustments, door	15-1
Adjustments, drive belts	2-8
Adjustments, front wheel alignment	11-27
Adjustments, manual steering gear	11-24
Adjustments, model YF carburetor	4-13
Air cleaner	4-1
Air cleaner maintenance	B-8
Air cond magnetic clutch	13A-15
Air cond system compressor	13A-11
Air conditioning	13A-1
Air conditioning leak checking	13A-9
Air conditioning performance diagnosis	13A-2
Air conditioning pressure diagnosis	13A-3
Air conditioning system charging	13A-9
Air conditioning system troubleshooting	13A-16
Air conditioning thermostat	13A-20
Air injection manifolds and tubes	4A-10
Air pump diagnosis	4A-9
Alignment, axle	14-2
Alignment, frame	14-2
Alignment, wheel, specifications	11-54
Alternator	3-7
Alternator belt adjustment	2-9
Alternator belt adjustment	3-8
Alternator charging tests	3-14
Alternator diode trio test	3-15
Alternator output test	3-14
Alternator, component test-replacement	3-15
Alternator, assembly of	3-21
Antenna trimmer adjustment	3-66
Antennas	3-68
Anti-theft energy-absorbing column	11-1
Auto trans adjustments	7-17
Auto trans center support	7-41
Auto trans control valve	7-31
Auto trans forward clutch	7-35
Auto trans governor	7-29
Auto trans linkage adjustment	7-6
Auto trans maintenance	7-17
Auto trans oil pump	7-33
Auto trans rear servo	7-31
Auto trans road test	7-6
Auto trans service diagnosis	7-6
Auto trans specifications	7-55
Auto trans torque converter	7-47
Auto trans installation	7-19
Auto trans removal	7-19
Auto trans hydraulic sys	7-3
Auto trans	7-1
Auto trans maintenance	B-4
Auto trans tools	7-56
Axle alignment	14-2
Axle and propeller shaft service tools	10-26
Axle application chart	10-1
Axle backlash	10-3
Axle caster	11-28

Axle differentials, lubrication	B-8
Axle drive line vibrations	10-3
Axle identification	10-2
Axle shaft universal joint	10-5
Axle shaft, front	10-4
Axle specifications	10-25
Axle testing and diagnosis	10-2
Axle tests	10-3
Axle, rear	10-9
Axles	10-1

B

Backlash, axle	10-3
Backup light switch	3-61
Backup lights	3-61
Ball joint replacement	10-6
Batteries	3-2
Battery charging	3-3
Battery hydrometer test	3-6
Battery maintenance	B-4
Battery maintenance	3-4
Battery storage	3-7
Battery testing	3-5
Bleeding brake system	9-22
Blower motor, heater and defroster	13-5
Body	14-1
Body construction	14-1
Body leaks, correction of	14-1
Body lubrication chart	B-3
Body styles and general dimensions	A-7
Brake and wheel service tools	9-45
Brake hydraulic system	9-13
Brake inspection chart	B-3
Brake master cylinder maintenance	B-4
Brake pedal and linkage	9-40
Brake size and application chart	9-45
Brake system bleeding	9-22
Brakes	9-1
Brakes, disc-type	9-33
Brakes, drum type	9-23
Brakes, service diagnosis	9-1
Brakes, torque specifications	9-43
Build date code location (six-cyl)	1A-2
Build date code location V-8	1B-2
Bumpers	14-12

C

Calibrations, Model YF carburetor	4-16
Calibrations, Model 2100 carburetor	4-29
Calibrations, Model 4300 carburetor	4-43
California EGR system	4A-14
Cam lobe lift measurement (V-8)	1B-19
Camshaft and bearings (V-8)	1B-18
Camshaft and bearings (six-cyl)	1A-18
Camshaft identification (V-8)	1B-19
Canister, fuel vapor storage	4A-17
Capacities chart	B-11
Capacities, fuel tank	4-3
Capscrew markings, standard	A-6
Carburetion	4-6
Carburetor model YF	4-6
Carburetor model 2100	4-17
Carburetor model 4300	4-30
Carburetor service specifications	4-44
Carburetor tools	4-45
Cardan cross-type universal	10-24
Center support, auto trans	7-41
Certification, federal safety	A-2
Charging system diagnosis guide	3-10
Chassis lubrication	B-8
Chassis lubrication chart	B-3
Choke linkage	4A-38
Cigar lighter	3-65
Clock	3-64
Clutch	5-1

Engine drive belt tension specifications	2-17
Engine flushing	2-14
Engine holding fixture (V-8)	1B-31
Engine holding fixture (six-cyl)	1A-7
Engine installation (V-8)	1B-7
Engine installation (six-cyl)	1A-8
Engine modifications	4A-11
Engine oil change	B-1
Engine oil filler cap maintenance	B-4
Engine oil quality	B-1
Engine oil viscosity	B-2
Engine removal (V-8)	1B-7
Engine removal, six-cyl	1A-6
Engine spark knock (ping)	3-39
Engine specifications (V-8)	1B-33
English and metric measures	A-4
Evaporator housing assembly	13A-18
Exhaust back-pressure sensor	4A-14
Exhaust back-pressure sensor test	4A-15
Exhaust gas recirculation (EGR) syst	4A-11
Exhaust gas recirculation valve services	B-3
Exhaust manifold (V-8)	1B-11
Exhaust manifold heat valve	4-47
Exhaust manifold heat valve	4A-38
Exhaust system	4-45
Exhaust valve rotator (V-8)	1B-9
Exhaust valve rotator (six-cyl)	1A-9
Exterior decals	20-2
Exterior wood grain overlays	20-4

F

Fan	2-3
Fan belt adjustment	2-9
Fan, Power Flex	2-3
Fan, Tempatrol	2-3
Federal safety certification	A-2
Fenders	14-10
Filter, fuel	4-1
Filter, oil, maintenance	B-4
Fluid level condition	B-4
Flywheel	5-5
Flywheel (V-8)	1B-31
Flywheel (six-cyl)	1A-30
Forward clutch, auto trans	7-35
Frame alignment	14-2
Frame straightening	14-2
Front axle shaft	10-4
Front axle windup control device	12-2
Front bench seats	19-1
Front bucket seats	19-1
Front door glass	15-3
Front door vent assembly	15-4
Front door window regulator	15-4
Front seat assembly	19-1
Front wheel alignment adjustments	11-27
Front wheel bearing adjustment	9-40
Front wheel bearings, lubrication	B-7
Front wheel toe-in	11-27
Fuel filters	4-1
Fuel gauge calibration	3-48
Fuel pump	4-3
Fuel pump specifications	4-6
Fuel pump testing	4-3
Fuel system	4-1
Fuel tank	4-2
Fuel tank	4A-17
Fuel tank capacities	4-3
Fuel tank filler cap	4A-17
Fuel tank sender unit	3-52
Fuel tank vapor emission control system	4A-17
Fuel vapor storage canister	4A-17

G

Gauge, coolant temperature	2-12
Gauge, temperature	2-5
Generator	3-23

Generator maintenance	3-23
Glass, front door	15-3
Glass, rear door	15-4
Glass, vent window	15-6
Glove box	18-1
Governor, auto trans	7-23
Grille, radiator	14-8

H

Headlamp aiming chart	3-56
Headlamp aiming procedure	3-55
Headlamp replacement	3-55
Headlamp switch	3-56
Headlining	20-1
Heater	13-1
Heater control switch	13-5
Heater core	13-4
Heater-defroster service diagnosis	13-4
Heavy-duty driving	B-8
Hood	14-11
Hook, pintle	21-3
Horns and horn relay	3-64
Hubs, drive, selective	21-1
Hydraulic system, brakes	9-13
Hydraulic valve tappets (V-8)	1B14
Hydraulic valve tappets (six-cyl)	1A-14

I

Identification, V-8 engine	1B-1
Identification, six-cylinder engine	1A-1
Identification, vehicle	A-1
Ignition coil	3-42
Ignition primary circuit tests	3-40
Ignition switch	3-52
Ignition switch test	3-55
Ignition system	3-39
Ignition system	4A-30
Ignition system diagnosis and testing	3-40
Ignition timing marks-six-cylinder	3-44
Ignition timing marks-v-8	3-44
Inflation pressures, tires	B-12
Infrared (IR) analyzer procedure	4A-37
Inspect and correct levels, fluids	B-3
Inspection, clutch	B-9
Instrument cluster	3-45
Instrument panel	18-1
Intake and exhaust manifolds (six-cyl)	1A-10
Intake manifold (V-8)	1B-10
Intake manifold torque seq (six-cyl)	1A-11
Interior trim care	B-10
Intermediate steering shaft	11-2

K

Key coding template	A-4
Keys and locks	A-4

L

Leaf spring application chart	12-6
License plate light	3-60
Lighting system	3-55
Linkage, steering	11-25
Liquid check valve	4A-17
Lockout device, Quadra-Trac	8-10
Locks and keys	A-4
Lower ball joint	10-6
Lube change-all models	B-6
Lubrication chart, body	B-3
Lubrication chart, chassis	B-3
Lubrication double cardan joint	B-6
Lubrication single cardan joints	B-6
Lubrication system (six-cyl)	1A-2
Lubrication system, V-8 engine	1B-2
Lubrication, Quadra-Trac	8-11
Lubrication, axle differentials	B-6

ALPHABETICAL INDEX

Lubrication, axle differentials	B-8
Lubrication, axles	10-19
Lubrication, front wheel bearings	B-7
Lubrication, linkage pivot points	B-6
Lubrication, off-highway operation	B-8
Lubrication, prop shafts	B-6
Lubrication, sleeve yokes (splines)	B-6
Lubrication, steering gear (non-power)	B-7
Lubrication, steering linkage	B-7
Luggage rack	16-5

M

Magnetic clutch troubleshooting	13A-17
Magnetic clutch, air conditioner	13A-15
Main bearing chart (V-8)	1B-30
Main bearing fitting chart (six-cyl)	1A-30
Maintenance	B-1
Maintenance inspection chart, brakes	B-3
Maintenance schedule, mechanical	B-2
Maintenance services, nonscheduled	B-8
Maintenance, emission control	4A-29
Maintenance, power steering	11-39
Maintenance, radiator	2-14
Maintenance, tires	B-9
Manual steering gear	11-18
Manual steering gear adjustments	11-24
Manual steering gear specifications	11-53
Manual steering service diagnosis	11-18
Manual trans transfer case maintenance	B-5
Manual transmission service diagnosis	6-1
Manual transmission tools	6-17
Manual transmissions	6-1
Master cylinder	9-15
Master cylinder	9-17
Mechanical maintenance schedule	B-2
Metric measure	A-4
Metric system	A-5
Model YF carburetor calibrations	4-16
Model 20 transfer case	8-1
Model 20 transfer case specifications	8-10
Model 2100 carburetor calibrations	4-29
Model 30 front axle specifications	10-25
Model 4300 carburetor calibrations	4-43
Model 44 axle specifications	10-25
Model 44F steering knuckle assembly	10-5
Model 60 axle specifications	10-25
ModelT-14A 3-speed trans	6-3
ModelT-15A 3-speed trans	6-3
ModelT-18 4-speed transmission	6-9
Mud and snow tires	B-9

N

Nonscheduled maintenance services	B-8
---	-----

O

Oil change, engine	B-1
Oil cooler	2-16
Oil filter (V-8)	1B-21
Oil filter (six-cyl)	1A-21
Oil filter maintenance	B-4
Oil pan (V-8)	1B-20
Oil pan (six-cyl)	1A-20
Oil pressure relief valve (V-8)	1B-21
Oil pump (V-8)	1B-21
Oil pump (six-cyl)	1A-21
Oil pump, auto trans	7-33
Oil quality, engine	B-1
Oversize or undersize compnts (six-cyl)	1A-2

P

PCV system	4A-18
PCV valve flow chart	4A-20
PCV valve test	4A-19
Paint option number	A-3
Panels	14-7

Panels, door trim	15-1
Panels, rear quarter	14-7
Parking brake adjustment	9-30
Pinion angle specifications	10-4
Pinion marking chart	10-16
Pintle hook	21-3
Piston fitting (V-8)	1B-26
Piston pins (V-8)	1B-27
Piston pins (six-cyl)	1A-27
Piston rings (V-8)	1B-28
Piston rings (six-cyl)	1A-26
Pistons (V-8)	1B-26
Pistons (six-cyl)	1A-26
Pivoting vent window	15-6
Power brake units	9-13
Power brakes, service diagnosis	9-1
Power flex fan	2-3
Power steering	11-29
Power steering gear service	11-39
Power steering gear specifications	11-52
Power steering maintenance	B-4
Power steering maintenance	11-39
Power steering pump	11-48
Power steering pump specifications	11-52
Power steering service diagnosis	11-36
Power train combinations	A-8
Power unit service	9-14
Power unit service diagnosis	9-2
Propeller shafts	10-1
Propeller shafts	10-24
Propeller shafts lubrication	B-6
Pump, fuel	4-3
Pump, power steering	11-48

Q

Quadra-Trac	8-10
Quadra-Trac lockout device	8-10
Quadra-Trac lubrication	8-11
Quadra-Trac reduction unit	8-13
Quadra-Trac specifications	8-28
Quadra-Trac torque specifications	8-28
Quadra-Trac transfer case components	8-19
Quadra-Trac transfer case maintenance	B-5

R

Rack, luggage	16-5
Radiator	2-4
Radiator cap	2-5
Radiator cap test	2-12
Radiator grilles	14-8
Radiator maintenance	2-14
Radio	3-65
Radio antenna	3-73
Radio bulb replacement	3-72
Radio noise diagnosis	3-68
Radio reception characteristics	3-67
Rear axle	10-9
Rear door glass	15-4
Rear door vent assembly	15-5
Rear door window regulator	15-6
Rear main bearing oil seal (V-8)	1B-22
Rear main bearing oil seal (six-cyl)	1A-22
Rear quarter panels	14-7
Rear quarter trim panel	15-6
Rear seat assemblies	19-1
Rear servo, auto trans	7-31
Rear step bumper	21-3
Rear view mirror bracket	17-3
Rear wheel bearing	9-41
Rear window	17-4
Reduction unit components	8-14
Reduction unit shift cable adjustment	8-11
Reduction unit, Quadra-Trac	8-13
Refrigerant safety precautions	13A-5
Refrigeration cycle	13A-4
Rocker arm assembly (V-8)	1B-8
Rocker arms and shaft assembly (six-cyl)	1A-8

S

Scheduled routine maintenance services	B-3
Seat assemblies and adjusters	19-1
Seat assembly, front	19-1
Seat assembly, rear	19-1
Seat belts and shoulder harnesses	19-1
Seats, front bench	19-1
Seats, front bucket	19-1
Selective drive hubs	21-1
Semi-float rear axle	10-12
Serv diagnosis, Adjust-O-Tilt column	11-12
Service diagnosis	8-2
Service diagnosis, V-8 engine	1B-4
Service diagnosis, air cond pressure	13A-3
Service diagnosis, air conditioning	13A-2
Service diagnosis, automatic trans	7-6
Service diagnosis, axles	10-2
Service diagnosis, brakes	9-1
Service diagnosis, clutch	5-1
Service diagnosis, cooling system	2-7
Service diagnosis, emission control	4A-1
Service diagnosis, heater and defroster	13-4
Service diagnosis, manual steering	11-18
Service diagnosis, manual transmissions	6-1
Service diagnosis, power brakes	9-1
Service diagnosis, power steering	11-36
Service diagnosis, power unit	9-2
Service diagnosis, starter motor	3-34
Service manual improvements	A-4
Servo operation, auto trans	7-4
Shift control housing, 3-speed	6-8
Shift control housing, 4-speed	6-15
Shift control lever lubrication	B-5
Shift linkage lubrication	B-5
Shock absorber application chart	12-6
Shock absorbers	12-3
Short engine assembly (V-8)	1B-32
Short engine assembly (six-cyl)	1A-30
Shoulder harnesses and seat belts	19-1
Six-cylinder engine	1A-1
Six-cylinder engine service diagnosis	1A-4
Six-cylinder engine tools	1A-34
Solenoid control switch	4A-27
Solenoid vacuum valve	4A-27
Spark CTO switch	4A-28
Spark CTO test	4A-29
Spark plug conditions	4A-31
Spark plug wires	4A-30
Spark plugs	4A-30
Special equipment	21-1
Special sales request and order number	A-2
Special tools, general information	A-4
Specifications, Model 20 transfer case	8-10
Specifications, Quadra-Trac	8-28
Specifications, auto trans	7-55
Specifications, axle, Model 44	10-25
Specifications, axle, Model 60	10-25
Specifications, carburetor service	4-44
Specifications, clutch	5-9
Specifications, cooling system	2-18
Specifications, distributor	4A-43
Specifications, electrical	3-75
Specifications, emission control	4A-44
Specifications, eng drive belt tension	11-53
Specifications, engine dr belt tension	2-17
Specifications, frt axle, Model 30	10-25
Specifications, fuel pump	4-6
Specifications, manual steering gear	11-53
Specifications, pinion angle	10-4
Specifications, power steering gear	11-52
Specifications, power steering pump	11-52
Specifications, six-cyl engine	1A-31
Specifications, steering	11-52
Specifications, transmissions	6-16
Specifications, tune-up	4A-43
Specifications, wheel alignment	11-54
Speedometer	3-64
Spindle bearing	10-8

Springs	12-1
Stabilizer bar	12-4
Standard capscrew markings	A-6
Standard torque specifications	A-6
Starter cable test	3-38
Starter motor	3-29
Starter motor diagnosis guide	3-34
Starter motor no-load test	3-31
Starter ring gear assembly (V-8)	1B-31
Starter ring gear assembly (six-cyl)	1A-30
Starter solenoid test	3-38
Starter system	3-29
Stationary window	15-7
Steering	11-1
Steering column service	11-3
Steering column service, CJ	11-2
Steering column, CJ	11-4
Steering columns	11-1
Steering damper	11-26
Steering gear (non-power) lubrication	B-7
Steering gear (non-power) maintenance	B-4
Steering knuckle	10-6
Steering linkage	11-25
Steering linkage lubrication	B-7
Steering specifications	11-52
Steering torque specifications	11-54
Steering wheel	11-1
Steering, manual	11-18
Steering, power	11-29
Stick-slip condition, Quadra-Trac	8-11
Stoplight switch	9-39
Suspension	12-1
Suspension system torque specifications	12-6
Switch, CTO spark	4A-28
Switch, EGR CTO	4A-13
Switch, TVS	4A-24
Switch, dimmer	3-56
Switch, directional signal	3-63
Switch, headlamp	3-56
Switch, heater control	13-5
Switch, ignition	3-52
Switch, solenoid control	4A-27
Switch, stoplight	9-39

T

TAC system	4A-20
TAC test	4A-21
TCS system	4A-27
TCS test	4A-28
TVS test	4A-25
Tailgate	16-1
Tank, fuel	4-2
Tank, fuel	4A-17
Tempatrol fan test	2-10
Temperature gauge	2-5
Temperature gauge and sending unit tests	2-12
Temperature gauge calibration	2-5
Temperature gauge calibration	2-12
Test, PCV valve	4A19
Test, TAC	4A-21
Test, TCS	4A-28
Test, TVS	4A-25
Test, Tempatrol fan	2-10
Test, VAM system	4A-24
Test, alternator brush assembly	3-16
Test, alternator charging	3-14
Test, alternator components	3-15
Test, alternator diode trio	3-15
Test, alternator output	3-14
Test, alternator rectifier diode	3-20
Test, alternator stator in-circuit	3-17
Test, alternator stator load	3-17
Test, alternator stator short	3-17
Test, alternator-regulator bypassed	3-14
Test, alternatorfield draw	3-14
Test, axle	10-3
Test, battery hydrometer	3-6
Test, combustion leakage	2-11

ALPHABETICAL INDEX

Test, cooling system pressure	2-10	Transmission removal	6-1
Test, distributor resistance	4A-35	Transmission specifications	6-16
Test, diverter	4A-10	Transmission, automatic	7-1
Test, electric assist choke	4A-16	Transmission, 4-speed model	6-9
Test, exhaust back-pressure sensor	4A-15	Transmissions, manual	6-1
Test, fuel pump	4-3	Transmissions, 3-speed models	6-3
Test, ignition primary circuit	3-40	Trim option number	A-4
Test, ignition switch	3-55	Trim panel, rear quarter	15-6
Test, ignition system	3-40	Trim, interior, care of	B-10
Test, radiator cap	2-12	Troubleshooting air cond mag clutch	13A-17
Test, spark CTO	4A-29	Troubleshooting air cond system	13A-16
Test, starter cable	3-38	Tune-up, complete precision	B-3
Test, starter motor current draw	3-30	Tuneup specifications	4A-43
Test, starter motor no-load	3-31	Turning angle adjustment	10-9
Test, starter solenoid	3-38		
Test, temp gauge sending unit	2-12	U	
Test, temperature gauge	2-12	Universal joint service	10-24
Test, thermostat	2-10	Universal joints	10-24
Test, voltage regulator	3-23	Upper ball joint	10-6
Test, voltage regulator	3-27		
Test, water pump	2-10	V	
Test, wheel bearings	10-2	VAM systems	4A-22
Testing, axles	10-2	VAM test	4A-24
Tests, cooling system diagnosis	2-9	VTM system	4A-22
Thermal vacuum switch (TVS)	4A-24	V-8 engine	1B-1
Thermostat rating	2-10	V-8 engine specifications	1B-32
Thermostat test	2-10	V-8 engine tools	1B-38
Thermostat, air conditioning	13A-20	Vacuum throttle modulating system (VTM)	4A-22
Thermostat, cooling system	2-3	Valve guides (V-8)	1B-13
Thermostatic switch modulation chart	4A-16	Valve guides (six-cyl)	1A-13
Throwout release bearing	5-4	Valve seat refacing (V-8)	1B-13
Tie rod, steering	11-26	Valve spring installation (six-cyl)	1A-10
Timing chain (V-8)	1B-17	Valve spring removal (six-cyl)	1A-9
Timing chain (six-cyl)	1A-17	Valve spring tension test (V-8)	1B-10
Timing chain cover (V-8)	1B-16	Valve spring tension test (six-cyl)	1A-10
Timing chain cover (six-cyl)	1A-16	Valve spring (V-8)	1B-9
Tire condition	B-9	Valve spring-stem oil seal (six-cyl)	1A-9
Tire inflation pressure chart	9-44	Valve stem oil seal (V-8)	1B-9
Tire inflation pressures	B-12	Valve stem-to-guide clearance (V-8)	1B-13
Tire service	9-42	Variable ratio power steering	11-34
Tires, maintenance	B-9	Vehicle identification	A-1
Tires, mud and snow	B-9	Vehicle identification nos (VIN)	A-3
Toe-in, front wheel	11-27	Vehicle identification plate	A-3
Tools, (V-8)	1B-38	Vent assembly, front door	15-4
Tools, Quadra-Trac	8-28	Vent assembly, rear door	15-5
Tools, automatic transmission	7-56	Vent window glass	15-6
Tools, axle and prop shaft	10-26	Vent window, pivoting	15-6
Tools, brakes and wheels	9-45	Vibration damper (V-8)	1B-15
Tools, carburetor	4-45	Vibration damper (six-cyl)	1A-15
Tools, clutch	5-10	Vibration diagnosis, brake systems	9-1
Tools, electrical	3-77	Vibrations, axle drive line	10-3
Tools, manual transmissions	6-17	Viscosity, oil engine	B-2
Tools, six-cyl engine	1A-34	Voltage regulator	3-22
Tools, transfer case	8-28	Voltage regulator test	3-23
Torque converter, auto trans	7-47	Voltage regulator test	3-27
Torque specifications (V-8)	1B-36		
Torque specifications, Quadra-Trac	8-28	W	
Torque specifications, auto trans	7-55	Water pump service	2-13
Torque specifications, brakes and wheels	9-43	Water pump test	2-10
Torque specifications, carburetors	4-48	Wheel alignment specifications	11-54
Torque specifications, clutch	5-9	Wheel balancing	9-40
Torque specifications, cooling system	2-18	Wheel bearing service	9-40
Torque specifications, electrical	3-77	Wheel bearings, adjustment	B-7
Torque specifications, exhaust system	4-48	Wheels-tires	9-40
Torque specifications, fuel system	4-48	Window regulator, front door	15-4
Torque specifications, six-cyl engine	1A-32	Window regulator, rear door	15-6
Torque specifications, standard	A-6	Window, electric tailgate	16-4
Torque specifications, steering	11-54	Window, stationary	15-7
Torque specifications, suspension system	12-6	Windshield	17-1
Torque specifications, transfer case	8-10	Windshield washer pump	17-9
Towing instruction, auto trans	7-1	Windshield wiper	17-4
Towing instructions, manual trans	6-3	Wiper and washer controls	17-4
Trac-Lok chatter	10-3	Wiper arm replacement	17-6
Trac-lok differential	10-18	Wiper blades	17-5
Trailer towing packages	3-74	Wiper motor two-speed	17-6
Transfer case	8-1	Wiper, windshield	17-4
Transfer case shift linkage (model 20)	8-9		
Transfer case, Model 20	8-1		
Transmission clutch shaft	5-5		
Transmission installation	6-2		