

# GENERAL SERVICE AND DIAGNOSIS

# 1A

## SECTION INDEX

	Page
General Information	1A-1
Engine Diagnosis	1A-3

Page	
Engine Tune-Up	1A-15

## GENERAL INFORMATION

	Page
Emission Components	1A-1

Page	
General	1A-1

### GENERAL

This chapter contains **general** information that applies to all Jeep engines: 151 CID four-cylinder, 258 CID six-cylinder, 304 CID eight-cylinder, and 360 CID eight-cylinder engines. Refer to Chapter 1B—Engines for specific procedures involving engine replacement, engine disassembly, internal component repair and replacement and mechanical specifications.

The Engine Diagnosis section of this chapter presents information and procedures useful for locating problems not normally encountered during routine maintenance and tune-ups.

The Engine Tune-Up section of this chapter presents a systematic approach to the performance of a complete,

precision tune-up required at the interval specified in the Engine Maintenance Schedule.

### EMISSION COMPONENTS

It is frequently helpful to know at a glance the emission control-related components that are installed on a particular vehicle. This information is contained in three emission component charts. Vehicles designated 49-state are certified for sale in all states (and Canada) except California. Vehicles designated California are the only vehicles certified for sale in the state of California. Hilly terrain components are applicable to vehicles that are normally driven in areas where the driveability is affected by the environmental conditions (e.g., altitude).

Emission Components—Hilly Terrain Light Duty Vehicles

Engine and Carb.	Vehicle and Series	Cooling System Type	Transmission	Air Injection	Air Switch Valve	Diverter Valve	Catalytic Converter	Pre-Cat Converter	EGR	EGR DELAY VALVE (F)	EGR TVS	EGR CTO Valve Temp.	TAC Type	TAC TVS	TAC Delay Valve (R) and Check Valve	Spark CTO Valve Temp.	Non-Linear Valve	HD Spark CTO Valve Temp.	Spark Delay Valve	Carb. Vent to Canister	Electric Choke	Sol-Vac Idle Control	Throttle Solenoid	Decel Valve	Microprocessor	Vacuum Switch Assembly	Trap Door (Air Cleaner)	PCV
304 CID 2V	CJ-5 (85) (87)	STD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	√	•	•	155°F (68°C)	—	—	R •	•	•	—	—	—	—	•	•	
		HD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	√	•	•	155°F (68°C)	—	220°F (101°C)	R •	•	•	—	—	—	—	•	•	

1A-2 GENERAL SERVICE AND DIAGNOSIS

Emission Components—49-State Light Duty Vehicles

Engine and Carb.	Vehicle and Series	Cooling System Type	Transmission	Air Injection	Air Switch Valve	Diverter Valve	Catalytic Converter	Pre-Cat Converter	EGR	EGR Delay Valve (F)	EGR TVS	EGR CTO Valve Temp.	TAC Type	TAC TVS	TAC Delay Valve (R) and Check Valve	Spark CTO Valve Temp.	Non-Linear Valve	HD Spark CTO Valve Temp.	Spark Delay Valve	Carb. Vent to Canister	Electric Choke	Sol-Vac Idle Control	Throttle Solenoid	Decel Valve	Microprocessor	Vacuum Switch Assembly	Trap Door (Air Cleaner)	PCV
151 CID 2V	CJ-5 (85) 7 (87) 8 (88)	STD	M4	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	—	DR	•	•	—	•	—	—	—	•	
		HD	M4	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	220°F (101°C)	DR	•	•	—	•	—	—	—	•	
		STD	A	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	—	DR	•	•	—	•	—	—	—	•	
		HD	A	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	220°F (101°C)	DR	•	•	•	—	•	—	—	—	•
258 CID 2V	CJ-5 (85) 7 (87) 8 (88)	STD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	—	R	•	•	•	—	•	—	—	•	
		HD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	220°F (101°C)	R	•	•	•	—	•	—	—	•	
		STD	A	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	—	—	•	•	•	—	•	—	—	•	
		HD	A	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	220°F (101°C)	—	•	•	•	—	•	—	—	•	
	Cherokee 16, 17, 18 Wagoneer 15 J-10 Truck 25, 26	STD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	—	—	•	•	•	—	•	—	—	—	•
		HD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	220°F (101°C)	—	•	•	•	—	•	—	—	•	
		STD	A	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	—	—	•	•	•	—	•	—	—	•	
		HD	A	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	220°F (101°C)	—	•	•	•	—	•	—	—	•	
304 CID 2V	CJ-5 (85) 7 (87)	STD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	—	R	•	•	•	—	•	—	—	•	
		HD	M4	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	220°F (101°C)	R	•	•	•	—	•	—	—	•	
		STD	A	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	—	—	R	•	•	•	—	•	—	•	
		HD	A	•	—	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	220°F (101°C)	R	•	•	•	—	•	—	—	•	
360 CID 2V	Cherokee 16, 17, 18 Wagoneer 15 J-10 Truck 25, 26, 27	STD	M4	•	—	•	•	—	•	• <sup>①</sup>	•	115°F (46°C)	V	•	•	155°F (68°C)	• <sup>①</sup>	—	R <sup>②</sup>	•	•	•	—	•	—	—	•	
		HD	M4	•	—	•	•	—	•	•	• <sup>①</sup>	•	115°F (46°C)	V	•	•	155°F (68°C)	• <sup>①</sup>	220°F (101°C)	R <sup>②</sup>	•	•	•	—	•	—	—	•
		STD	A	•	—	•	•	—	•	•	•	115°F (46°C)	V	•	•	155°F (68°C)	•	—	—	R	•	•	•	—	•	—	•	
		HD	A	•	—	•	•	—	•	•	•	115°F (46°C)	V	•	•	155°F (68°C)	•	220°F (101°C)	R	•	•	•	—	•	—	—	•	

- Trans. — Transmission Type: Manual (M4) or Automatic (A)
- Cat. Conv. — Catalytic Converter
- CTO — Coolant Temperature Override
- EGR — Exhaust Gas Recirculation
- TVS — Thermal Vacuum Switch
- Delay Valve — R = Reverse Delay  
— F = Forward Delay  
— DR = Dual Reverse Delay
- PCV — Positive Crankcase Ventilation
- TAC — Thermostatically Controlled Air Cleaner (vacuum or mechanical)
- — On all models in vehicle specified
- STD — Standard
- HD — Heavy Duty
- VSD — Vacuum Signal Dump
- ① — J-20 Only
- ② — Except J-20

NOTE: All vehicles have Fuel Tank Vapor Control, Vacuum Operated TAC Systems, and PCV Valves. All temperatures are nominal.

Emission Components—California Light Duty Vehicles

Engine and Carb.	Vehicle and Series	Cooling System Type	Transmission	Air Injection	Air Switch Valve	Diverter Valve	Catalytic Converter	Pre-Cat Converter	EGR	EGR — Vacuum Signal Dump Valve (VSD)	EGR TVS	EGR CTO Valve Temp.	TAC Type	TAC TVS	TAC Delay Valve (R) and Check Valve	Spark CTO Valve Temp.	Non-Linear Valve	HD Spark CTO Valve Temp.	Spark Delay Valve	Carb. Vent to Canister	Electric Choke	Sol-Vac Idle Control	Throttle Solenoid	Decel Valve	Microprocessor	Vacuum Switch Assembly	Trap Door (Air Cleaner)	PCV
151 CID 2V	CJ-5 (85)	STD	M4	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	—	DR	•	•	—	•	•	•	—	•	
		HD	M4	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	—	DR	•	•	—	•	•	•	—	•	
	CJ-7 (87)	STD	A	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	—	DR	•	•	—	•	•	•	—	•	
		HD	A	—	—	—	•	—	•	—	•	100°F (38°C)	V	•	•	120°F (49°C)	—	—	DR	•	•	—	•	•	•	—	•	
258 CID 2V	CJ-5 (85)	STD	M4	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	—	R	•	•	•	—	•	•	•	•	
		HD	M4	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	220°F (105°C)	R	•	•	•	—	•	•	•	•	
		STD	A	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	—	R	•	•	•	—	•	•	•	•	
		HD	A	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	220°F (105°C)	R	•	•	•	—	•	•	•	•	
	Cherokee 16, 17, 18 Wagoner 15 Truck 25, 26	STD	M4	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	—	R	•	•	•	—	•	•	•	•	
		HD	M4	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	—	220°F (105°C)	R	•	•	•	—	•	•	•	•	
		STD	A	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	—	R	•	•	•	—	•	•	•	•	
		HD	A	•	•	•	•	—	•	—	•	115°F (46°C)	V	•	•	155°F (68°C)	•	220°F (105°C)	R	•	•	•	—	•	•	•	•	

Trans. — Transmission Type: Manual (M4) or Automatic (A) Delay Valve — R = Reverse Delay, F = Forward Delay, DR = Dual Reverse Delay  
 Cat. Conv. — Catalytic Converter PCV — Positive Crankcase Ventilation  
 CTO — Coolant Temperature Override TAC — Thermostatically Controlled Air Cleaner (vacuum or mechanical)  
 EGR — Exhaust Gas Recirculation  
 TVS — Thermal Vacuum Switch

• — On all models in vehicle specified  
 STD — Standard  
 HD — Heavy Duty  
 VSD — Vacuum Signal Dump

NOTE: All vehicles have Fuel Tank Vapor Control, Vacuum Operated TAC Systems and PCV Valves. All temperatures are nominal.

# ENGINE DIAGNOSIS

Blown Cylinder Head Gasket Diagnosis	1A-14	General	1A-3
Cylinder (Combustion Chamber) Leakage Test	1A-14	Intake Manifold Leakage Diagnosis	1A-15
Cylinder Compression Pressure Test	1A-12	Service Diagnosis—Mechanical	1A-4
Diagnosis with Scope Analyser	1A-12	Service Diagnosis—Performance	1A-7

## GENERAL

An engine diagnosis is helpful for identifying the causes of malfunctions not remedied by routine maintenance and tune-ups. These malfunctions are classified as either **mechanical** (e.g. a strange noise), or **performance** (e.g. engine idles rough and stalls). Refer to the Service Diagnosis—Mechanical chart and the Service Diagnosis—Performance chart.

Additional tests and diagnostic procedures may be necessary to pinpoint a particular problem. This information is provided within Diagnosis with Scope Analyser, Cylinder Compression Pressure Test, Cylinder Leakage Test, Blown Cylinder Head Gasket Diagnosis and Intake Manifold Leakage Diagnosis.

## Service Diagnosis—Mechanical

Condition	Possible Cause	Correction
EXTERNAL OIL LEAKS	(1) Fuel pump gasket broken or improperly seated.	(1) Replace gasket.
	(2) Cylinder head cover gasket broken or improperly seated.	(2) Replace gasket; check cylinder head cover gasket flange and cylinder head gasket surface for distortion.
	(3) Oil filter gasket broken or improperly seated.	(3) Replace oil filter.
	(4) Oil pan side gasket broken or improperly seated.	(4) Replace gasket; check oil pan gasket flange for distortion.
	(5) Oil pan front oil seal broken or improperly seated.	(5) Replace seal; check timing case cover and oil pan seal flange for distortion.
	(6) Oil pan rear oil seal broken or improperly seated.	(6) Replace seal; check oil pan rear oil seal flange; check rear main bearing cap for cracks, plugged oil return channels, or distortion in seal groove.
	(7) Timing case cover oil seal broken or improperly seated.	(7) Replace seal.
	(8) Oil pan drain plug loose or has stripped threads.	(8) Repair as necessary and tighten.
	(9) Rear oil gallery plug loose.	(9) Use appropriate sealant on gallery plug and tighten.
	(10) Rear camshaft plug loose or improperly seated.	(10) Seat camshaft plug or replace and seal, as necessary.
EXCESSIVE OIL CONSUMPTION	(1) Oil level too high.	(1) Lower oil level to specifications.
	(2) Oil too thin.	(2) Replace with specified oil.
	(3) Valve stem oil deflectors are damaged, missing, or incorrect type.	(3) Replace valve stem oil deflectors.
	(4) Valve stems or valve guides worn.	(4) Check stem-to-guide clearance and repair as necessary.
	(5) Piston rings broken, missing.	(5) Replace missing or broken rings.
	(6) Incorrect piston ring gap.	(6) Check ring gap, repair as necessary.
	(7) Piston rings sticking or excessively loose in grooves.	(7) Check ring side clearance, repair as necessary.
	(8) Compression rings installed upside down.	(8) Repair as necessary.
	(9) Cylinder walls worn, scored, or glazed.	(9) Repair as necessary.
	(10) Piston ring gaps not properly staggered.	(10) Repair as necessary.
	(11) Excessive main or connecting rod bearing clearance.	(11) Check bearing clearance, repair as necessary.

## Service Diagnosis—Mechanical (Continued)

Condition	Possible Cause	Correction
NO OIL PRESSURE	(1) Low oil level. (2) Oil pressure gauge or sending unit inaccurate. (3) Oil pump malfunction. (4) Oil pressure relief valve sticking. (5) Oil passages on pressure side of pump obstructed. (6) Oil pickup screen or tube obstructed.	(1) Add oil to correct level. (2) Refer to Oil Pressure Gauge in Chapter 1L. (3) Refer to Oil Pump in Chapter 1B (4) Remove and inspect oil pressure relief valve assembly. Refer to Chapter 1B. (5) Inspect oil passages for obstructions. (6) Inspect oil pickup for obstructions.
LOW OIL PRESSURE	(7) Loose oil inlet tube. (1) Low oil level. (2) Oil excessively thin due to dilution, poor quality, or improper grade. (3) Oil pressure relief spring weak or sticking. (4) Oil pickup tube and screen assembly has restriction or air leak. (5) Excessive oil pump clearance. (6) Excessive main, rod, or camshaft bearing clearance.	(7) Replace inlet tube. (1) Add oil to correct level. (2) Drain and refill crankcase with correct grade oil. (3) Remove and inspect oil pressure relief valve assembly. (4) Remove and inspect oil inlet tube and screen assembly. (Fill pickup with lacquer thinner to find leaks.) Replace if defective. (5) Check clearances; refer to Oil Pump in Chapter 1B. (6) Measure bearing clearances, repair as necessary.
HIGH OIL PRESSURE	(1) Improper grade oil. (2) Oil pressure gauge or sending unit inaccurate. (3) Oil pressure relief valve sticking closed. (4) Oil pressure relief valve anti-lock port blocked (eight-cylinder only).	(1) Drain and refill crankcase with correct grade oil. (2) Refer to Oil Pressure Gauge in Chapter 1L. (3) Remove and inspect oil pressure relief valve assembly. (4) Check for obstruction; repair as necessary.
MAIN BEARING NOISE	(1) Insufficient oil supply. (2) Main bearing clearance excessive. (3) Crankshaft end play excessive. (4) Loose flywheel or drive plate. (5) Loose or damaged vibration damper.	(1) Check for low oil level or low oil pressure. (2) Check main bearing clearance, repair as necessary. (3) Check end play, repair as necessary. (4) Tighten flywheel or drive plate bolts. (5) Repair as necessary.

## Service Diagnosis—Mechanical (Continued)

Condition	Possible Cause	Correction
CONNECTING ROD BEARING NOISE	<ul style="list-style-type: none"> <li>(1) Insufficient oil supply.</li> <li>(2) Bearing clearance excessive or bearing missing.</li> <li>(3) Crankshaft connecting rod journal out-of-round.</li> <li>(4) Misaligned connecting rod or cap.</li> <li>(5) Connecting rod bolts tightened improperly.</li> </ul>	<ul style="list-style-type: none"> <li>(1) Check for low oil level or low oil pressure.</li> <li>(2) Check clearance, repair as necessary.</li> <li>(3) Check journal measurements, repair or replace as necessary.</li> <li>(4) Repair as necessary.</li> <li>(5) Tighten bolts to specified torque.</li> </ul>
PISTON NOISE	<ul style="list-style-type: none"> <li>(1) Piston-to-cylinder wall clearance excessive.</li> <li>(2) Cylinder walls excessively tapered or out-of-round.</li> <li>(3) Piston ring broken.</li> <li>(4) Loose or seized piston pin.</li> <li>(5) Connecting rods misaligned.</li> <li>(6) Piston ring side clearance excessively loose or tight.</li> <li>(7) Carbon build-up on piston is excessive.</li> </ul>	<ul style="list-style-type: none"> <li>(1) Check clearance, repair as necessary.</li> <li>(2) Check cylinder wall measurements, rebore cylinder.</li> <li>(3) Replace all rings on that piston.</li> <li>(4) Check piston-to-pin clearance, repair as necessary.</li> <li>(5) Check rod alignment, straighten or replace.</li> <li>(6) Check ring side clearance, repair as necessary.</li> <li>(7) Clean carbon from piston.</li> </ul>
VALVE TRAIN NOISE	<ul style="list-style-type: none"> <li>(1) Insufficient oil supply.</li> <li>(2) Push rods worn or bent.</li> <li>(3) Rocker arms or pivots worn.</li> <li>(4) Dirt or chips in hydraulic tappets.</li> <li>(5) Excessive tappet leak-down.</li> <li>(6) Tappet face worn.</li> <li>(7) Broken or cocked valve springs.</li> <li>(8) Stem-to-guide clearance excessive.</li> <li>(9) Valve bent.</li> <li>(10) Loose rocker arms.</li> <li>(11) Valve seat runout excessive.</li> <li>(12) Missing valve lock.</li> <li>(13) Push rod rubbing or contacting cylinder head.</li> </ul>	<ul style="list-style-type: none"> <li>(1) Check for: <ul style="list-style-type: none"> <li>(a) Low oil level.</li> <li>(b) Low oil pressure.</li> <li>(c) Plugged pushrods.</li> <li>(d) Wrong hydraulic tappets.</li> <li>(e) Plugged oil gallery in block.</li> <li>(f) Excessive tappet to bore clearance</li> </ul> </li> <li>(2) Replace worn or bent push rods.</li> <li>(3) Replace worn rocker arms or pivots.</li> <li>(4) Clean tappets.</li> <li>(5) Replace valve tappet.</li> <li>(6) Replace tappet; check corresponding cam lobe for wear.</li> <li>(7) Properly seat cocked springs; replace broken springs.</li> <li>(8) Check stem-to-guide clearance, ream guide, install oversize valve.</li> <li>(9) Replace valve.</li> <li>(10) Tighten bolts to specified torque.</li> <li>(11) Re grind valve seat/valves.</li> <li>(12) Install valve lock.</li> <li>(13) Remove cylinder head and remove obstruction in head.</li> </ul>

## Service Diagnosis—Performance

Condition	Possible Cause	Correction
HARD STARTING (ENGINE CRANKS NORMALLY)	(1) Binding linkage, choke valve or choke piston.	(1) Repair as necessary.
	(2) Restricted choke vacuum and hot air passages.	(2) Clean passages.
	(3) Improper fuel level.	(3) Adjust float level.
	(4) Dirty, worn or faulty needle valve and seat.	(4) Repair as necessary.
	(5) Float sticking.	(5) Repair as necessary.
	(6) Exhaust manifold heat valve stuck (eight-cylinder engine only).	(6) Lubricate or replace.
	(7) Faulty fuel pump.	(7) Replace fuel pump.
	(8) Incorrect choke cover adjustment.	(8) Adjust choke cover.
	(9) Inadequate unloader adjustment.	(9) Adjust unloader.
	(10) Faulty ignition coil.	(10) Test and replace as necessary.
	(11) Improper spark plug gap.	(11) Adjust gap.
	(12) Incorrect initial timing.	(12) Adjust timing.
	(13) Incorrect valve timing.	(13) Check valve timing; repair as necessary.
ROUGH IDLE OR STALLING	(1) Incorrect curb or fast idle speed.	(1) Adjust curb or fast idle speed.
	(2) Incorrect initial timing.	(2) Adjust timing to specifications.
	(3) Improper idle mixture adjustment.	(3) Adjust idle mixture.
	(4) Damaged tip on idle mixture screw(s).	(4) Replace mixture screw(s).
	(5) Improper fast idle cam adjustment.	(5) Adjust fast idle speed.
	(6) Faulty EGR valve operation.	(6) Test EGR system and replace as necessary.
	(7) Faulty PCV valve air flow.	(7) Test PCV valve and replace as necessary.
	(8) Exhaust manifold heat valve inoperative (eight-cylinder engine only).	(8) Lubricate or replace heat valve as necessary.
	(9) Choke binding.	(9) Locate and eliminate binding condition.
	(10) Improper choke setting.	(10) Adjust choke.
	(11) Faulty TAC unit.	(11) Repair as necessary.

Service Diagnosis—Performance (Continued)

Condition	Possible Cause	Correction
<b>ROUGH IDLE OR STALLING</b> (Continued)	(12) Air leak into manifold vacuum.	(12) Check manifold vacuum and repair as necessary.
	(13) Improper fuel level.	(13) Adjust fuel level.
	(14) Faulty distributor rotor or cap.	(14) Replace rotor or cap.
	(15) Leaking engine valves.	(15) Perform cylinder combustion or compression test, repair as necessary.
	(16) Incorrect ignition wiring.	(16) Check wiring and correct as necessary.
	(17) Faulty coil.	(17) Test coil and replace as necessary.
	(18) Clogged air bleed or idle passages.	(18) Clean passages.
	(19) Restricted air cleaner.	(19) Clean or replace air cleaner.
	<b>FAULTY LOW-SPEED OPERATION</b>	(1) Clogged idle transfer slots.
(2) Restricted idle air bleeds and passages.		(2) Clean air bleeds and passages.
(3) Restricted air cleaner.		(3) Clean or replace air cleaner.
(4) Improper fuel level.		(4) Adjust fuel level.
(5) Faulty spark plugs.		(5) Clean or replace spark plugs.
(6) Dirty, corroded, or loose secondary circuit connections.		(6) Clean or tighten secondary circuit connections.
(7) Faulty coil wire (six- and eight-cylinder engines only).		(7) Replace coil wire.
(8) Faulty distributor cap.		(8) Replace cap.
<b>FAULTY ACCELERATION</b>	(1) Improper pump stroke.	(1) Adjust pump stroke.
	(2) Incorrect ignition timing.	(2) Adjust timing.
	(3) Inoperative pump discharge check ball or needle.	(3) Clean or replace as necessary.
	(4) Faulty elastomer valve. (Eight-cylinder engine only.)	(4) Replace valve.
	(5) Worn or damaged pump diaphragm or piston.	(5) Replace diaphragm or piston.
	(6) Leaking main body cover gasket.	(6) Replace gasket.
	(7) Engine cold and choke too lean.	(7) Adjust choke.
	(8) Improper metering rod adjustment (BBD Model carburetor)	(8) Adjust metering rod.



## Service Diagnosis—Performance (Continued)

Condition	Possible Cause	Correction
<b>FAULTY ACCELERATION</b> (Continued)	(9) Faulty spark plug(s).	(9) Clean or replace spark plug(s).
	(10) Leaking engine valves.	(10) Check cylinder leakdown rate or compression, repair as necessary.
	(11) Faulty coil.	(11) Test coil and replace as necessary.
<b>FAULTY HIGH SPEED OPERATION</b>	(1) Incorrect ignition timing.	(1) Adjust timing.
	(2) Faulty distributor centrifugal advance.	(2) Check centrifugal advance and repair as necessary.
	(3) Faulty distributor vacuum advance.	(3) Check vacuum advance and repair as necessary.
	(4) Low fuel pump volume.	(4) Replace fuel pump.
	(5) Wrong spark plug gap; wrong plug.	(5) Adjust gap; install correct plug.
	(6) Faulty choke operation.	(6) Adjust choke.
	(7) Partially restricted exhaust manifold, exhaust pipe, muffler or tailpipe.	(7) Eliminate restriction.
	(8) Clogged vacuum passages.	(8) Clean passages.
	(9) Improper size or obstructed main jet.	(9) Clean or replace as necessary.
	(10) Restricted air cleaner.	(10) Clean or replace as necessary.
	(11) Faulty distributor rotor or cap.	(11) Replace rotor or cap.
	(12) Faulty coil.	(12) Test coil and replace as necessary.
	(13) Leaking engine valve(s).	(13) <b>Perform cylinder combustion or compression test, repair as necessary.</b>
	(14) Faulty valve spring(s).	(14) Inspect and test valve spring tension and replace as necessary.
	(15) Incorrect valve timing.	(15) Check valve timing and repair as necessary.
	(16) Intake manifold restricted.	(16) Remove restriction or replace manifold.
	(17) Worn distributor shaft.	(17) Replace shaft.

Service Diagnosis—Performance (Continued)

Condition	Possible Cause	Correction
MISFIRE AT ALL SPEEDS	(1) Faulty spark plug(s).	(1) Clean or replace spark plug(s).
	(2) Faulty spark plug wire(s).	(2) Replace as necessary.
	(3) Faulty distributor cap or rotor.	(3) Replace cap or rotor.
	(4) Faulty coil.	(4) Test coil and replace as necessary.
	(5) Trigger wheel too high.	(5) Set to specifications.
	(6) Primary circuit shorted or open intermittently.	(6) Trace primary circuit and repair as necessary.
	(7) Leaking engine valve(s).	(7) Perform cylinder combustion or compression test, repair as necessary.
	(8) Faulty hydraulic tappet(s).	(8) Clean or replace tappet(s).
	(9) Faulty valve spring(s).	(9) Inspect and test valve spring tension, repair as necessary.
	(10) Worn lobes on camshaft.	(10) Replace camshaft.
	(11) Air leak into manifold vacuum.	(11) Check manifold vacuum and repair as necessary.
	(12) Improper carburetor settings.	(12) Adjust carburetor.
	(13) Fuel pump volume or pressure low.	(13) Replace fuel pump.
	(14) Blown cylinder head gasket.	(14) Replace gasket.
	(15) Intake or exhaust manifold passage(s) restricted.	(15) Pass chain through passages.
	(16) Wrong trigger wheel.	(16) Install correct wheel.
POWER NOT UP TO NORMAL	(1) Incorrect ignition timing.	(1) Adjust timing.
	(2) Faulty distributor rotor.	(2) Replace rotor.
	(3) Trigger wheel positioned too high or loose on shaft.	(3) Reposition or replace trigger wheel.
	(4) Incorrect spark plug gap.	(4) Adjust gap.
	(5) Faulty fuel pump.	(5) Replace fuel pump.
	(6) Incorrect valve timing.	(6) Check valve timing and repair as necessary.
	(7) Faulty coil.	(7) Test coil and replace as necessary.
	(8) Faulty ignition.	(8) Test wires and replace as necessary.
	(9) Leaking engine valves.	(9) Perform cylinder combustion or compression test, and repair as necessary.
	(10) Blown cylinder head gasket.	(10) Replace gasket.

## Service Diagnosis—Performance (Continued)

Condition	Possible Cause	Correction
POWER NOT UP TO NORMAL (Continued)	(11) Leaking piston rings.	(11) Check compression and repair as necessary.
	(12) Worn distributor shaft.	(12) Replace shaft.
INTAKE BACKFIRE	(1) Improper ignition timing.	(1) Adjust timing.
	(2) Faulty accelerator pump discharge.	(2) Repair as necessary.
	(3) Improper choke operation.	(3) Repair as necessary.
	(4) Defective EGR CTO valve.	(4) Replace EGR CTO valve.
	(5) Defective TAC unit.	(5) Repair as necessary.
	(6) Lean fuel mixture.	(6) Check float level or manifold vacuum for air leak. Remove sediment from bowl.
EXHAUST BACKFIRE	(1) Air leak into manifold vacuum.	(1) Check manifold vacuum and repair as necessary.
	(2) Faulty diverter valve.	(2) Test diverter valve and replace as necessary.
	(3) Faulty choke operation.	(3) Repair as necessary.
	(4) Exhaust leak.	(4) Locate and eliminate leak.
PING OR SPARK KNOCK	(1) Incorrect ignition timing.	(1) Adjust timing.
	(2) Distributor centrifugal or vacuum advance malfunction.	(2) Check advance and repair as necessary.
	(3) Excessive combustion chamber deposits.	(3) Use combustion chamber cleaner.
	(4) Carburetor set too lean.	(4) Adjust carburetor.
	(5) Air leak into manifold vacuum.	(5) Check manifold vacuum and repair as necessary.
	(6) Excessively high compression.	(6) Check compression and repair as necessary.
	(7) Fuel octane rating excessively low.	(7) Try alternate fuel source.
	(8) Heat riser stuck in heat ON position (eight-cylinder engine only).	(8) Free-up or replace heat riser.
	(9) Sharp edges in combustion chamber.	(9) Grind smooth.
SURGING (CRUISING SPEEDS TO TOP SPEEDS)	(1) Low fuel level.	(1) Adjust fuel level.
	(2) Low fuel pump pressure or volume.	(2) Replace fuel pump.
	(3) Metering rod(s) not adjusted properly ( BBD Model Carburetor).	(3) Adjust metering rod.

Service Diagnosis—Performance (Continued)

Condition	Possible Cause	Correction
SURGING (CRUISING SPEEDS TO TOP SPEEDS) (Continued)	(4) Improper PCV valve air flow.	(4) Test PCV valve and replace as necessary.
	(5) Air leak into manifold vacuum.	(5) Check manifold vacuum and repair as necessary.
	(6) Clogged main jet(s).	(6) Clean main jet(s).
	(7) Undersize main jet(s).	(7) Replace main jet(s).
	(8) Blocked air bleeds.	(8) Clean air bleeds.
	(9) Clogged fuel filter screen.	(9) Replace fuel filter.
	(10) Restricted air cleaner.	(10) Clean or replace air cleaner.

70344F

DIAGNOSIS WITH SCOPE ANALYZER

The scope analyzer is an ignition system tester that provides a quick and accurate means for diagnosis of ignition system performance problems. All phases of the ignition cycle are displayed graphically on an oscilloscope (cathode ray tube) as they occur during engine operation.

The manufacturers of scope analyzer equipment provide descriptions of the test procedures possible with their equipment. This section is not intended to describe all uses of scope analyzer equipment, but to indicate differences in scope pattern between the HEI (High Energy Ignition) and SSI (Solid State Ignition) systems used on Jeep engines (fig. 1A-1).

The upper display illustrates a typical scope pattern for the HEI system from firing line to firing line and areas of the pattern significant for diagnosis. The scope pattern displays the time duration horizontally and voltage amplitude vertically.

Compare the scope pattern of the HEI system with the typical pattern of the SSI system.

The SSI waveform pattern is below the zero voltage line (i.e., negative) during oscillation dampening but otherwise is similar to that of the HEI system in this area.

Other than the differences noted, scope analyzer ignition system diagnosis for HEI and SSI systems is essentially the same.

CYLINDER COMPRESSION PRESSURE TEST

A cylinder compression pressure test is useful for identifying the cylinder(s) with an abnormal compression pressure. With this information available, additional testing/inspection will provide the exact cause of the pressure loss.

(1) Clean spark plug recesses with compressed air.

(2) Remove spark plugs.

(3) Remove coil wire from distributor caps and connect to ground (six- and eight-cylinder engines). Disconnect distributor wire harness connector for four-cylinder engines.

(4) Secure throttle in wide open position.

**NOTE:** Ensure battery and starter motor are in good operating condition before starting test.

(5) Insert compression pressure gauge, engage starter motor and turn engine for three revolutions. Record compression pressure on third revolution.

(6) Test remaining cylinders and record compression pressures.

(7) Refer to Compression Pressure chart.

Compression Pressure

Engine	Pressure—PSI (kPa)	Max. Cyl. Deviation—PSI (kPa)
Four-Cylinder	140 (965)	30 (207)
Six-Cylinder	120-140 (827-965)	30 (207)
Eight-Cylinder	120-140 (827-965)	30 (207)

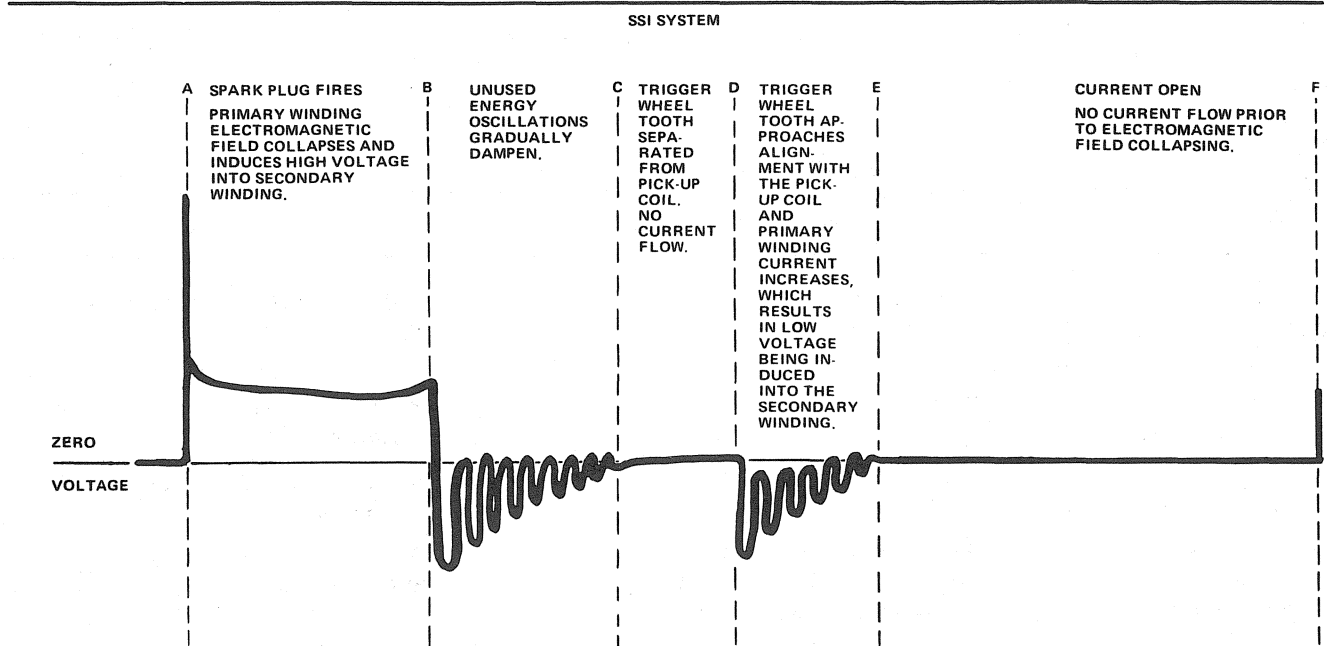
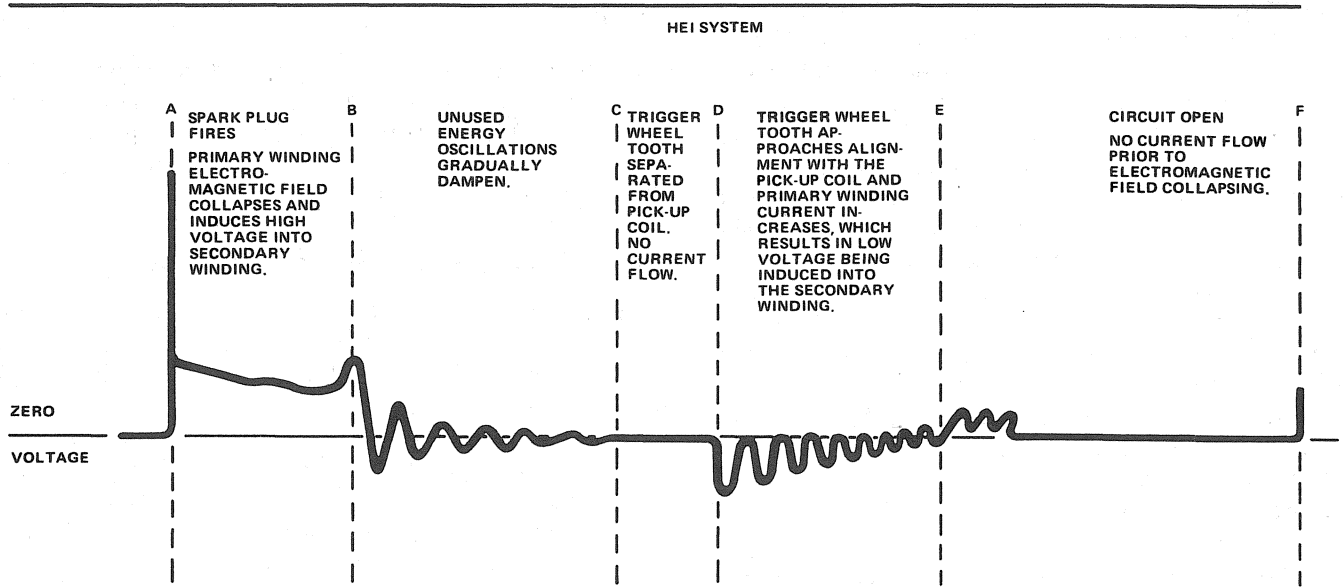


Fig. 1A-1 Scope Diagnosis Patterns

**CYLINDER (COMBUSTION CHAMBER) LEAKAGE TEST**

Satisfactory engine performance depends upon a mechanically sound engine. In many instances, unsatisfactory performance or rough idle is caused by combustion chamber leakage. A cylinder compression pressure test alone may not reveal this fault. The pressure leakage test outlined below provides an accurate means of evaluating engine condition. Pressure leakage testing will indicate if the exhaust or intake valves are improperly seated, if leaks exist between adjacent cylinders, if there are leaks into the water jacket and any other causes of compression pressure loss.

- (1) Inspect coolant level and add as required. Do not install radiator cap.
- (2) Start and operate engine until it attains normal operating temperature, then turn ignition Off.
- (3) Remove spark plugs.
- (4) Remove oil filler cap.
- (5) Remove air cleaner.
- (6) Position carburetor fast idle speed screw on top step of fast idle cam.
- (7) Calibrate test equipment according to manufacturer's instructions.

**NOTE:** Shop air source for testing should maintain 70 psi (483 kPa) minimum and 200 psi (1380 kPa) maximum (80 psi [552 kPa] recommended).

- (8) Perform test procedure on each cylinder according to equipment manufacturer's instructions.

**NOTE:** While testing, listen for air escaping through carburetor, tailpipe and oil filler opening, and look for bubbles in radiator coolant.

- (9) All gauge indications should be equal, with no more than 25 percent leakage. For example, at 80 psi (552 kPa) input pressure, a minimum of 60 psi (414 kPa) should be maintained in cylinder. Refer to Cylinder Leakage Test Diagnosis.

**BLOWN CYLINDER HEAD GASKET DIAGNOSIS**

A blown cylinder head gasket usually results in a loss of power, loss of coolant and engine misfire. A blown cylinder head gasket may develop between adjacent cylinders or between a cylinder and adjacent water jacket.

A cylinder head gasket blown between two adjacent cylinders is usually indicated by a loss of power and engine misfire.

A cylinder head gasket blown between a cylinder and an adjacent water jacket is indicated by foaming of coolant or overheating and loss of coolant.

Replace a blown cylinder head gasket using the procedure outlined in Chapter 1B—Engines.

**Cylinder-to-Cylinder Leakage Test**

To determine if the cylinder head gasket is blown between cylinders, perform a compression pressure test as outlined under Cylinder Compression Pressure Test. A cylinder head gasket blown between two cylinders will result in approximately a 50 to 70 percent reduction in compression pressure in the two affected cylinders.

**Cylinder Leakage Test Diagnosis**

Condition	Possible Cause	Correction
(1) Air escapes through carburetor.	(1) Intake valve leaks.	(1) Refer to Valve Reconditioning (Chapter 1B).
(2) Air escapes through tailpipe.	(2) Exhaust valve leaks.	(2) Refer to Valve Reconditioning (Chapter 1B).
(3) Air escapes through radiator.	(3) Head gasket leaks or crack in cylinder block.	(3) Remove cylinder head and inspect.
(4) More than 25% leakage on adjacent cylinder.	(4) Head gasket leaks or crack in cylinder block or head between adjacent cylinders.	(4) Remove cylinder head and inspect.
(5) More than 25% leakage and air escapes through oil filler cap opening only.	(5) Stuck or broken piston ring(s); cracked piston; worn rings and/or cylinder wall.	(5) Inspect for broken ring(s) or piston. Measure ring gap and cylinder diameter, taper, and out-of-round.

### Cylinder-to-Water Jacket Leakage Test

**WARNING:** Use extreme caution when engine is operating. Do not stand in direct line with fan. Do not put hands near pulleys, belts or fan. Do not wear loose clothing.

(1) Remove radiator cap and start engine. Allow engine to warm up until thermostat opens.

(2) If large compression/combustion pressure leak exists, bubbles will be visible in coolant.

(3) If bubbles are not visible, install radiator pressure tester and pressurize system. If cylinder compression and combustion pressure is leaking into water jacket, pointer will pulsate with every combustion stroke of piston.

### INTAKE MANIFOLD LEAKAGE DIAGNOSIS

An intake manifold air leak is characterized by lower than normal manifold vacuum. One or more cylinders may be "dead."

#### Exterior Leak

Two tests are possible, one with engine oil and one with acetylene.

**WARNING:** Use extreme caution when engine is operating. Do not stand in direct line with fan. Do not put hands near pulleys, belts or fan. Do not wear loose clothing.

(1) Start engine.

(2) Apply oil to gasket edge areas between intake manifold and cylinder head. If oil is forced into manifold, or if smoke is evident in exhaust, manifold has air leak.

(3) Open acetylene valve of oxyacetylene torch. **Do not ignite.** Pass torch tip over gasket edge areas. If engine speed increases, manifold has leak.

### Interior Leak—Eight-Cylinder Engine Only

**WARNING:** Use extreme caution when engine is operating. Do not stand in direct line with fan. Do not put hands near pulleys, belts or fan. Do not wear loose clothing.

(1) Start engine. Remove PCV valve hose from intake manifold.

(2) Plug PCV valve hose fitting in manifold. Allow PCV valve to hang free.

(3) Remove oil filler cap. Cover filler tube with palm of hand. If vacuum is felt, crankcase is exposed to intake manifold or cylinder head vacuum.

(4) Remove intake manifold. Inspect for casting flaws.

(5) Inspect cylinder head for casting flaws. Thoroughly inspect area around intake valves and intake valve ports.

(6) With valve closed, fill port with gasoline and inspect for leaks. Alternate method: wrap shop cloth around air nozzle and apply air pressure to port. Listen for leaks.

## ENGINE TUNE-UP

	Page
Engine Assemblies	1A-16
Exhaust Systems	1A-23
Fuel Systems	1A-20

	Page
General	1A-15
Ignition Systems	1A-16
Specifications	1A-23

### GENERAL

A complete, precision tune-up is required at the interval outlined in the Engine Maintenance Schedule. A tune-up will accomplish several things. First, it will assure that the engine is operating as efficiently and as economically as it was designed to operate. Second, it will assure that the undesirable exhaust and fuel vapor emissions are within the limits defined by Federal regulations.

A complete, precision tune-up includes all of the tasks listed in the Engine Maintenance Schedule. Some tasks involve highly-precision emission control devices. These devices are explained within the applicable systems in their respective chapters of this manual. They are included in this chapter for reference only.

For convenience, when performing a precision tune-up, the necessary services are grouped together by systems.

## ENGINE ASSEMBLIES

### Oil Filler Cap

On eight-cylinder engines, a polyurethane foam filter in the oil filler cap filters air coming into the PCV system. To clean the filter, apply light air pressure in the direction opposite normal air flow (through the filler tube opening). If the filter is deteriorated, replace the filler cap.

### Drive Belts

Inspect belts for defects such as fraying or cracking. Test belt tension. Belt adjustment, arrangement and tension specifications are described in Chapter 1C—Cooling Systems.

### Vacuum Fittings and Hoses

Inspect vacuum fittings for looseness and corrosion. Inspect rubber hoses for brittleness and cracking. Thoroughly inspect the hose ends that are slipped onto nipples. Engine performance may be adversely affected by air leaks in such unlikely places as the heater and air conditioner control hoses, Cruise Command hoses or the power brake booster hose.

## IGNITION SYSTEMS


### Spark Plugs

Remove and examine spark plugs for burned electrodes and fouled, cracked or broken porcelain insulators. Keep plugs arranged in the order removed from the engine. An isolated plug displaying an abnormal condition indicates that a problem exists in the cylinder from where it was removed. Replace plugs at the mileage interval recommended in the Engine Maintenance Schedule. Plugs that have less engine mileage may be cleaned and reused if not otherwise defective. Refer to Spark Plug Condition. After cleaning, file the center electrode flat with a point file. Adjust the gap clearance 0.033-0.038 inch (0.84-0.97 mm) for six- and eight-cylinder engines, and 0.060 inch (1.52 mm) for four-cylinder engines (fig. 1A-2).

Always use a torque wrench when installing spark plugs. Distortion from overtightening will change the gap clearance of the plug. For four- and six-cylinder engines, tighten plugs with 7 to 15 foot-pounds (9.5 to 23 N•m) torque. For eight-cylinder engines, tighten plugs with 25 to 30 foot-pounds (34 to 41 N•m) torque.

### Spark Plug Condition

Refer to figure 1A-3. Compare the spark plugs with the illustrations and the following descriptions.

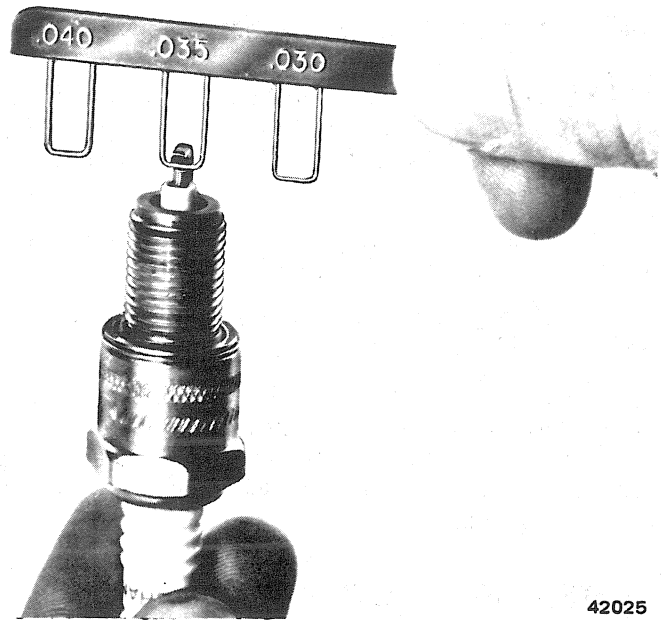

42025

Fig. 1A-2 Spark Plug Gap Adjustment

#### A—Gap Bridging

Gap bridging may be traced to loose deposits in the combustion chamber. These deposits accumulate on the plugs during continuous stop-and-go driving. When the engine is suddenly subjected to a heavy load, the deposits partially liquefy and bridge the gap.

#### B—Scavenger Deposits

Fuel scavenger deposits may be either white or yellow. They may appear to be harmful but this is a normal condition caused by additives in certain fuels. Such additives are designed to change the chemical nature of deposits and lessen misfire tendencies. Notice that accumulation on the ground electrode and shell areas may be heavy, but the deposits are easily removed. Plugs with scavenger deposits can be considered as being in normal condition and can be cleaned using standard procedures.

#### C—Chipped Insulator

Chipped insulators usually result from bending the center electrode while adjusting the plug gap. Under certain conditions, severe detonation can also split insulators.


#### D—Pre-ignition Damage

Pre-ignition damage is caused by excessive combustion chamber temperature. First, the center electrode dissolves and, somewhat later, the ground electrode. Insulators appear relatively deposit free. Determine if plug has correct heat range and if ignition timing is overadvanced or if other similar conditions exist for overheating.

#### E—Cold Fouling (or Carbon Fouling)

Cold fouling is basically a carbon deposit. A dry, black deposit on one or two plugs in a set may be caused by sticking valves or defective spark plug wires. Fouling of the entire set may be caused by a clogged air cleaner, a sticking exhaust manifold heat valve (eight-cylinder engine only) or a faulty choke.



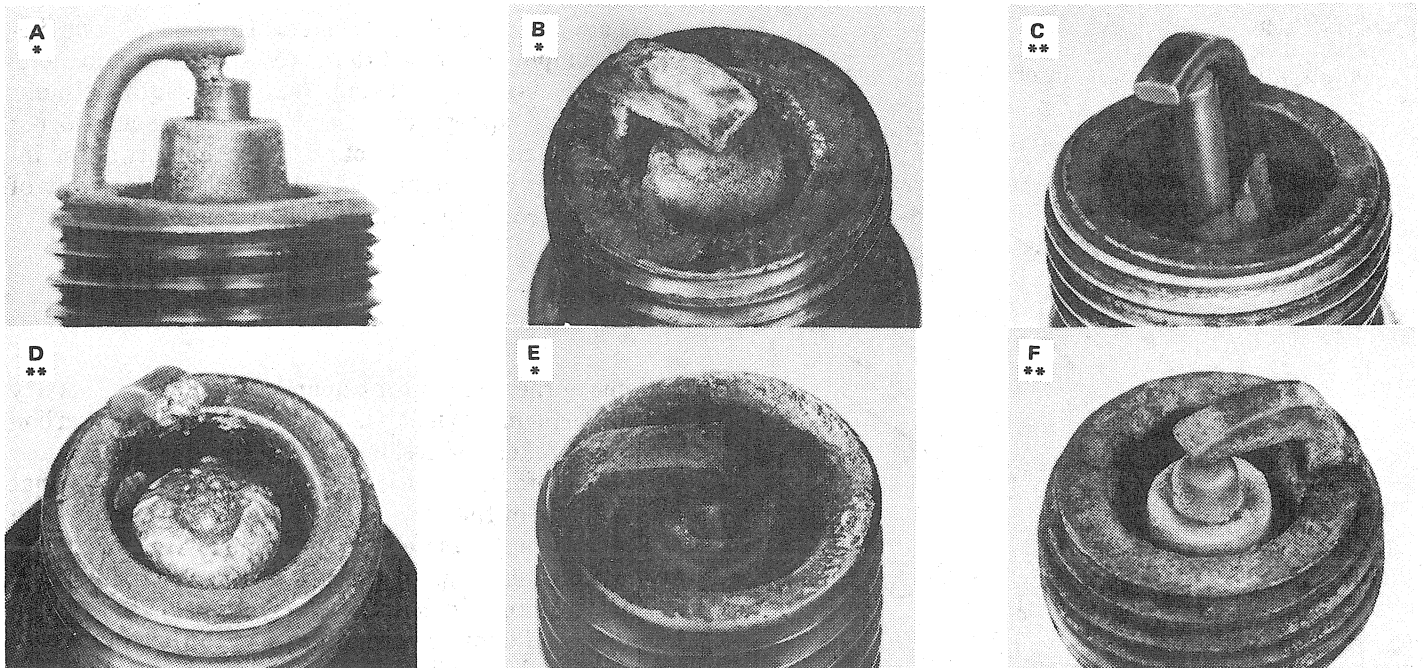

\* LOW MILEAGE PLUGS WITH THIS CONDITION MAY BE CLEANED  
 \*\* PLUGS WITH THIS CONDITION MUST BE REPLACED

Fig. 1A-3 Spark Plug Conditions

**F—Overheating**

Overheating is indicated by a drab white or gray insulator that appears blistered. Electrode gap wear rate will be considerably in excess of 0.001 inch (0.025 mm) per 1000 miles. This may suggest that a cooler heat range plug should be used. Overadvanced ignition timing, detonation and cooling system malfunctions can also cause plug overheating.

**NOTE:** Some fuel refiners are using a manganese additive (MMT) in unleaded fuel. During combustion, MMT fuel covers the entire tip of the spark plug with a rust-colored deposit. This rust color may be misdiagnosed as being caused by coolant in the combustion chamber. Spark plug performance is not affected by MMT deposits.

**Spark Plug Wires**

To remove wires from spark plugs, twist the rubber protector boot approximately 1/2-turn to break the seal. Grasp the boot and pull it from the plug with steady, even force. Do not pull on the wire itself because this will damage the wire.

To remove wires from the distributor cap or coil tower, loosen the boot first, then grasp the upper part of the boot and the wire and gently pull straight up.

**Wire Test**

Do not puncture spark plug wires with a probe to perform any test. This may cause a separation in the conductor. Remove the suspected wire and use an ohmmeter to test for correct resistance according to the length of the particular wire.

**Wire Resistance Values**

Inches	Ohms
0 to 15	3,000 to 10,000
15 to 25	4,000 to 15,000
25 to 35	6,000 to 20,000
Over 35	8,000 to 25,000

60748

When installing spark plug wires and the coil high voltage wire, ensure there is a good, tight connection at the spark plug, distributor cap tower and coil tower (six- and eight-cylinder engines only). The protector boots on the spark plugs and distributor cap must fit tightly. A partially seated wire creates an additional gap (resistance) in the circuit and the resulting arc will cause terminal corrosion, wire damage and decrease the voltage at the spark plugs.

**Ignition Coil**

Always test a suspected defective ignition coil on the engine. Because a coil may break down after the engine has heated it to operating temperature, it is important that the coil be at operating temperature when tests are performed. Perform the tests following the instructions furnished by the test equipment manufacturer.

**Distributor**

The distributor used on all engines is a solid state, electronically controlled type (i.e., no contact points). Other than the cap and rotor inspection listed in the Engine Maintenance Schedule, there is no scheduled maintenance for distributors. Refer to Chapter 1G—Ignition Systems for distributor service procedures.

**Distributor Rotor**

Visually inspect the rotor for cracks, evidence of burning or corrosion on the metal tip, or evidence of mechanical interference with the cap (fig. 1A-4). Some charring

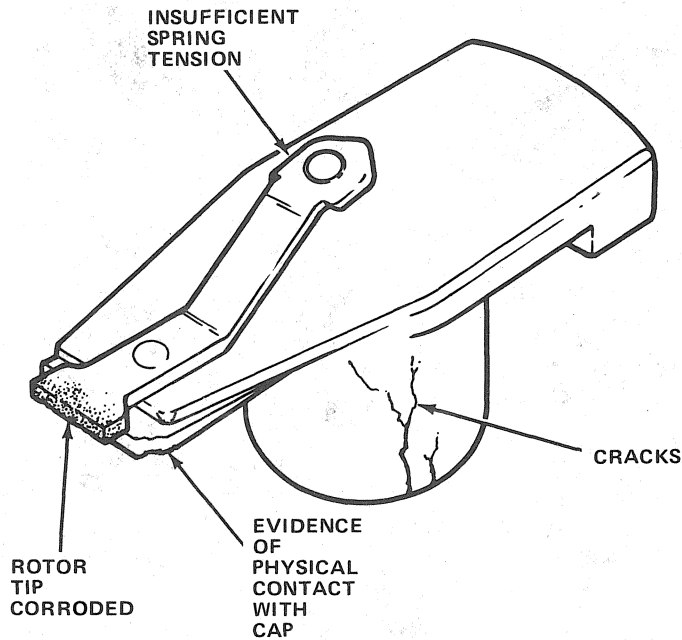


Fig. 1A-4 Rotor Inspection

70202

is normal on the end of the metal tip. The silicone dielectric compound applied to the rotor tip for radio interference noise suppression (six- and eight-cylinder engines) will appear charred. This is normal. Do not remove the charred compound. Test the spring for insufficient tension. Replace a rotor that displays any of the adverse conditions illustrated.

**Distributor Cap**

Remove the distributor cap and wipe clean with a dry cloth. Perform a visual inspection for cracks, carbon runners, broken towers, burned or eroded terminals and damaged rotor button (fig. 1A-5). Replace a cap that displays any of the adverse conditions illustrated. When replacing a cap, transfer one spark plug wire at a time to the replacement cap. If necessary, refer to Distributor Wiring Sequence in Specifications. Ensure each wire is installed in the tower corresponding to its original tower position. Push the wires firmly into place.

Replace the cap if the terminals inside the cap are excessively burned. The vertical face of a terminal will indicate some evidence of burning through normal operation. Examine the terminals for evidence of mechanical interference with the rotor tip.




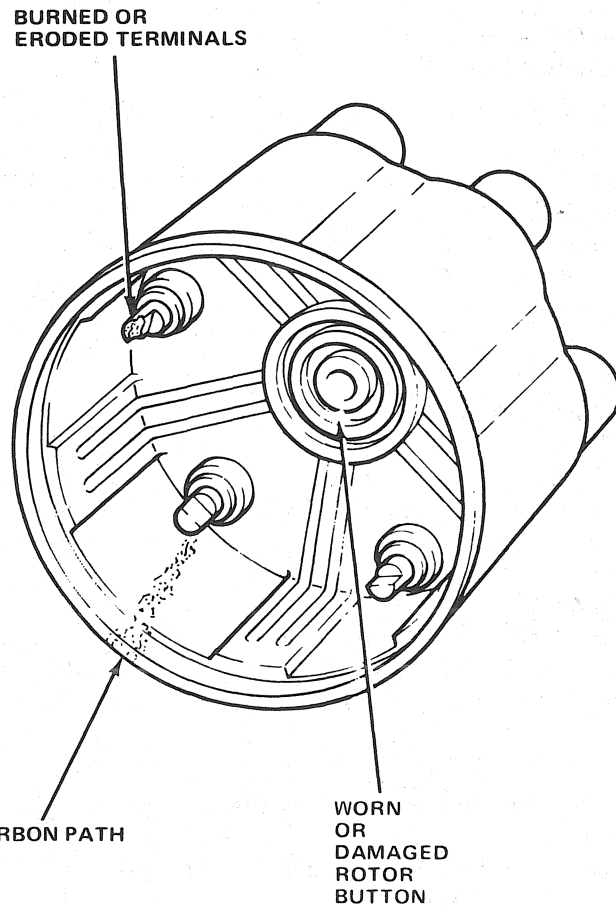


Fig. 1A-5 Distributor Cap Inspection—Typical

70203

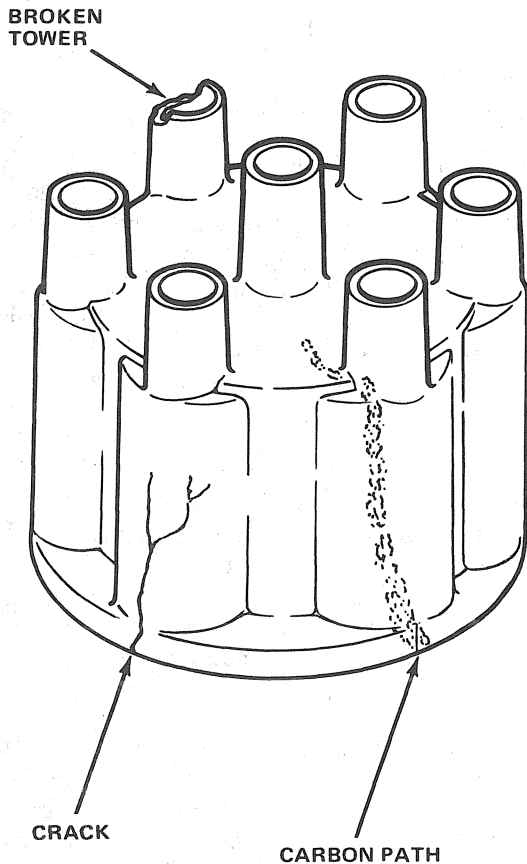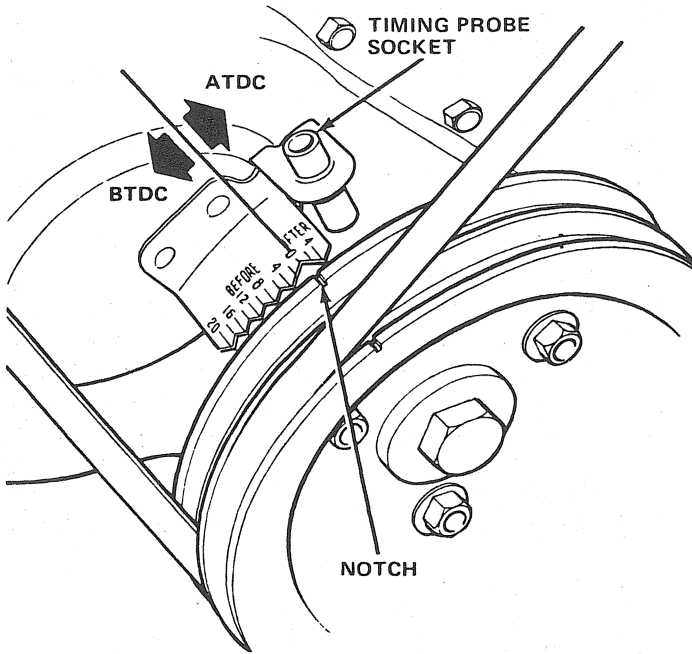

70714

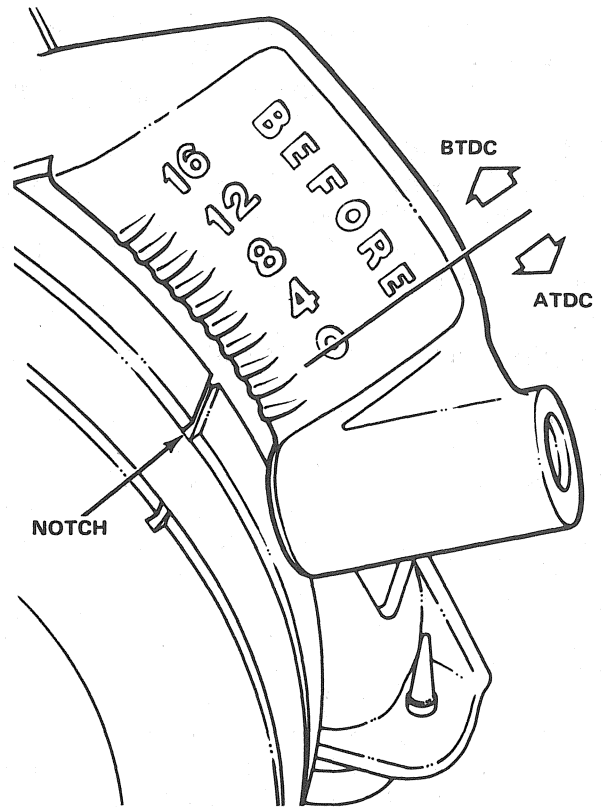

80001

Fig. 1A-6 Timing Degree Scale Location—Four- and Six-Cylinder Engines

### Ignition Timing

A graduated timing degree scale located on the timing case cover is used for timing each ignition system. A notch milled into the vibration damper is used to reference the No. 1 cylinder crankshaft firing position with the correct timing mark on the scale (figs. 1A-6 and 1A-7).

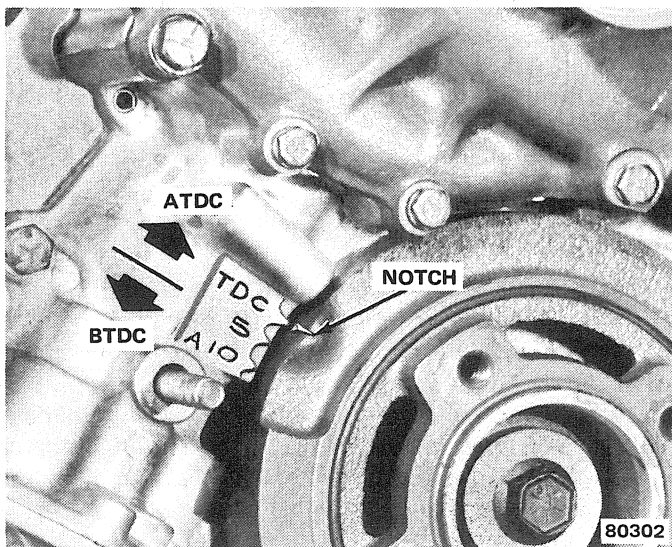


Fig. 1A-7 Timing Degree Scale Location—Eight-Cylinder Engine

### Magnetic Timing Probe

A socket integral with the timing degree scale on the timing case cover is provided for use with a special magnetic timing probe that detects the milled notch in the vibration damper. The probe is inserted through the socket until it touches the vibration damper and is automatically spaced away from the damper by damper eccentricity. Ignition timing is indicated on a meter or computer printout, depending on the manufacturer's equipment.

The socket is located at 9.5° ATDC, and the equipment is calibrated to compensate for the degree difference. **Do not use the socket location when timing an ignition system with a conventional timing light.**

### Timing Procedure

- (1) Disconnect and plug distributor vacuum advance hose.
- (2) Connect ignition timing light and properly calibrated tachometer.

**NOTE:** If the timing light has an adjustable advance control feature, turn the control to the OFF position.

**WARNING:** Use extreme caution when engine is operating. Do not stand in direct line with fan. Do not put hands near pulleys, belts or fan. Do not wear loose clothing.

(3) Start engine and allow to warm up to normal operating temperature.

(4) Adjust idle speed to specified curb (slow) idle rpm.

(5) Adjust ignition timing to degrees specified in Tune-Up Specifications—On Vehicle chart by loosening distributor holddown clamp and rotating distributor.

(6) Tighten distributor holddown clamp and verify that ignition timing is correct.

### **Distributor (Ignition) Advance—On Engine**

#### **Adjustable Advance Control Timing Light Procedure**

**WARNING:** Use extreme caution when engine is operating. Do not stand in direct line with fan. Do not put hands near pulleys, belts or fan. Do not wear loose clothing.

(1) Start engine and allow to warm-up to normal operating temperature.

(2) Increase engine speed to 2000 rpm.

(3) Observe timing degree scale and turn advance control on ignition timing light until ignition timing (degrees BTDC) has returned to curb idle setting. Degrees indicated on advance meter should be total degrees advance as specified in Tune-Up Specifications—On Vehicle chart.

(4) If total degrees advance at 2000 rpm is less than specified, disconnect and plug vacuum advance hose at distributor.

(5) Repeat steps (2) and (3) above to determine maximum centrifugal advance degrees at 2000 rpm. Refer to Distributor Curves in Specifications.

If the centrifugal advance degrees are as specified, replace the vacuum advance mechanism.

### **Distributor (Ignition) Advance—On Tester**

Total distributor advance degrees also may be determined with the distributor removed from the engine. Follow the distributor test equipment manufacturer's instructions.

Information provided in the Distributor Curves is for on-engine testing. If the distributor advance mechanisms are tested with a distributor tester, convert the information in the Distributor Curves from engine rpm to distributor rpm and from engine degrees advance to distributor degrees advance. Divide engine rpm by 2 to obtain distributor rpm. Divide engine degrees advance by 2 to obtain distributor degrees advance. For instance, if the Distributor Curve indicates 8 to 12 degrees advance at 2000 rpm, the corresponding on-tester specifications would be 4 to 6 degrees advance at 1000 rpm.

**NOTE:** The vacuum inches of mercury (or kPa) is the same, regardless if test is on-engine or off-engine.

## **FUEL SYSTEMS**

### **General Inspection**

Fuel systems depend on hoses and rigid tubing to route liquid fuel, fuel vapors and vacuum. Fuel vapor and air leaks upset the operation of the engine and may reduce the effectiveness of the emission control devices. Liquid fuel leaks not only waste fuel but also create a fire hazard. Carefully inspect hoses and tubing for cracks, dents, corrosion and abnormal bends. Inspect fittings for corrosion or looseness. Inspect fuel tank for leaks caused by loose mounting straps, broken seams, dents or corrosion. Inspect filler neck grommets and hoses for proper installation.

### **Air Cleaner**

Replace the dry-type air cleaner filter element during each precision tune-up. Under extreme conditions, more frequent replacement is recommended.

### **Fuel Filter**

All Jeep vehicles have two fuel filters. The in-tank filter is designed to be maintenance-free. The in-line filter between the fuel pump and carburetor and in-carburetor filter (four-cylinder engine) require periodic replacement. When installing the replacement filter (six- and eight-cylinder engines), ensure the fuel return nipple is positioned at the top of the filter.

### **Engine Idle Speed Adjustment**

#### **General**

The engine and related systems must be operating properly before performing idle speed adjustments.

The idle mixture should not require adjustment as part of a precision tune-up. The idle mixture adjustment screws are sealed on all carburetors (fig. 1J-8, 1J-9 and 1J-10). The plugs or dowel pins must be removed before the idle mixture can be adjusted. This effectively prevents indiscriminate adjustments. Do not remove the plug(s) or dowel pins and readjust the mixture screw(s) unless involved in a major carburetor overhaul, throttle body replacement or the emission of excessive CO at idle speed has been determined by a competent authority. Refer to Chapter 1J—Fuel Systems.

#### **Idle Speed Control (Six-Cylinder Engines)**

The Sol-Vac throttle positioner is part of the model BBD carburetor assembly. It is activated in two ways: by an electric holding solenoid and by a pneumatic vacuum actuator. The holding solenoid will maintain throttle position, but it does not have the ability to move the throttle to a new position. The vacuum actuator portion of the Sol-Vac, however, is capable of moving the throttle to a new position when manifold vacuum is applied to it.

The Sol-Vac throttle positioner has three positions. One is the off, or deactivated, position (curb idle); the

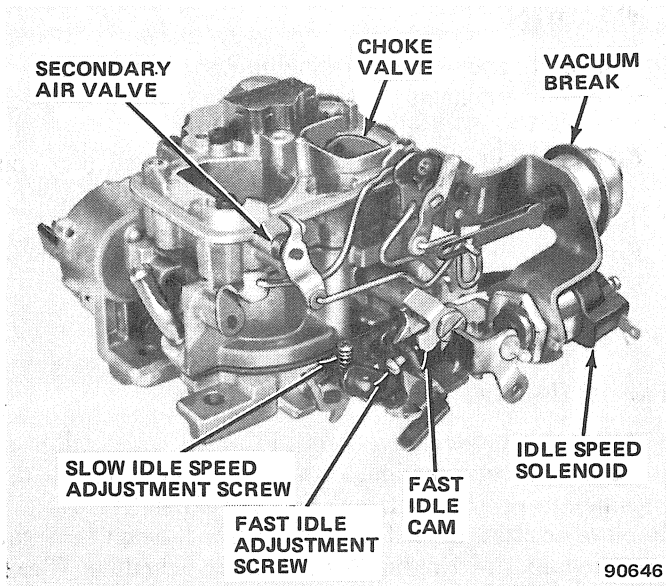


Fig. 1A-8 Rochester Model 2SE and E2SE Carburetors

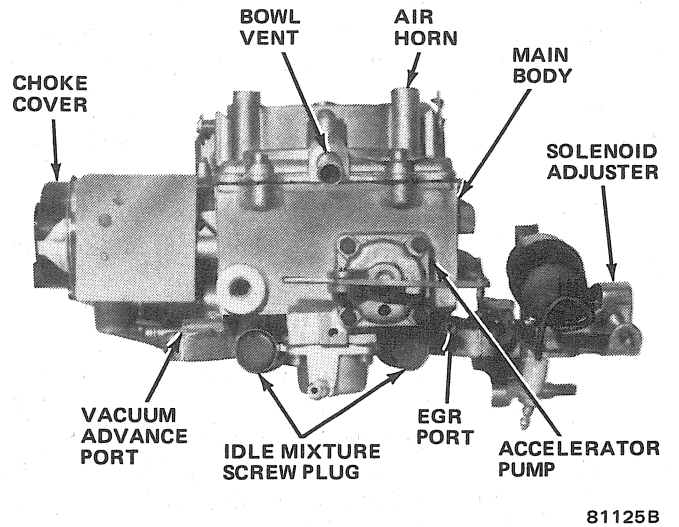


Fig. 1A-10 Motorcraft Model 2150 Carburetor

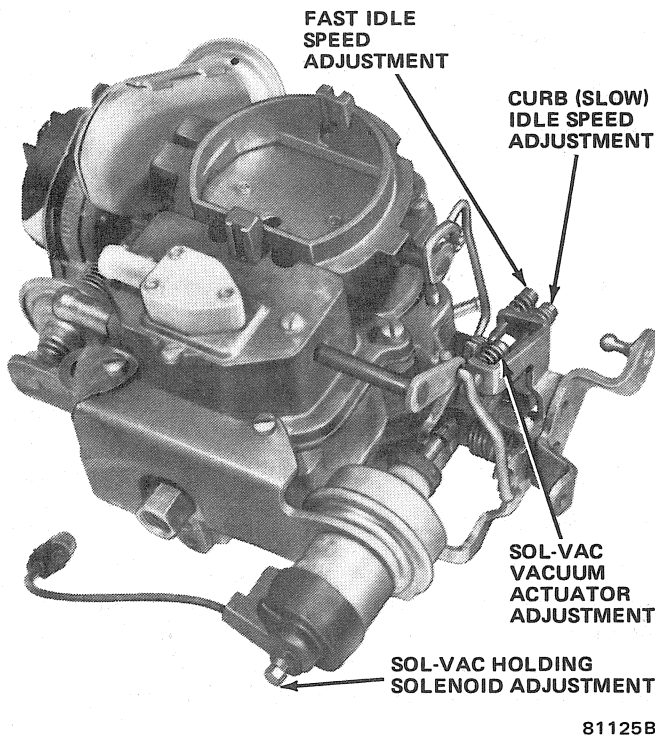


Fig. 1A-9 Carter Model BBD Carburetor

second is the holding solenoid position; and the third is the vacuum actuator position. An electric vacuum switching solenoid allows manifold vacuum stored in a reservoir to reach the vacuum actuator and engage it. The electric vacuum switching solenoid is energized by the idle speed controller.

The idle speed controller energizes the holding solenoid if either the intake manifold heater, air conditioner

or rear window defroster are in use. The vacuum actuator is engaged via the thermal electric switch (TES) if the air cleaner air temperature is below 60°F or 16°C (approximately). When the air cleaner air temperature is above the switching temperature, the idle speed controller energizes the vacuum switching solenoid to engage the vacuum actuator every time the idle speed decreases to the calibrated minimum rpm. When engine rpm increases to the calibrated maximum, the vacuum actuator is disengaged by the idle speed controller and the throttle returns to either the holding solenoid position (if energized) or to the curb idle speed position.

**NOTE:** The calibrated minimum and maximum rpm's for vehicles equipped with automatic transmissions are  $435 \pm 10$  rpm and  $1050 \pm 100$  rpm. For vehicles equipped with manual transmissions, the calibrated minimum and maximum rpm's are  $463 \pm 10$  rpm and  $1175 \pm 150$  rpm.

#### Adjustment Precautions and General Information

- Because vehicles with automatic transmissions are adjusted in Drive, set the parking brake firmly and do not accelerate the engine.
- Bring the engine up to normal operating temperature before adjusting the idle speed.
- Perform the adjustment with the air cleaner installed.
- Do not idle the engine more than three minutes at a time.
- Use extreme caution when engine is operating. Do not stand in direct line with fan. Do not put hands near pulleys, belts or fan. Do not wear loose clothing.

**Idle Speed Adjustment Procedure**

**NOTE:** When adjusting idle speed, put manual transmission in Neutral. Put automatic transmission in Drive.

**WARNING:** Set parking brake firmly. Do not accelerate engine.

(1) Connect tachometer, start engine and warm to normal operating temperature. Choke and intake manifold heater (six-cylinder engine only) must be off.

(2) If not within OK range, turn curb idle adjustment screw to obtain specified curb idle rpm.

(3) For six-cylinder engine (BBD carburetor):

(a) Disconnect vacuum hose from vacuum actuator and holding solenoid wire connector. Adjust curb (slow) idle speed adjustment screw (fig. 1A-9) to obtain specified curb (slow) idle rpm if not within OK range. Refer to Emission Control Information label and Tune-Up Specifications.

(b) Apply direct source of vacuum to vacuum actuator.

(c) Turn vacuum actuator adjustment screw on throttle lever until specified rpm is obtained (900 rpm for manual transmissions, and 800 rpm for automatic transmissions).

(d) Disconnect manifold vacuum source from vacuum actuator.

(e) With jumper wire apply battery voltage (12V) to energize holding solenoid. Turn A/C on, if equipped.

**NOTE:** Throttle must be opened manually to allow Sol-Vac throttle positioner to be extended.

(f) With Sol-Vac throttle positioner extended, idle speed should be  $650 \pm 70$  rpm for automatic transmission equipped vehicles and  $750 \pm 70$  rpm for manual transmission equipped vehicles.

(g) If idle speed is not within tolerance, adjust Sol-Vac (hex-head adjustment screw) to obtain specified rpm.

(h) Remove jumper wire from Sol-Vac holding solenoid wire connector.

(i) Connect Sol-Vac holding solenoid wire connector.

(j) Connect original hose to vacuum actuator.

(4) For four- and eight-cylinder engines (2SE, E2SE or 2150 carburetor, turn nut on solenoid plunger or hex screw on solenoid carriage to obtain specified idle rpm.

(a) Tighten locknut, if equipped.

(b) Disconnect solenoid wire connector and adjust curb idle screw to obtain 500 rpm idle speed.

(c) Connect solenoid wire connector.

(d) If model 2150 carburetor (eight-cylinder engine, is equipped with dashpot. With throttle at curb idle position, fully depress dashpot stem and measure clearance between stem and throttle lever. Clearance should be 0.032 inch (0.813 mm). Adjust by loosening locknut and turning dashpot.

**Choke Linkage**

Inspect all choke linkages, including the fast idle cam, for free movement at the engine mileage interval specified in the Engine Maintenance Schedule.

Clean choke linkage by applying Jeep Carburetor and Combustion Area Cleaner, or equivalent. Never use oil to lubricate choke linkage.

For choke circuit adjustment procedures, refer to Chapter 1J—Fuel Systems.

**PCV Air Inlet Filter****Four- and Six-Cylinder Engines**

A polyester non-woven felt PCV air inlet filter is located in a retainer inside the air cleaner. Rotate the retainer to remove it from the air cleaner (fig. 1A-11). Replace or clean the filter at the engine mileage interval specified in the Engine Maintenance Schedule. Clean with kerosene or detergent and water. Squeeze excess liquid from filter. Do not wring or twist. After cleaning, lightly oil the filter with clean engine lube oil.

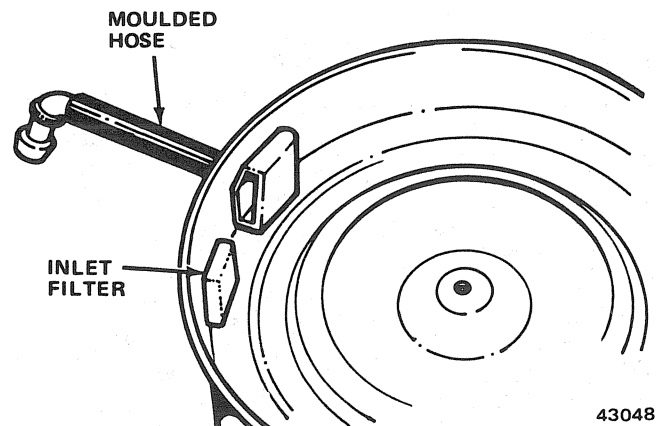


Fig. 1A-11 PCV Air Inlet Filter—Four- and Six-Cylinder Engines

**Eight-Cylinder Engine**

A PCV air inlet filter is located in the sealed oil filler cap. To clean the filter, apply light air pressure in the direction opposite normal air flow (through the filler tube opening in the cap). Do not apply oil to the filter. If the filter is deteriorated, replace the filler cap.

**Fuel Tank Vapor Emission Control System**

The fuel tank, filler cap, fuel lines and vent lines must be maintained in good condition to prevent raw fuel vapor (hydrocarbons) from entering the atmosphere.

Inspect the filler cap for evidence of fuel leakage stains at the filler neck opening. Remove the cap and examine the condition of the sealing gasket. Replace the filler cap if the gasket is damaged or deteriorated.

Inspect the fuel tank for evidence of fuel leakage stains. Trace stain to its origin and repair or replace the tank as required.

Inspect the fuel and vent lines for leakage or damage. Repair or replace as required. Ensure all connections are tight.

If liquid fuel is present in the fuel vapor storage canister, inspect the liquid check valve and replace if necessary.

**Fuel Vapor Storage Canister Filter**

The filter pad located at the bottom of the canister is the only serviceable part of the canister assembly. Replace at the interval specified in the Engine Maintenance Schedule.

**Thermostatically Controlled Air Cleaner (TAC) System**

Inspect the air valve in the air cleaner snorkel for proper operation. If necessary, refer to Chapter 1J—Fuel Systems for functional test procedure.

Inspect hoses for cracks and brittleness. Replace as necessary.

**EXHAUST SYSTEMS**

**Air Injection Systems**

Inspect hoses and hose connections for defects. Replace as necessary. Refer to Chapter 1K—Exhaust Systems for system functional test procedures.

**Exhaust Manifold Heat Valve—Eight-Cylinder Engine**

The exhaust manifold heat valve is an often overlooked, but highly important, emission control related device. This valve can affect the fuel economy, engine performance and driveability, and cause excessive emission of undesirable exhaust gases.

Inspect the valve (located in front exhaust pipe) for correct operation and lubricate with Jeep Heat Valve Lubricant, or equivalent. Refer to Chapter 1K—Exhaust Systems for additional service procedures.

**SPECIFICATIONS**

**Tune-Up Specifications—On-Vehicle**







CID and Venturi	Vehicle	Transmission	Slow Idle RPM		Initial Timing at Curb Idle		Distributor Model Number	Vacuum Mechanism Number	Tot. Degrees Advance at 2000 RPM	Centrifugal Advance	Spark Plug
			Set To	OK Range	Set To	OK Range					
151 2V	CJ	Manual (49-S)	900	800-1000	10°	+1°	1110560	8131940	33°-42°	Refer To Distributor	Type AC R44TSX 0.060 Inch (1.52 mm) Gap
		Automatic (49-S)	700	600-800	12°	+1°	1110561	8132515	30°-38°		
		Manual (Calif.)	900	800-1000	10°	+1°	1110560	8131940	33°-42°		
		Automatic (Calif.)	700	600-800	10°	+1°	1110560	8131940	33°-42°		
304 2V	CJ	Manual (49-S)	600	500-700	8°	+1°	3237198	8131969	34°-43°	Curves	N12Y (Alt. RN12Y) Gap 0.033 (0.84 mm) to 0.038 (0.97 mm)
		Manual (Hilly Terrain)	700	600-800	12°	+1°	3237198	8131969	38°-47°		
		Automatic (49-S)	600	550-650	10°	+1°	3237199	8131970	43°-52°		
360 2V	Cherokee Wagoneer Truck	Manual (49-S)	600	550-650	10°	+1°	3233174	8129470	36°-43°		90206
		Automatic (49-S)	600	550-650	10°	+1°	3233174	8129470	36°-43°		

CID and Venturi	Vehicle	Trans.	Curb Idle Speed - RPM		Sol-Vac Speed RPM	Initial Timing BTDC at Curb Idle Speed With Vacuum Advance Hose Disconnected	Distributor Model Number	Vacuum Advance Mechanism	Total Degrees Advance At 2000 RPM	Centrifugal Advance	Spark Plug Type And Gap
			Set To	Holding Solenoid Energized	Vacuum Actuator Energized	Set To					
258 2V	CJ	Manual (49-S)	650 ±70	750 ±50	900 ±50	8° ±1°	3235141	8131971	35-43	Refer To Distributor Curves	Champion RFN14LY (Alternate FN14LY) 0.035 (0.033 to 0.038) Inch (0.84 to 0.97 mm) Gap
		Manual (Calif.)	650 ±70	750 ±50	900 ±50	4° ±1°	3235141	8131971	33-41		
		Automatic (49-S)	550 ±70	650 ±50	800 ±50	8° ±1°	3235141	8131971	37-45		
		Automatic (Calif.)	550 ±70	650 ±50	800 ±50	6° ±1°	3235141	8131971	35-43		
	Cherokee Wagoneer Truck	Manual (49-S)	650 ±70	750 ±50	900 ±50	8° ±1°	3235141	8131971	35-43		
		Manual (Calif.)	650 ±70	750 ±50	900 ±50	4° ±1°					
		Automatic (49-S)	550 ±70	650 ±50	800 ±50	8° ±1°					
		Automatic (Calif.)	550 ±70	650 ±50	800 ±50	6° ±1°					

NOTE: Automatic Adjusted in Drive; Manual in Neutral Sol-Vac de-energized.







NOTE: Automatic Adjusted in Drive; Manual Adjusted in Neutral. Idle Speed is 500 rpm with solenoid de-energized.

Distributor Curves—On-Vehicle

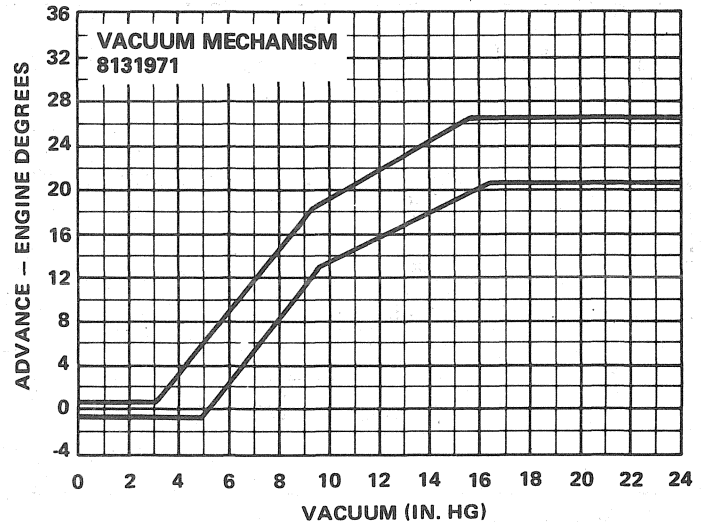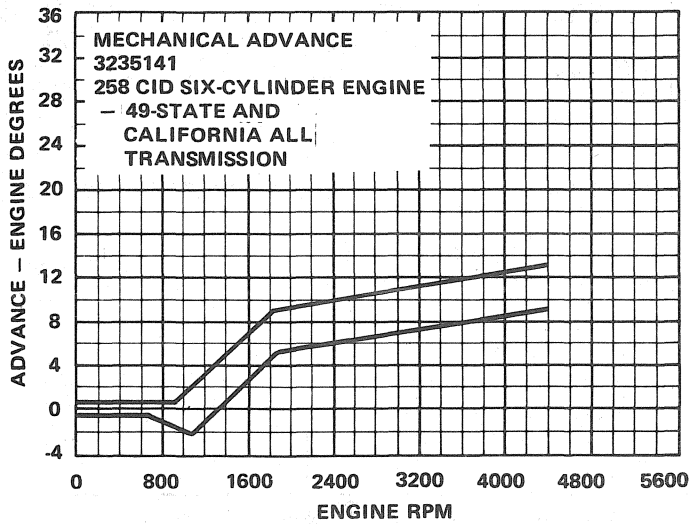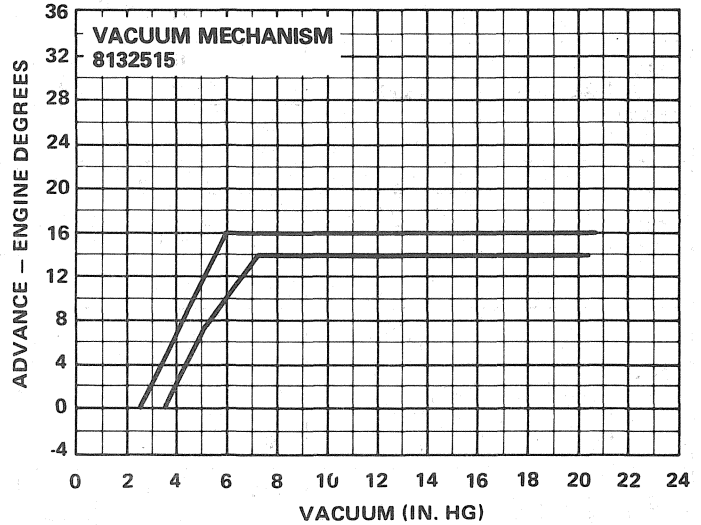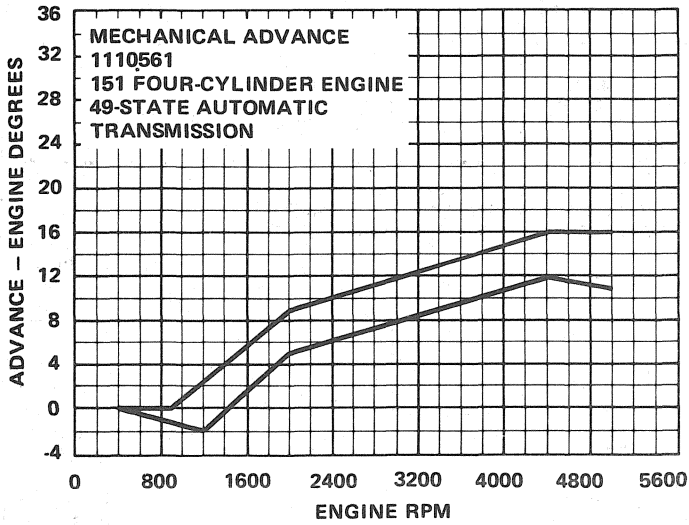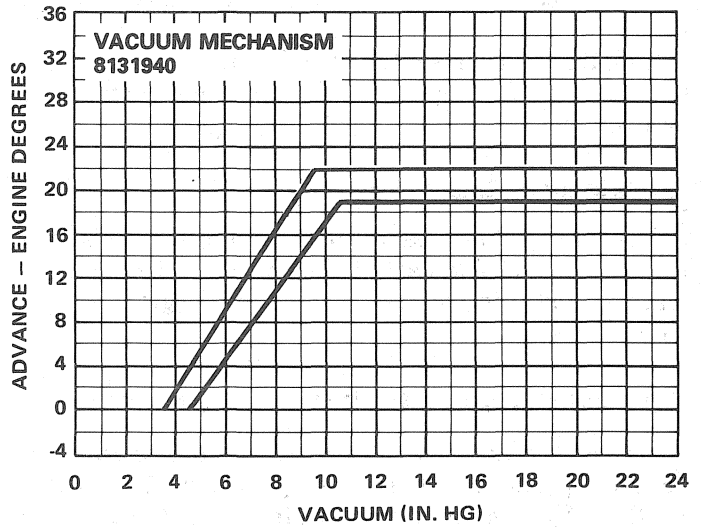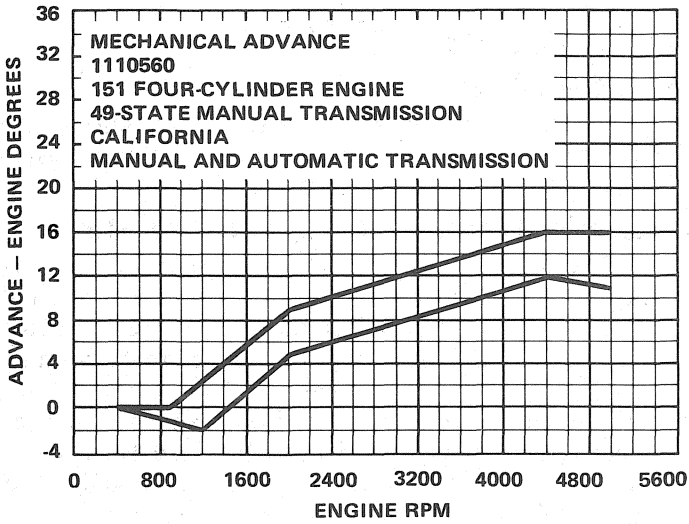




Distributor Curves—On-Vehicle

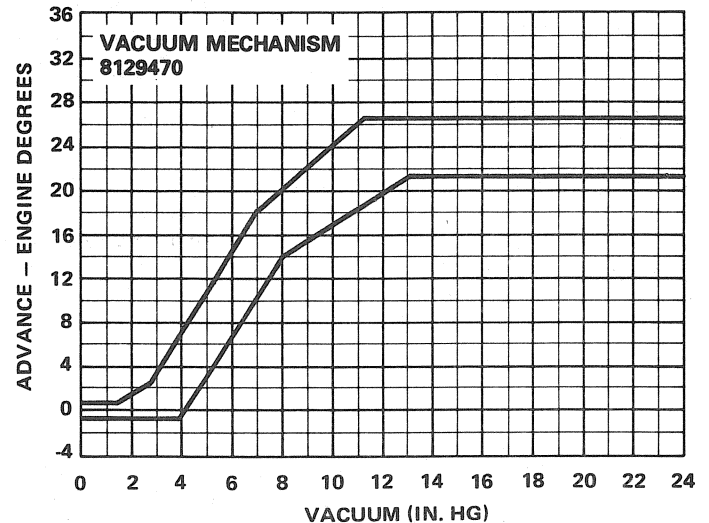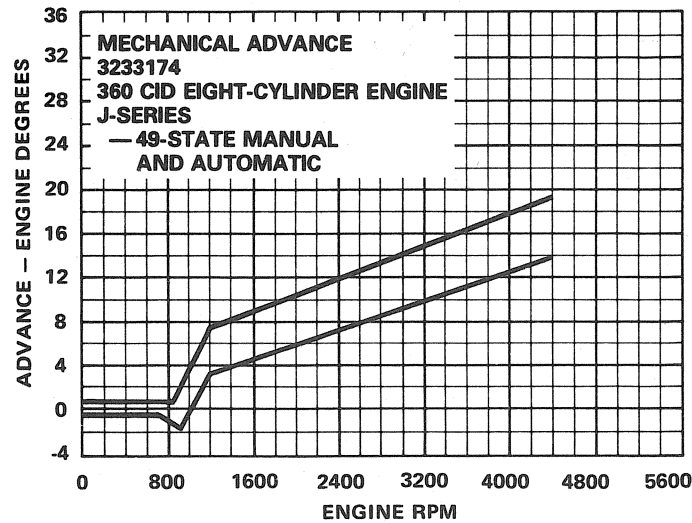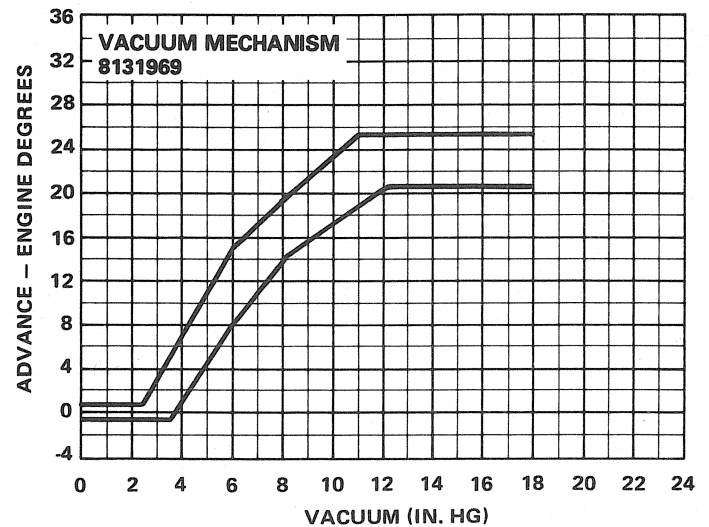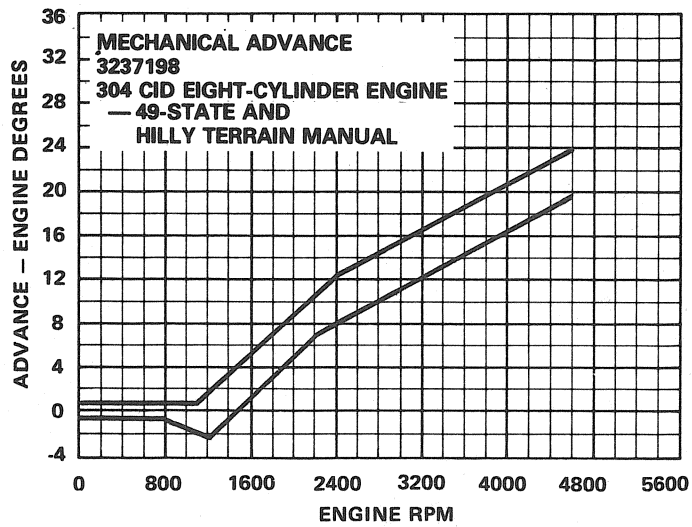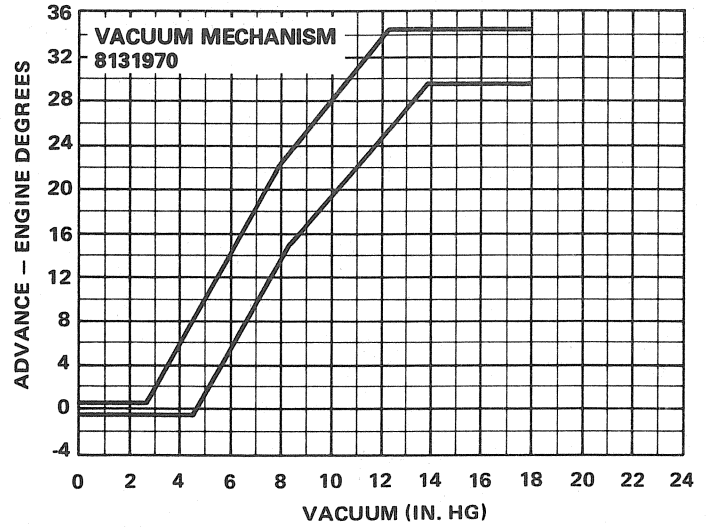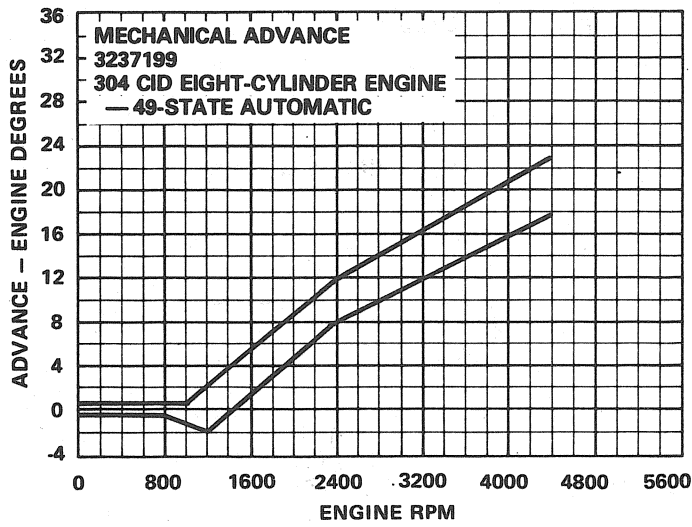


Distributor Wiring Sequence and Engine Firing Order

Four-Cylinder Engine

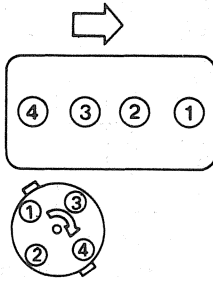


90968

Six-Cylinder Engine

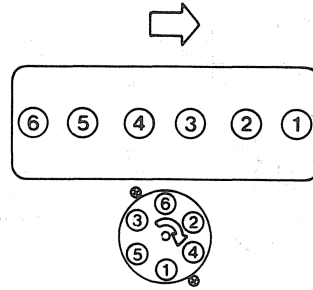


42189


Eight-Cylinder Engine

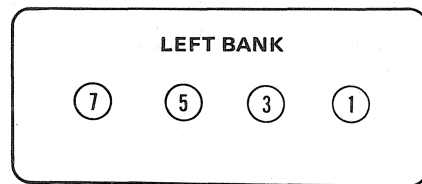

CLOCKWISE ROTATION  
1-8-4-3-6-5-7-2

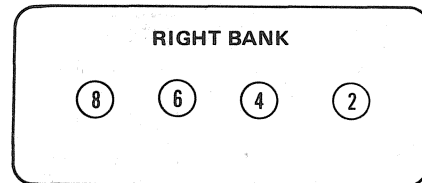

EIGHT CYLINDER ENGINES

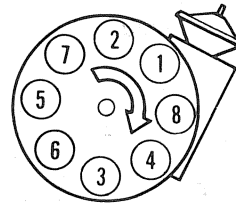

FRONT

42189